



Instruction Book
Mode d'emploi
PURE F9





TW - electrolux.com.tw
 KO - electrolux.co.kr
 JA - electrolux.co.jp
 CN - electrolux.com.cn
 ID - electrolux.co.id
 TH - www.electrolux.co.th
 SG - electrolux.com.sg
 MY - electrolux.com.my
 HK - www.electrolux.com.hk




Availability of Electrolux Webshop and Consumables & Accessories varies by region and country. Please refer to your local Electrolux website for more details or contact local customer service for support.




CONSUMABLES & ACCESSORIES

 PUREF9 Performance Kit
 Ref: ESPK9
 Part nr: 9001690784





 3in1 Nozzle
 Ref: ZE127
 Part nr: 900922924/7



 Home & Car kit
 Ref: KIT18
 Part nr: 900922934/6




 Citrus Burst
 Ref: ESMA
 Part nr: 9001677807

 Evening Rose
 Ref: ESRO
 Part nr: 900167765



 
 
 
 
 
 S-fresh 18 Value pack
 Ref: ESVP1
 Part nr: 9001681221




 Brush roll hard floor
 Ref: ESBH9
 Part nr: 9009229460



 Brush roll all-floors & carpet
 Ref: ESBA9
 Part nr: 9009229478

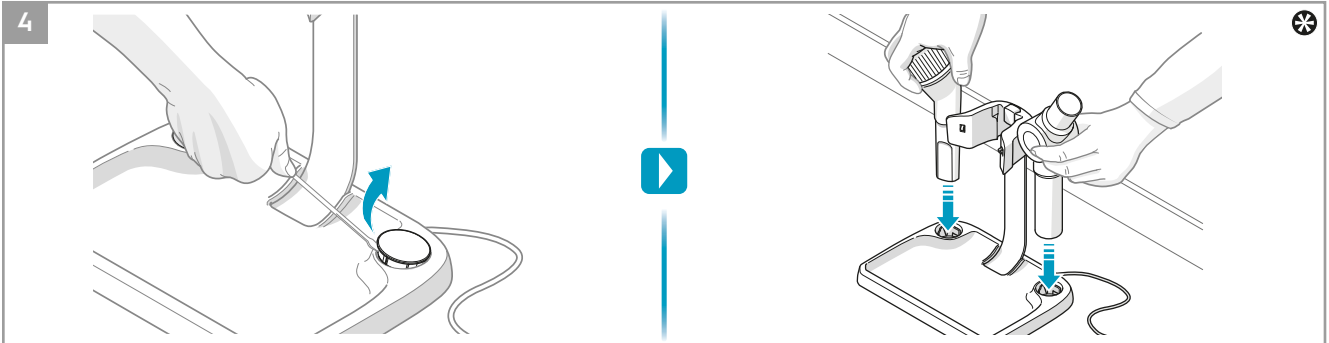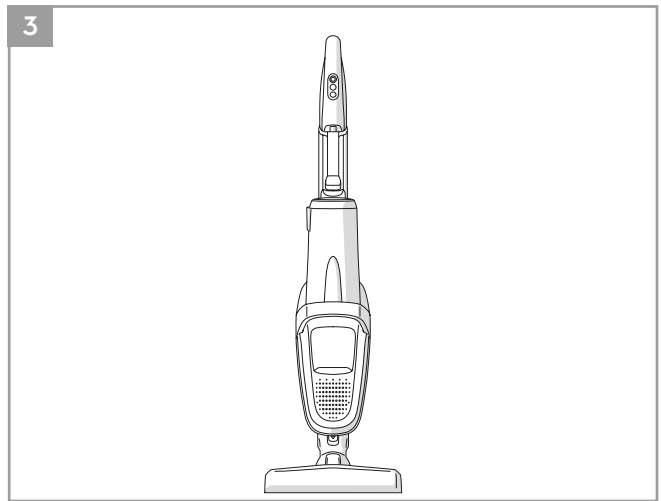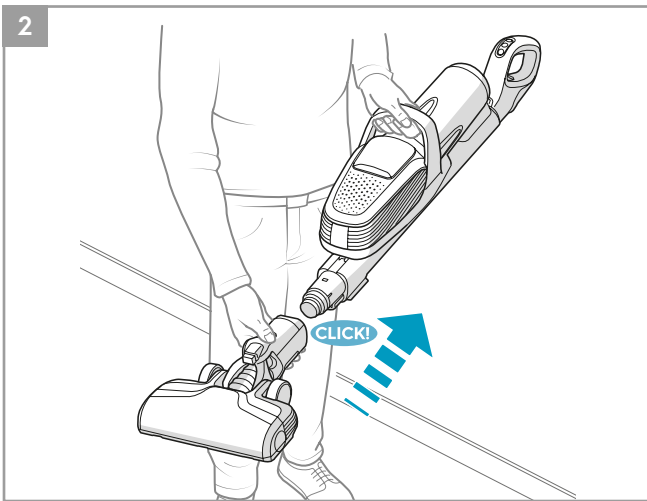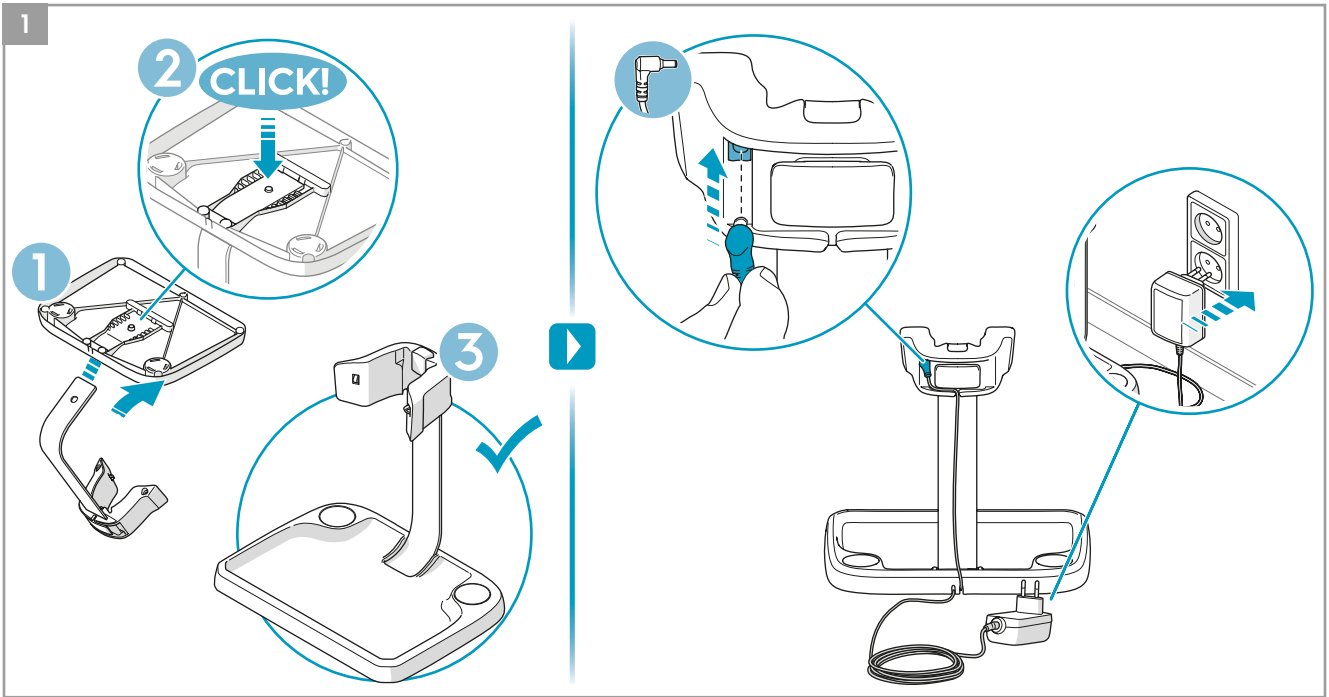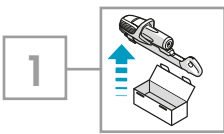





2

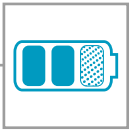 

1

CHARGING

    충전방법
充電方法
การชาร์จแบตเตอรี่
產品充電指南
充电指南

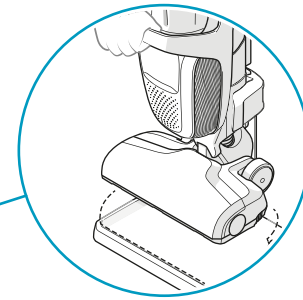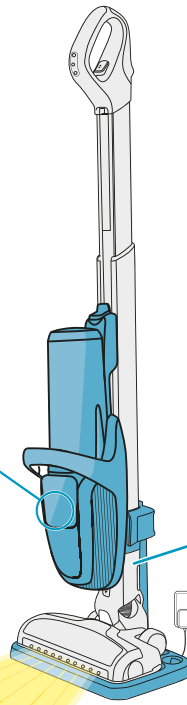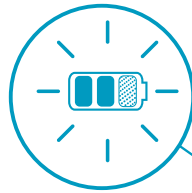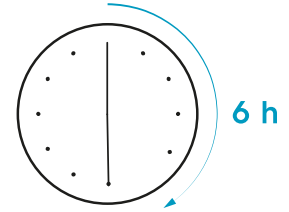




BLINKS X 2

LED 등 2번 깜빡임
正しくセットされると2回点滅
LED กระพริบ 2 ครั้ง
LED燈閃爍兩次
闪烁2次

BLINKS x 2



   
2

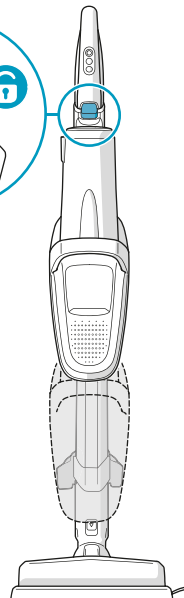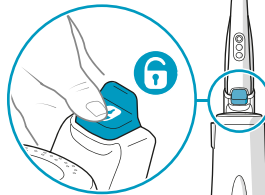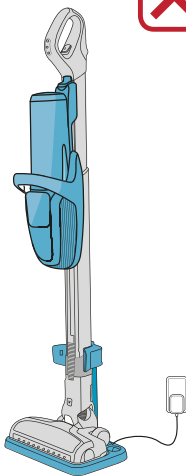

PUSH DOWN
본체를 아래로 내림
本体を下まで下げる
กดเลื่อนลง
向下推至底部
主机推到底部



 CLICK
찰칵소리 확인
คลิกลงล็อก
卡緊聲
卡住



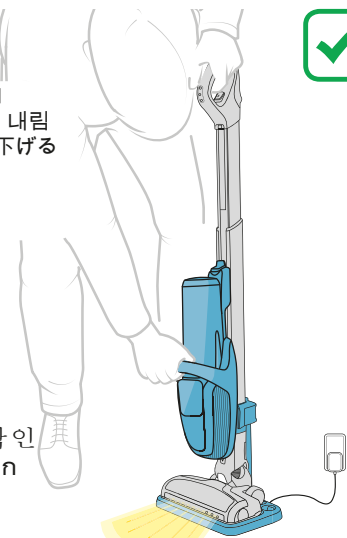


BLINKS x 2



NOT CHARGING

  
 
충전 되지 않음
本体が上部にあると充電されません
ไม่ได้กำลังชาร์จอยู่
未正確充電
未进行充电

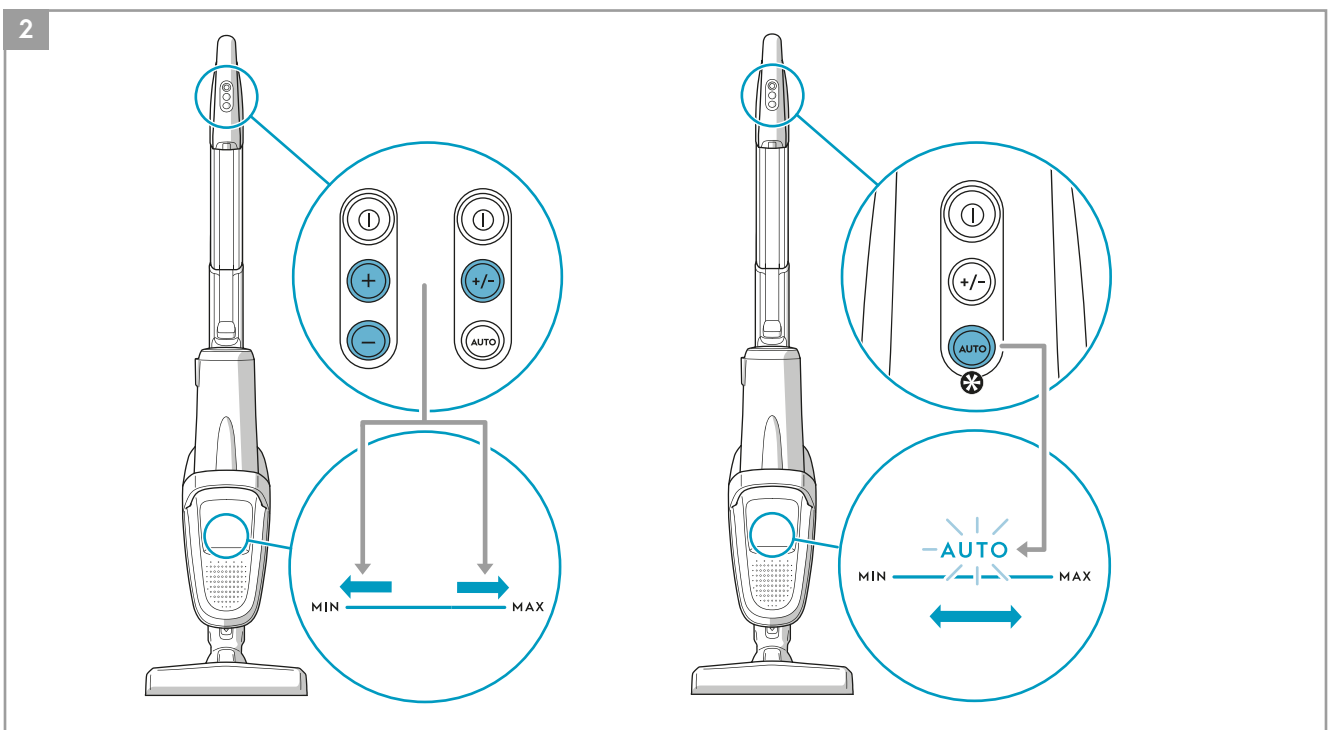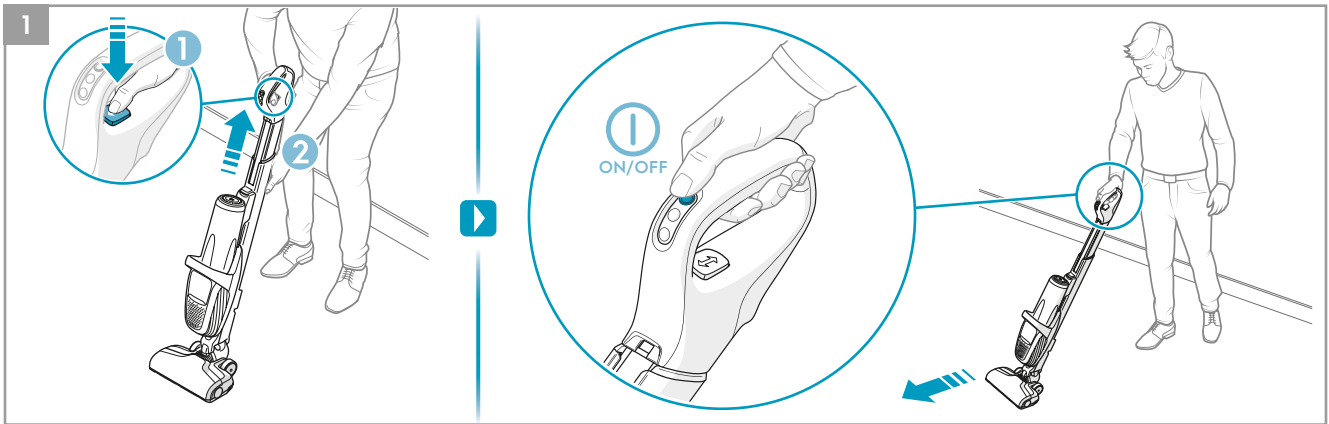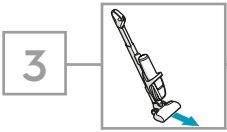


4













  1

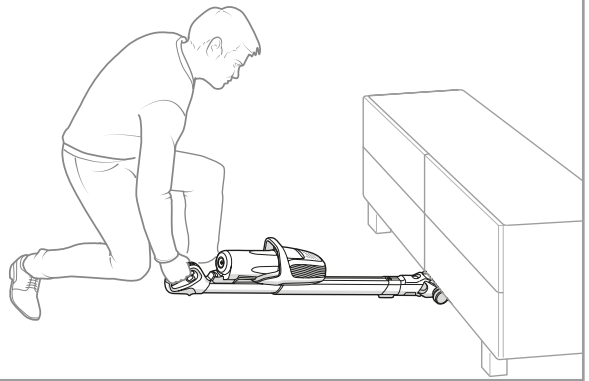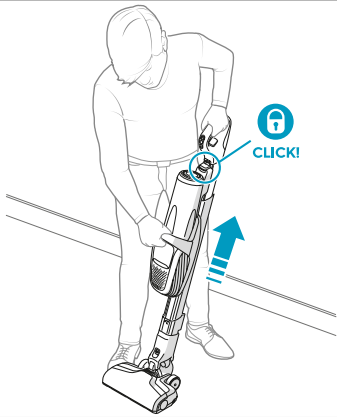

2

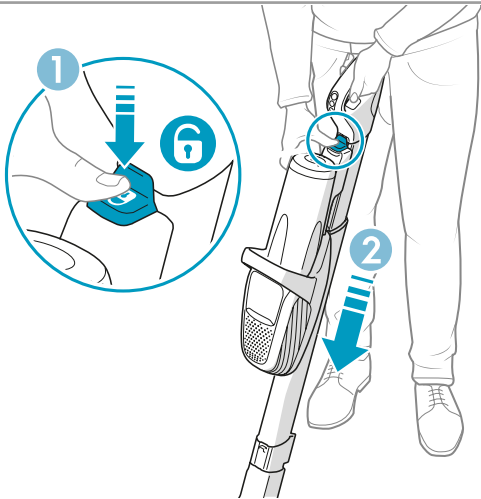 

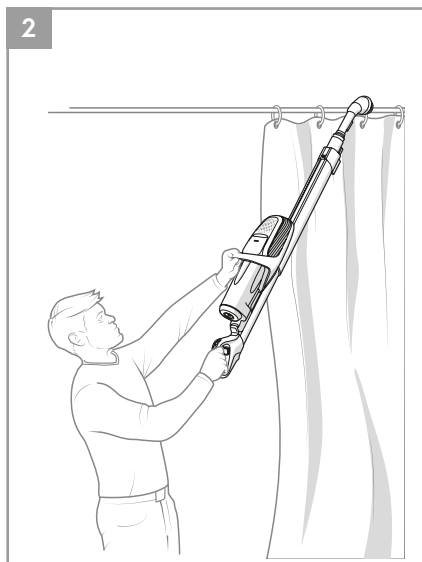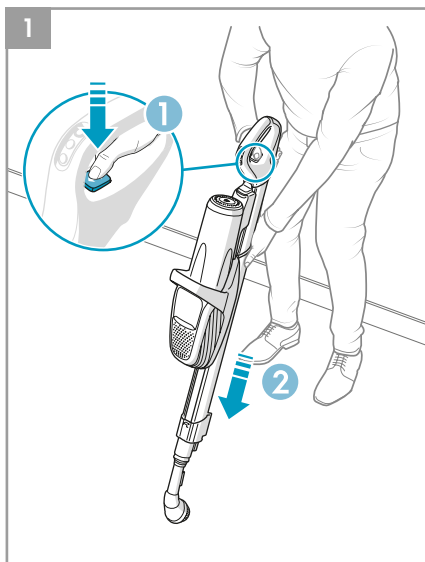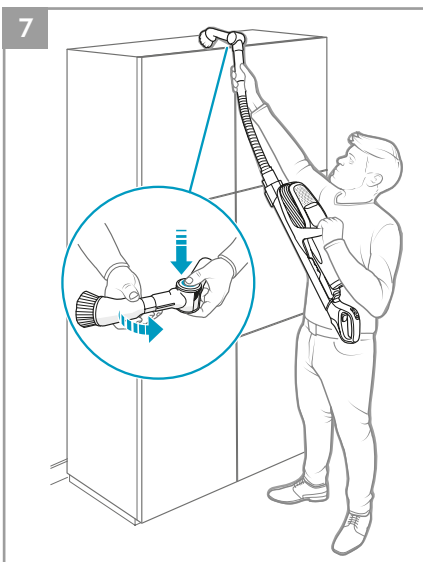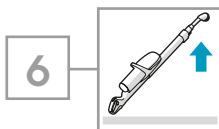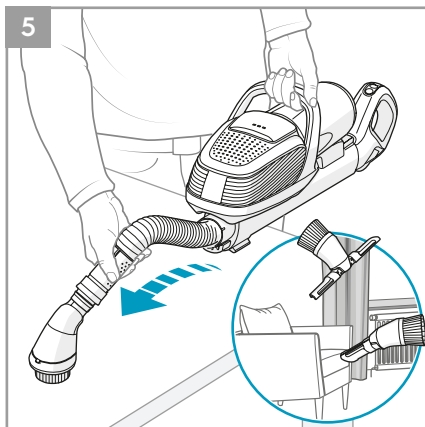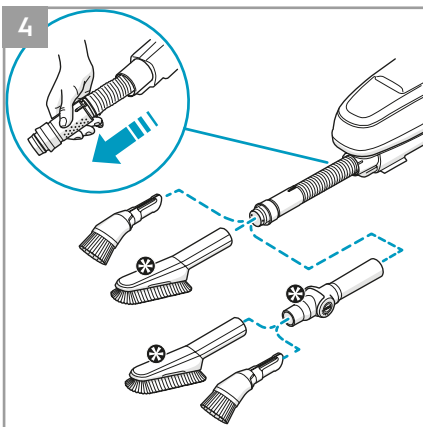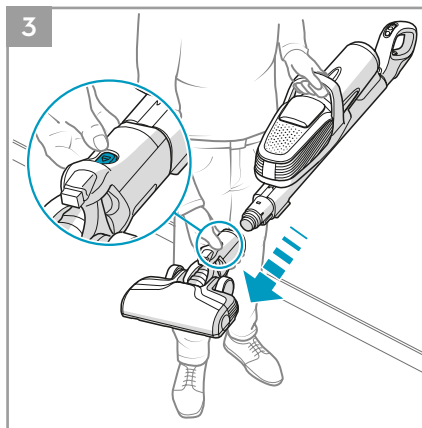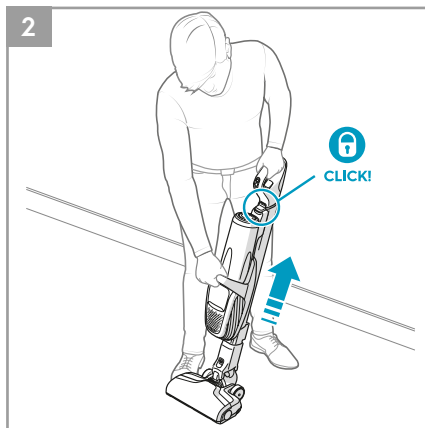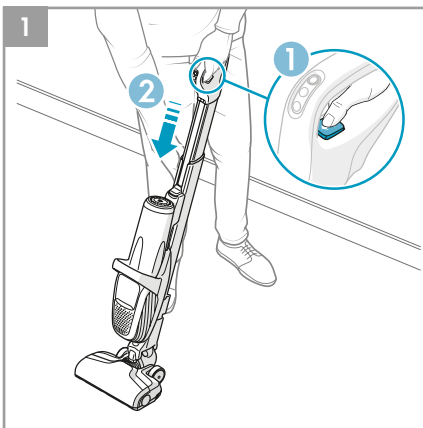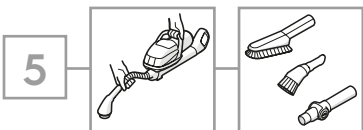          

* Certain models only

