

Instruction Booklet 使 用 說 明



AIR STYLE 沙宣Air Style 多功能造型器 VS-2136ABW

沙宣Air Style 多功能造型器

全新沙宣Air Style多功能造型器,搭配7種配件組合,輕鬆變化各式 直捲造型。結合自離子護髮科技、快速吹整不傷髮。輕盈機身設計 並附有質感皮革收納包. 輕巧好攜帶!

重要安全指示

當使用電器時,尤其有兒童在場,應小心及遵守以下安全指示

使用前請細讀使用說明 雷器應遠離水源

安全預防措施

警告: 請小心包裝或產品上使用的塑膠袋,請擺放在 遠離兒童的位置,因有可能會引致窒息。請勿於嬰兒 床、睡床、嬰兒車或兒童遊戲區內使用。塑膠袋的薄 層可能會堵著鼻子及口腔,阻礙呼吸,此塑膠袋不是 玩具,敬請小心以提防意外。



臉盆或其他盛有水的容器附近使用本產品。

- 當電器在浴室使用後,應立即拔除插頭,因為電器接近水會 導致危險,即使開關已關掉。
- 切勿把電器放入或掉進水或其他液體中
- 康雅香港有限公司台灣分公司檢查或維修。

- 本產品不該讓領有身心障礙手冊,或感官有缺陷或缺乏使用 電器經驗與常識的人(包括兒童)單獨使用,而應在有經驗 和常識之監管人監察及指導下使用此產品。小孩子應被監管 以保證他們不會將此產品當成玩具。
- 為避免損壞電源線,收藏時切勿將電源線纏繞在電器上並確 保其不被拉扯 、扭曲或屈折。
- 龍級質感髮型。 請向負責安裝的電機工程師查詢。

請保留此使用說明書



- 髮量多適用高熱溫
- 如果電源線損壞,為了避免危險,請將本電器交給香港商美
- 若電器曾跌落地或有任何不妥,請馬上停止使用。
- 切勿將已接上電源或開啟的電器置之不理。
- 請不要使用非本產品提供的任何配件。
- 每次用完後或清潔前請先拔去插頭。
- 切勿將電器發熱的部份碰到身體,尤其是眼睛、耳朵、面部
- 待電器冷卻之後才保存。
- . 為提供額外的安全性保護,建議您在提供浴室電源的電路中 安置不超過30毫安培(mA)的漏電斷路掣(RCD);如有疑問,

- 2. 兩段式溫度設定加上冷風設定

4. 陶瓷面板塗層

- 如若在使用中有任何不妥 ,請馬上拔去插頭
- - 9. 錐形波浪捲髮梳

 - 13. 38mm圓頭豐髮梳
 - 14. 20mm圓頭造型梳

現在您只需要一個工具,便可吹乾和造型您的頭髮。居家使用這款 含有七種配件的造型器,可吹乾髮、使頭髮滑順、蓬鬆、拉直、捲 髮、塑形,並創造頭髮健康質感,體驗無極限造型多變性,創造沙

獨特的人體工學手把設計加上方便使用的開關和上鎖配件,您可輕 1. 取一束約3公分寬的頭髮,從頭皮以上約2公分開始,將捲髮 鬆變換髮型,就像換衣服—樣容易,且隔天只需用護髮品稍加抓 棒靠在頭髮旁,務必將手把往下朝著肩膀向下。

卓越的負離子護髮科技

現代生活的種種面向,包括空調、接觸人造纖維和空氣汗染,都會 課捲好的頭髮冷卻後再造型。 增加頭髮累積靜電,即使只是簡單梳頭髮和用毛巾擦乾,都會增 5. 為每一束頭髮重複以上相同的動作 加靜電。這款造型器擁有負離子科技採用超抗靜電技術,會多釋放 60%的負離子*來消除靜雷,撫平毛鱗片,去除毛躁,帶來滑順和 **訣竅 -** 視想要的捲度多大多蓬鬆,您要決定一次抓取的髮束量多 光澤感秀髮。 少、繞在捲髮棒時要繞多緊,以及頭髮留在捲髮棒上停留時間。

* 與其他VS Sassoon熱風梳造型器配有標準負離子相比,結果可 能會因環境因素、髮質狀況有所差異。

陶瓷面板塗層技術

陶瓷面板塗屬技術能在吹乾和浩型過程中保持受埶均匀,幫助頭髮 看起來健康有光澤,減少靜雷,快速撫平毛鱗片去除毛燥,讓頭髮 2合1浩型配件可增加髮根的髮量蓬鬆感,並可拉直頭髮增加頭髮長 更容易梳理诰型。

過度漂染或用化學產品處理過的頭髮,只能使用此產品的低溫熱風 設定。如果您懷疑自己的頭髮狀況是否適合使用加熱型的造型器, 將配件最上方的圓盤轉到, 設定。 請詢問您的髮型師。 2. 取一束約3公分寬的頭髮,從靠近頭皮處開

小心不要將吹風口直接對著皮膚(例如頭皮、頸部、耳朵、臉部 3. 握住機身手把,順著髮束從髮根到髮尾輕輕往 等) ,因為造型器的熱風可能造成不適,尤其如果靠得太近時,避 免造成灼傷。

使用前取下所有包裝和銷售標籤商標。

安裝與取下配件

造型前吹乾髮

捲髮造型

集風嘴配件可先吹乾頭髮,為造型前準備。

將Air Style造型器繞著頭讓風對頭髮吹,直到頭髮約八成乾。

請注意 - 造型前務必將捲頭髮的手戴上萬用隔熱手套。

- 髮量少適用低熱溫
- 使用冷風來固定造型 3. 負離子護髮科技
- 5. 2.5公尺長旋轉式電線 6. 固定式後蓋過濾口
- 7 萬用區埶手套 8. 集風嘴 - 造型前吹乾髮

 - 12. 64mm髮量豐盈梳

錐形波浪捲髮梳 不論短髮長髮,這個錐形的捲髮梳可創造柔軟的細捲髮和波浪捲。

整,一樣完美有型。

搽髮後,視需要可用手指梳理頭髮。 保持隨意微亂搽髮感,看起來髮量最多更豐盈。

下滑,確定梳子確實接觸頭髮,同時用另一隻

增加髮根膨鬆感 1. 將配件頂端上的圓盤轉到 ₩ 設定。

- 使用前取下插頭的塑膠蓋(用來保護插頭在運送期間不受 2. 取一束約3公分寬的頭髮,將梳子直接放在髮 根處(齒梳朝上) (參照圖3)。
 - 3. 視髮型而定,讓髮束停留在梳子上5-8秒。 4. 接著握住機身手把,順著髮束從髮根到髮尾輕

吹乾髮直順梳配件

手幫忙拉盲髮束(參照圖2)。

直髮 + 髮根豐盈梳

1) 。

安裝 - 將選擇的配件套在機身手把上,然後將兩個凹口對準把手 輕往下滑,確定梳子確實接觸頭髮,同時用另 上的按鈕。將配件套在手把上,然後往下推直到卡在準確位置上 一隻手幫忙拉直髮束(參照圖2)。 取下 - 持續按下動力把手側邊的兩個按鈕,將配件從手把上拉出

柔順直髮梳可溫和地拉直和梳理頭髮,便於造型並 創造滑順的頭髮,待頭髮吹乾時呈現絲滑有光澤的 ▮ ▮ ▮

始,將梳子放在髮束上(齒梳朝下) (參照圖

- 1. 將柔順直髮梳頭放在約3公分寬的髮束下方靠近頭皮處,齒梳
- 使用方法 2. 另一隻手將髮束靠著柔順直髮梳頭拉緊頭髮,直到齒梳穿過 1 將圓頭浩型梳放在髮束下方靠近頭皮處停留數秒,可讓髮根
- 將柔順直髮梳輕輕滑過髮束。當梳頭接近髮尾,將梳頭往下 呈現髮量多感。 轉動,形成髮尾內C字彎形狀。
- 4. 為了更好控制,可將另一隻手放在髮梳頭上,幫忙沿著髮束 往臉部方向轉,將髮尾往下捲,創造更自然的髮型。 3. 為了讓效果持久,圓頭造型梳放在髮根時,可在頭髮溫熱時
- 5. 為每一束頭髮重複以上相同的動作。

64mm髮量豐盈梳 2. 開始繞著捲髮棒最寬的部分(最靠近手把處)順捲頭髮,沿

著掿髮棒的長度往下掿到髮根。 這個64mm的髮量豐盈梳配件可梳理打結的頭髮,創造沙龍級吹整 的多髮量蓬鬆感。 3. 視髮型而定,髮尾停留5-8秒。接著鬆開髮束,並將波浪捲髮

使用這個配件可創造兩種造型:

a) 繞髮尾然後鬆開 b) 從髮根全部吹開

1. 將頭髮分成多個髮束 - 分成多少束取決於您的髮量。如果

是中等髮量,可從耳朵為分界點將頭髮對分成上半部和下半 2. 視髮型和使用的配件而定,將頭髮分成2.5-5公分寬的髮 部。將上半部頭髮夾開。接著從中間將下半部頭髮大略分成 兩半,並拉到肩膀前面,就可以分開處理每一部分。 3. 將選擇的配件固定在機身手把上。換配件的程序請參照「安

搂髮尾然後鬆開的造型

緊接線在梳子上。

的造型風格。

使用方法

4. 開啟 Air Style 多功能造型器,將電源開闢滑到適合髮型的熱 1. 取一束約3公分實的頭髮,將髮尾放在髮量豐盈梳上,然後握 風溫度設定。本產品共有兩種溫度設定和一種冷風設定: 著配件尾部邊梳邊往上捲,直到梳子到髮根。在過程中將頭 終開關滑到第三個位置「II」, 這是較高的溫度, 此設定適合

隔熱手套

提供萬用隔熱手套配

件,可在您使用锆型器

的手。請注意,這個隔

埶手套的設計只能提供

您的锆型器和十個不同

配件,每個配件都有自

己的存放格。要讓機身

裝與取下配件」部分。

- 中等到多的髮量。 等候10到20秒,接著慢慢將梳子往下轉,在過程中將頭髮鬆 將開關滑到第二個位置「I」,這是較低的溫度, 此設定適合 細軟髮,或漂染、染色過的頭髮。
- 繼續將每一層的每一束頭髮重複捲繞鬆開的過程。 將開關滑到第一個位置「*」,選擇冷風設定。為溫熱後的 頭髮使用冷風設定,可幫助將浩型定形。

從髮根全部鬆開的造型

取一束約3公分寬的頭髮,將髮量豐盈梳放在髮根附近,從頭

 
皮梳開,同時輕輕旋轉,創造專業等級的髮量。 6. 待雷器冷卻後再保存。 每一段頭髮約需10秒。 7. 冷卻後將機身手把和配件放入收納盒。 繼續將每一層的每一束頭髮重複這個過程。如果想要更捲曲

38mm圓頭豐髮梳

的髮型,應將髮束繞著髮梳上停留數秒。

時不慎短暫碰觸表面熱 這個38mm的圓頭豐髮梳有著圓頭軟齒梳,可呈現更自然更有質感 的配件或頭髮時保護您

將圓頭豐髮梳放在髮束下方靠近頭皮處停留數秒,可讓髮根 —開始碰觸的保護,如 果長時間碰觸發熱表 順著髮束將髮梳慢慢往下移,到達髮尾時,將機身手把稍微 面,仍會造成不適。



4. 為每一束頭髮重複以上相同的動作。

選擇冷風設定來塑型。

為每一束頭髮重複以上相同的動作。

可使用集風嘴將頭髮先吹到八成乾。

用洗髮精和潤髮乳清潔頭髮後,接著用毛巾擦乾頭髮。

頭髮請擦到約八成乾,接著梳開打結的頭髮。如果頭髮還是濕的,

手把和各個配件保持最 這個20mm圓頭浩型梳有著柔軟的尼龍齒梳,可塑浩滑順的髮尾形 狀、塑造瀏海或較短的俏麗髮型。 **佳狀態**,建議依序放入

您的造型器基本上不用保養,不用潤滑,只要防止裡外有灰塵,如 2. 順著髮束將髮梳慢慢往下移,到達髮尾時,將機身手把稍微 需清潔,必須先拔掉插頭切斷電源,待冷卻後用清潔布擦拭表面即

此收納盒。

切勿拉扯、扭曲或過分彎曲電源線。切勿將電線緊繞在電器上,電 線銜接雷器的部分過度折彎,會造成電線破裂或短路,雷器也會損 壞。請經常檢查雷線是否受損,如發現受損,或雷器不能使用或只 能斷斷續續使用,應立即停用。

5. 使用後將開關滑到「0」位置,即可關閉電器,接著拔掉插

本造型器在不使用時很容易保存。請在電器冷卻後放置在兒童拿不

到月安全乾燥的地方。拔掉插頭時,請勿使勁猛拉雷線。請勿將雷 1. 確定開關設定到代表關的「O」,再將插頭插入110V伏特的適 線纏繞在電器上,應將電線懸掛或鬆開平放,且銜接電器的部分應

產品保養須知

知維修本產品。

為保證產品正常的使用,請按照以下方式保養

- 1. 任何清潔、檢查、收納動作,請務必保證產品已經切斷電源並
- 日產品溫度已冷卻的情況下進行,否則容易燙傷。 2. 請勿使用任何潤滑劑或其他保養產品塗抹產品表面。
- 3. 只可用微濕的毛巾擦拭產品表面,請勿使用任何清潔劑清潔
- 產品表面(如酒精、去光水或洗滌劑等),否則會導致產品 褪色、受捐或故障。 使用完畢收納本產品時,如果仍有護髮產品或化妝品殘留在3
- 柄或機身上,可能會導致塑膠老化或導致褪色、故障和受損。 5. 請勿拉扯、扭曲或過度彎曲電源線,請勿將電源線纏繞再機身
- 上,否則容易造成產品損壞或短路。 6. 如發現任何異常現象或產品破損,請立即切斷電源插頭並等待 機身降溫完畢後,聯系並授權沙宣維修中心修理。切勿自行拆
- 7. 以上保養須知不包括因長期使用而導致的表面損傷及一切因為 錯誤使用、不依照使用說明造成的產品損傷、遺失零件及自行 拆卸造成的產品問題。



大家都知道,電與水是一個很危險的組合。但您知否電器關機後仍 是帶電的?只要插上電源,電器仍是帶電的。所以用畢電器後, 請拔去插頭。

所有小型家庭電器用畢後, 電源插頭必須拔掉。

兩年主機保固

在您購買日期起兩年內,並在正常的使用情況下,如產品的品質或 零件有仟何不妥善之處,我們會為您免費提供維修或換貨服務。女 需獲得此保固服務。 **注意**:此項保固不包括一切因錯誤使用、不依指示處理產品及意外

請致電使用說明中所列出您所在地區的沙宣香港商美康雅香港有限 公司台灣分公司,詢問維修服務詳情,客服電話:(886) 2-8751-3633,附上您的名字,電話號碼和地址,以及產品問題之詳情。

損毀、遺失零件及經自行改造的產品。

114台北市內湖區瑞光路583巷24、26號6樓

香港商美康雅香港有限公司台灣分公司 消費者服務熱線: (886) 2-8751-3633 電郵: conairtaiwancs@gmail.com

網址: www.vssassoon.tw

產品名稱:沙宣Air Style 多功能造型器 產品型號: VS-2136ABW 額定電壓:110V 頻率:60Hz

製造年份: 見本機標示 製造號碼:見本機標示 丞慰商・羊唐弾右限小司 推口商:香港商美唐雅香港有限公司台灣分公司 Ro 客服地址:台北市內湖區瑞光路583巷24、26號6樓

商 標: VS Sassoon 產地: 中國

額定消耗功率:1000W

設備名稱:沙宣Air Style 多功能造型器,型號(型式):VS-2136ABW Equipment name Type designation (Type) 限用物質及其化學符號 Restricted substances and its chemical symbol

Unit Lead Mercury Cadmium Hexavalent chromium Polybrominated biphenyls Polybrominated diphenyl ethers (Cr+6) (Pb) (Ha) (Cd) (PRDF)

備考1. "超出0.1 wt %"及"超出0.01 wt %"係指限用物質之百分比含量超出百分比含量基準值。 Note 1: "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the ref-

erence percentage value of presence condition. 備考2. "○"係指該項限用物質之百分比含量未超出百分比含量基準值。

VS-2136ABW

Note 2: "O" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3. "-"係指該項限用物質為排除項目。 Note 3: The "-" indicates that the restricted substance corresponds to the exemption.

產品保固卡

感謝您購買沙宣美髮造型工具系列產品。本保固卡為享有保固服 (務的重要認證,請確實填寫。謝謝!

自您購買之日起的兩年內,在正常使用的情況下,如產品的本 身或零件有任何問題,沙盲顧客服務中心將會為您免費提供維修或

請填寫以下資料

先生/小姐/女士

郵遞區號:

產品名稱:

產品型號:

購買商店:

購買日期:

- 您的沙宣美髮造型工具系列產品按照嚴格的規範製造,使用非 授權的零配件、更換或維修造成的故障或損壞,不在本保固範
- 本保固不包括事故、誤用、運輸或非日常家庭使用锆成的任何損

- 本保固不包括所有意外或問接損壞。
- 如果您沒有最初購買日期的憑證,則本保固卡中的購買日期認定 為製造日期。

80gsm Artpaper Prepared by Betty Bai Checked by Tiffany Huang / Ken Xiao Approved by Ken Xiong

Reference No. | IB-22/374

Customer

Model No.

Description

Revision No.



1012mm(W) x 214mm(H) Folded Size 92(W) x 214(H) / mm

CONTINENTAL CONAIR LIMITED

CHINA CREATIVE DEPARTMENT

VS-TW

VS-2136ABW

1C + 1C (Black)

Design Job No.

折叠方法



Dear Consumer.

Thank you for your purchase of VS products. This warranty card is an important proof for warranty service. Please complete it earnestly. Thanks!

Warranty Card

We warranty that under normal use, if the quality or parts of your VS product should prove to be defective within 2 years from your purchase date, our VS Consumer Service Center will repair or replace it at our option, without charge to you.

Please fill in the following information:

Name: Mr./Miss/Ms	Zip Code :
Address:	
Tel:	Email:
Product Name:	
Model No.:	
Store of Purchase:	
Purchase Date:	

Warranty Terms:

- Your VS product has been manufactured to the strictest specifications and has been designed for use with authorized VS accessories and replacement parts. This warranty expressly excludes any defects or damages caused by accessories, replacement parts or repair service other than those which have been authorized by VS. This warranty does not cover any damage caused by accident,
- misuse, shipment or other than ordinary household use. This warranty excludes all incidental and consequential damages.
- In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

VS SASSOON AIR STYLE

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance, especially when children are present, basic safety precautions should always be followed. including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for
- Never immerse the unit in water or any other liquid.
- 3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the unit if it has fallen or if it appears to be
- Do not leave the unit unattended when it is plugged in or
- Unplug the unit immediately if you have problems when
- Do not use any accessories other than those recommended
- bv manufacturer. Unplug the unit after each use and before cleaning it.
- Avoid any contact between the unit's hot surfaces and your
- skin, in particular, your ears, eyes, face and neck. O. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety.
- Children should be supervised to make sure they do not treat the unit like a toy. Allow the unit to cool before storing.
 - . To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
 - 3. For additional protection, the installation of a residual SUPERIOR IONIC CONDITIONING current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

FEATURES



1000 watts of styling power

- 2 heat settings plus cool setting: High heat for thick hair
- Cool air to set your style Superior Ionic Conditioning System
- Ceramic Technology

Low heat for fine hair

- 2.5m salon length swivel power cord Fixed rear filter
- Universal heat protection glove
 - DRIES Concentrator attachment 9. CURLS - Conical curling attachment
 - 10. STRAIGHTENS + ADDS ROOT LIFT 2-in-1 styling
 - 11. SMOOTHES Blow dry paddle brush attachment
 - 12. VOLUMISES 64mm oval-shaped brush attachment
 - 13. TEXTURIZES 38mm round-shaped thermal brush
 - attachment 14. SHAPES - 20mm round-shaped brush attachment

Now you only need one tool to dry & style your locks. Experience ultimate styling versatility & create salon quality blowout styles at home with this one tool that has 7 attachments for drying, smoothing, volumising, straightening, curling, shaping &

The unique power handle design + easy switch & lock attachment system means changing your hairstyle is as easy as changing your outfit. Plus, it's perfect for second day hair that just needs a touch-up or some extra bounce.

Many aspects of modern living, including air conditioning, contact with man-made fibers & air pollution add to the build-up of static

SAVE THESE INSTRUCTIONS

electricity in your hair. Even simply brushing & towel-drying your hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, your hair may have a dull appearance. High levels of static charge cause your hair to become 'flyaway' & difficult to style.

The advanced super anti-frizz technology releases 60% more ions* to eliminate static, conditioning the hair cuticle for ultimate frizz-free smoothness & enhanced shine.

* Than a VS Sassoon hot air styler with standard ionic. Results may vary depending on environmental factors, hair texture and condition.

CERAMIC TECHNOLOGY

Ceramic Technology helps keep your hair looking healthy & shiny by maintaining even heat during the drying & styling process. Static is reduced by guickly sealing the hair cuticle layer ensuring minimal frizz making your hair easier to manage.

IMPORTANT

Hair that has been heavily bleached or chemically treated should only use the low heat setting on this product. Please consult your Once air-styled, finally finger comb to arrange your hair as hairdresser on using heated appliances if you have any concerns about the condition of your hair.

Take care not to direct the airflow directly onto the skin (e.g. scalp neck ears, face, etc.) as hot air from the styler can, particularly if held too close, cause discomfort or even burn.

BEFORE USING

- For straightening: Remove all packaging & point of sale labels before use.
- 1. Turn the dial on the top of the attachment to Remove plastic cover from plug before use (used to protect it from damage during transportation).

FITTING & REMOVING THE ATTACHMENTS To attach - place the selected attachment onto the power handle

& line up the two indents with the buttons on the handle. Push the attachment down onto the power handle until it clicks into place. To remove - press & hold the two buttons on the side of the power handle & pull the attachment away from the handle.

CONCENTRATOR ATTACHMENT

The concentrator attachment pre-dries & prepares hair for styling.

Direct the airflow onto the hair & move the Air Style Brilliance around the head until hair is 80% dry.

CONICAL CURLING ATTACHMENT

The conical curling attachment creates soft curls & waves on all

Please note - Before styling make sure the universal heat glove is worn on the hand which is wrapping the hair around the barrel.

- 1. Take a section of hair approximately 3cm wide & starting 2cm from the scalp, place the curling barrel next to the hair section ensuring the end of the power handle is pointing down towards the shoulder. sleek, shiny finish.
- 2. Start winding the hair around the around the widest part of the barrel, closest to the handle. Keep winding the hair down **To use:** the length of the barrel until there is no more hair left to wrap 3. Hold the end of the hair in place for 5-8 seconds, depending
- and pull the power handle away. Allow the curl to cool before styling.
- Repeat for each section of hair.

on the hair type. Then unwind or release the section of hair

TIP - Depending on how relaxed you would like the curl, this is head as you glide down the hair section. determined by how large your hair section is, how tightly you wrap your hair around the barrel, & the duration of holding your hair in

Keep it casual & tousled for maximum volume.

2-IN-1 STYLING ATTACHMENT

The 2-in-1 styling attachment creates volume at the roots + straightens longer hair lengths.

STRAIGHTENS:

- 2. Take a section of hair approximately 3cm wide & starting close to the scalp, place the comb above the section of hair (with the teeth of the comb pointing downwards)
- 3. Slide the power handle gently along the section of hair from the roots to the tips, ensuring that the comb goes right into the hair, while using your other hand to help stretch out the section of hair (refer Fig.2).

For volume at the roots:

- Turn the dial on the top of the attachment to
- 2. Take a section of hair approximately 3cm wide & place the comb directly at the roots of the hair (with the teeth of the comb pointing upwards) (refer Fig.3).
- 3. Hold the comb in place for 5-8 seconds, depending on the hair type.
- Then gently slide the power handle along the

section of hair from the roots to the tips, ensuring that the Continue to repeat for all lavers & sections of hair. For more comb goes right into the hair, while using your other hand to curve, wrap the hair around the barrel & hold for a few help stretch out the section of hair (refer Fig.2). seconds.

BLOW-DRY PADDLE BRUSH ATTACHMENT

The blow-dry paddle brush attachment with firm bristles creates ATTACHMENT gentle tension & control to shape & smooth hair as it dries for a

- 1. Place the brush head under a section of hair approximately 1. Place the brush head underneath a section of hair, close to 3cm wide, close to the scalp with the bristles pointing
- 2. Use your other hand to pull the hair section taut against the Slowly move the brush head down through the hair, as you brush head until the combs penetrate through the hair. reach the end of the hair section, rotate the power handle 3. Gently glide the brush head through the section of hair. As slightly towards your face to curl the ends under & create
- brush head under to give shape at the ends of the hair. For a lasting style, select the cool setting on warm hair whilst 4. For added control, place your other hand over the brush holding the brush head at the roots.
- Repeat for each section of hair.

the brush head nears the end of the hair section, turn the

64MM OVAL-SHAPED BRUSH ATTACHMENT The 20mm round-shaped brush attachment with soft nylon The 64mm oval-shaped brush attachment with detangling bristles

bristles for smooth shaping of ends, fringes or styling shorter hair creates big volume fullness for a salon-style blow-out.

With this attachment, you can use 2 different styling processes: a) Wrap & release from the ends, or; b) Blow-out boost from the roots.

Section your hair - the number of sections will depend on how much hair you have. For hair of average thickness, part your hair from ear to ear, creating a top & bottom section. Clip the top section out of the way. Roughly part the bottom 3. For a lasting style, select the cool setting on warm hair whilst section down the middle, bringing each side in front of your shoulders. You'll work on each side separately.

To use the wrap & release from the ends process:

- . Take a section of hair that's approximately 3cm wide. Place the oval brush at your ends & holding the end of the Wash, condition & towel dry your hair. attachment, roll the brush up the length of your hair until the barrel is at your roots, wrapping the hair around the brush in
- Wait 10 to 20 seconds, then slowly wind the brush downward. hair to 80% drv. unraveling your hair in the process.
- lavers & sections of hair. 2. Divide your hair into sections, between 2.5cm - 5cm wide,

To use the blow-out boost from the roots process: 1. Take a section of hair that's approximately 3cm wide.

Place the oval brush near the root & brush away from the head while gently rotating. This will create professional like

Continue to repeat the wrapping & releasing process on all

2. Take about 10 seconds on each hair section.

 Slide the switch to the third position for the high heat 'II'. This Slide the switch to the second position for the low heat 'I'

TEXTURIZES:

shape for a more natural style.

Repeat for each section of hair.

38MM ROUND-SHAPED THERMAL BRUSH

The 38mm round-shaped thermal brush attachment with soft.

ball-tip bristles creates shape & texture for a more natural style. 6. Allow the appliance to cool before storing away.

the scalp & hold for a few seconds to boost volume at the

A universal heat protective glove has been supplied to help protect your hand from temporary contact with heat when styling. Please note that the heat protective glove is only designed to give initial contact protection. Discomfort will be caused by prolonged

maintenance-free. No lubrication is needed. Keep both of inside

and outside of dirt and dust. If cleaning becomes necessary,

disconnect the unit from the power source, allow to cool and wipe

When not in use, your appliance is easy to store. Allow appliance

STORE-IT-ALL PREMIUM CASE Protects & neatly stores vour styler + it's 7 attachments, complete with a compartment for every piece. To keep the power handle & attachments in good

MAINTENANCE

exterior with a cloth.

stops or operates intermittently.

Your styler is virtually

- Place the brush head underneath a section of hair, close to the scalp & hold for a few seconds to boost volume at the
- reach the end of the hair section, rotate the power handle slightly towards your face to curl the ends under & create shape for a more natural style.
- 4. Repeat for each section of hair.

OPERATING INSTRUCTIONS

Ensure your hair is about 80% dry, combed through, & tangle-free. If your hair is wet, use the concentrator attachment to pre-dry the severely bent. Never wrap the cord tightly around the appliance.

- 1. Make sure the switch is set to the off '0' setting before plugging into a 230-240V~ suitable power outlet.
- the heat setting suitable for your hair type. There are 2 heat settings plus a cool setting:

heat setting is suitable for medium to thick hair

This heat setting is suitable for delicate, fine, bleached or

- coloured hair Slide the switch to the first position to select the cool setting
- '*'. Use the cool setting on warm hair to set your style. done after power cutting and product cool down, or wil cause 6. After use, slide the switch to the '0' position to switch off & unplua the power.
- 7. Once cooled, place the power handle & attachments into the

HEAT PROTECTION GLOVE

4. Please make sure there is no hair protection product or contact with the hot surface.

20MM ROUND-SHAPED BRUSH ATTACHMENT

order, it is suggested to store in the compartments:

- Slowly move the brush head down through the hair, as you
- holding the brush head at the roots.

NEVER allow the power supply cord to be pulled, twisted, or

- Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit
- depending on your hair type & the attachment you'll be using. Secure the selected attachment onto the power handle. To interchange between the attachments, refer to FITTING & REMOVING THE ATTACHMENTS.
- 4. To turn the Air Style Brilliance on, slide the power switch to to cool, then store out of reach of children in a safe, dry location Do not jerk or strain cord at plug connections. Do not wrap the

line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

PRODUCT MAINTAIN

- Please maintain product according to below tips: 1. Please make sure all checking, cleaning or storage will be
- 2. Please don't smear any lube or other maintain product on product's surface.
- 3. Only can use tower to clean the surface of product, please don't use any cleaning liquid like alcohol, nail polish remover or other cleaner, or will cause color fading, malfunction or
- cosmetic left on handle or body of product after using, or will cause plastic aging, color fading, malfunction or damage. 5. Please don't pull, warp or overbending on power line, please

don't twine the power line on product body or will cause

- damage or malfunction. 6. If any abonormal or product damage, please cut power immediately and wait until product cool down, then contact 6F., No.24-26, Ln. 583, Ruiguang Rd., Neihu Dist., VS after-sales center. Please don't disassemble product by
- 7. This warranty is no longer valid in case of alteration or repair by any unauthorised persons. To obtain service under this warranty, please send in registration within one month of purchase through either one of the following ways.



KEEP AWAY FROM WATER



ALWAYS UNPLUG SMALL APPLIANCES

LIMITED TWO YEAR WARRANTY

Branch will repair or replace your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is no longer valid in case of alteration or repair by any unauthorised persons. To obtain service under this warranty, please send in registration within one month of purchase through either one of the following ways.

Vidal Sassoon head office Conair Hong Kong LTD. Taiwan

Call Vidal Sassoon head office Conair Hong Kong LTD. Taiwan Branch in your region as listed in this Instruction Booklet for details of repair service. Customer Service Hotline (886) 2-8751-3633, contact telephone number and email address and details

CUSTOMER SERVICE:

Taipei City 114. Conair Customer Hotline: (886) 2-8751-3633 E-mail: conairtaiwancs@gmail.com Website: www.vssassoon.tw

THE POWER IS OFF WHEN THE SWITCH YOU'RE WRONG.

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in the power is on. So when you are not using your appliances, keep them