



EXPLORIAN E310

有些國家/地區並不提供某些型號

規格 - VM0203

國家/地區	VM#	電壓	頻率:	功率:
台灣	VM0203	110V	50 - 60 Hz	1000 W

符號

	警告		小心
	切勿接觸活動零件。切勿用手和器皿接觸容杯		務必在杯蓋蓋緊和蓋塞塞牢後才開始攪拌
	觸電危害		請先閱讀和瞭解擁有者手冊
	攪拌灼熱液體時會產生高溫		切勿浸泡
	請勿在調理機操作期間，將物件插入容杯中		開/關
	在不使用時、清潔、更換配件或接觸在調理機使用中會活動的零件之前，請確保已拔下插頭		

⚠ 警告：為避免產生嚴重傷害的風險，請您在使用 Vitamix® 調理機時，務必遵守基本安全預防措施，包括下列事項。

⚠ 警告



為避免受傷。

使用本調理機前，請先閱讀和瞭解本說明手冊。
應遵循基本安全防範措施，包括下列事項。

- 1. 請閱讀所有指示。**
- 2. 切勿以非其設計用途使用調理機。**
- 3. 本電器用於家庭。**
- 4. 本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者(包含孩童)使用，除非在對其負有安全責任的人員之監護或指導下安全使用。**
- 5. 孩童應受監護，以確保孩童不嬉玩電器。**
- 6. 警告：為避免不小心啟動調理機，在每次清潔之前，請先關閉電源並拔掉插頭。**
- 7. 小心：為避免因意外重設溫度保險絲而造成危害，此調理機的電源不可透過外接開關裝置(例如定時器)或連接至定期開關電路的輔助設施。**
- 8. 為避免觸電危害，切勿將調理機的底座置於水或其他液體中。**
- 9. 不使用時、在裝上或卸下零件及清潔之前，請先拔掉電源線插頭。**

- 10. 將電源線插到牆上插座之前，請務必檢查調理機為「關閉」狀態。若要中斷連接，請先關閉調理機電源，然後再從牆上插座移除插頭。**
- 11. 避免接觸活動零件。**
- 12. 切勿在電纜或插頭有損壞時，或因任何形式的故障、摔過之後繼續操作調理機。請立刻聯絡您的經銷商以進行檢查、修復、更換或調整。如果是在美國或加拿大以外地區購得本品，請聯繫您當地的 Vitamix 經銷商。**
- 13. 若電源線損壞時，必須由製造商、其服務處或具有相關資格的人員加以更換以避免危險。**
- 14. 您的廚房可能裝了漏電保護插座斷路器，可在水槽附近的插座中找到。如果調理機無法運作，請拔下調理機的插頭，重設牆上的插座或斷路器。如果斷路器持續扣脫，請將調理機的插頭從插座拔掉，讓調理機靜置 24 小時之後，再試一次。如問題持續存在，請聯繫 Vitamix 客服。**

- 15.** 調理機任何零件的改動或修改，包括使用非由 Vitamix 授權正品的任何零件，可能會導致觸電、火災或受傷，並會導致您的保固無效。
- 16.** 使用非由 Vitamix 明文授權或出售的附加裝置(包括寬口瓶)，可能會導致觸電、火災或受傷。使用此方式會使本保固無效。
- 17.** 切勿在戶外使用。
- 18.** 切勿讓電纜懸掛在桌檯邊緣。
- 19.** 切勿放置在熱瓦斯爐或電爐上或附近，或於加熱的烤箱中或上方。
- 20.** 在攪拌時切勿用手和器皿接觸容杯，以免造成嚴重人身傷害或調理機受損。可以使用橡膠刮刀或抹刀，但僅在調理機停止運轉時使用。
- 21.** 只能在杯蓋主要部分蓋緊時使用攪拌棒。
- 22.** 刀片十分鋒利。清潔容杯內的刀片組件時，務必格外小心，以免受傷。
- 23.** 為了降低受傷的風險，除非是已裝配置到 Vitamix 容杯上，否則，切勿將刀片組件放置於馬達底座上。
- 24.** 處理鋒利切割刀片、清空容杯時和清潔期間，務必格外小心。
- 25.** 切勿將勺子、叉子、刀或蓋塞等外物留在或存放在容杯內。如果在容杯內有外物時啟動調理機，會損壞刀片和其他元件並可能會導致人員受傷。
- 26.** 切勿使用損壞的刀片操作。
- 27.** 切勿在移除定心墊情況下操作。
- 28.** 務必在杯蓋蓋緊和蓋塞塞牢時才操作調理機。切勿在調理機運轉時移除兩件式杯蓋。僅可在添加配料和使用攪拌棒時拔出蓋塞。
- 29.** 在 48 盎司(1.4 公升)或 64 盎司(2 公升)容杯中攪拌灼熱液體或配料時，務必小心；濺物或逸出蒸氣可能會導致灼傷。切勿將容杯加滿到最大容量。一律以最低速度設定(變速 1)開始攪拌。雙手和其他裸露皮膚務必遠離杯蓋開口，以免燙傷。
- 30.** 當熱液體倒入調理機時要小心，可能因蒸氣突然噴發導致熱液體外溢。
- 31.** 在製作堅果醬或油性食物時，容杯內的混合物開始流動後，加工時間切勿超過一分鐘。加工時間過長可能導致過熱。
- 32.** 請確保容杯對齊定心墊，以確保在操作之前傳動齒輪已與傳動套筒接合。

保留好這些指示

注意：若違反任何重要安全措施和安全使用重要指示，都屬於對VITAMIX 調理機的誤用，可能會導致您的保固無效以及嚴重人身傷害。

⚠ 警告



觸電危害、火災或傷害風險。

請勿改動或修改馬達底座或容杯的任何部分。

請勿使用 Vitamix 未明確授權或出售的配件。

未能遵守指示可能會導致觸電、火災或受傷。

⚠ 警告



觸電危害。

僅可使用接地插座。

切勿拆除地線。

切勿使用轉接器。

切勿使用延長電纜。

清理馬達底座之前或不使用調理機時，務必一律拔掉插頭。

切勿將馬達底座置於水中或其他液體中。

未能遵守指示可能會導致死亡或觸電。

EXPLORIAN E310



Legacy Vitamix 容杯 -

Legacy (C 系列和 G 系列) 容杯將可與您的 Explorian 調理機底座一起使用。Vitamix 自行檢測容杯將無法與 Explorian 調理機一起使用。請造訪 vitamix.com，以取得詳細資料。

杯蓋、蓋塞和攪拌棒

- 使用調理機時，請務必使用杯蓋和蓋塞。
- 切勿在尚未檢查確保杯蓋蓋緊的情況下操作調理機。
- 蓋塞上有刻度，可用來做為量杯。
- 從蓋塞開口處插入蓋塞。以順時鐘方向將蓋塞鎖緊。如要移除，請以逆時針方向拔出。
- 移除蓋塞後，可使用攪拌棒或加入配料。

馬達 - 馬達的設計旨在保護其自身免於過熱。如果調理機不會立即啟動，請檢查確認您是否已將調理機插入裝好，且「On/Off」(開/關) 開關是否在「On」(開) 位置。如果馬達過熱，請先讓馬達冷卻 20-45 分鐘。

防止您調理機「超載」的訣竅：

- 學習使用調理機時，僅加工 Vitamix 食譜。
- 切勿以低於或高於建議的速度加工食譜。
- 切勿以長於建議的時間處理食譜。
- 使用您的攪拌棒處理黏稠混合物並保持配料移動且通過刀片。

控制面板

「On/Off」(開/關, I/O) 開關 - 「On/Off」(開/關) 開關控制調理機的電源。

「Variable Speed Dial」(變速撥盤) - 「Variable Speed Dial」(變速撥盤)可讓您從變速 1 (最低速) 到 10 (最高速)，手動控制速度。

瞬轉功能 (兀) - 按下「Pulse」(瞬轉) 開關後，機器會以顯示在「Variable Speed Dial」(變速撥盤) 的速度設定進行攪拌，直到放開「Pulse」(瞬轉) 開關為止。



重要！瞭解您的 VITAMIX 容杯、杯蓋和攪拌棒

⚠ 小心



旋轉中的刀片可能會導致損壞。

不同容杯樣式、類型和尺寸之間的杯蓋和攪拌棒不能互換。請使用調理機隨附的攪拌棒。

不同容杯樣式、類型和尺寸之間的杯蓋和攪拌棒不能互換。請使用調理機隨附的攪拌棒和杯蓋。

在攪拌期間，要使用攪拌棒之前，請先檢查是否為正確的攪拌棒。請僅在鎖緊杯蓋和拔出蓋塞後，才使用攪拌棒。您購買調理機時隨附的攪拌棒，就是此容杯的正確攪拌棒。

1. 請將杯蓋放在空容杯上，
2. 拔出蓋塞，然後插入攪拌棒。如果是正確的攪拌棒，它應會輕鬆地嵌入開口，且無論如何將攪拌棒向容杯內擠壓，都無法接觸到刀片。
3. 目測檢查：如果攪拌棒觸碰到刀片的任何邊緣，請勿將攪拌棒與容杯搭配使用。
4. 如果您的容器沒有正確的篡改器，請撥打 1.800.848.2649 或 1.440.235.4840 聯繫 Vitamix 家庭客戶服務。

如何使用攪拌棒

⚠ 警告




旋轉中的刀片可能會造成嚴重傷害。

- 切勿將手、抹刀等在機器運作或容杯仍在底座上時，伸入容杯內。
- 不同容杯樣式、類型和尺寸的杯蓋和攪拌棒不能互換。請使用調理機隨附的攪拌棒。如果沒有適用於您容杯的正確攪拌棒，請聯繫您的經銷商。

重要：

- 防濺盤（接近攪拌棒頂端）及杯蓋可防止攪拌棒在杯蓋正確地蓋緊後，撞擊到刀片。
- 在攪拌期間使用攪拌棒時，容杯內的內容物不能超過三分之二滿。
- 為避免在攪拌期間過熱，連續使用攪拌棒切勿超過 30 秒。
- 如果食物沒有流動，請確保杯蓋蓋緊，並小心地拔出蓋塞。將攪拌棒從蓋塞開口處伸入容杯內攪動內容物。
- 將攪拌棒垂直向下並不會幫助混合物流動。如有必要，將攪拌棒指向容杯的側邊或角落。切勿強行將攪拌棒插入容杯深處。

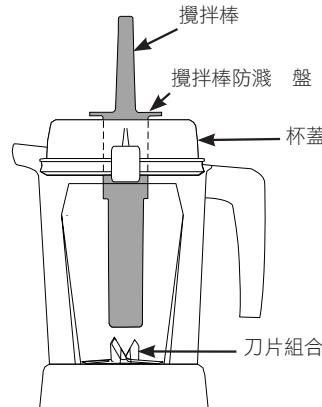

操作指示

⚠ 小心



在處理灼熱液體時，切勿使用超過 1 的速度進行處理，以免燙傷。

逸出蒸氣、濺物或內容物可能會灼傷人。務必從「Variable 1」（變速 1）啟動，慢慢增加至 10。



如要確保內容物安全，請在操作機器前將杯蓋和蓋塞蓋緊。

- 請先將容杯載入內容物才放在馬達底座上；先將液體和軟質食物放入容杯，最後才放入固體物品和冰塊。雖然對處理來說不是必要，但將食物切碎或弄成小塊，可更加精準地測量配料。請小心謹慎處理熱配料，以及製作熱湯或熱醬汁。
- 請牢固地鎖緊兩件式杯蓋。攪拌時請一律使用兩件式杯蓋（除非需要透過蓋塞開口處插入攪拌棒）。尤其是在攪拌熱配料時，請確保杯蓋已牢固地鎖緊。
- 關閉馬達後，請將濕的刀片容杯對齊定心墊，放在馬達底座上。切勿嘗試將容杯放在正在運轉的馬達底座上，或在容杯尚未正確放置下操作馬達底座。
- 看著「Variable Speed Dial」（變速撥盤）。務必確保其指向「Variable Speed」（變速）1。按一下「On/Off」（開/關）開關來啟動調理機。此時刀片會開始轉動。
- 在攪拌期間內轉動「Variable Speed Dial」（變速撥盤）1 到 10，來提升或降低刀片的速度。
- 加工結束時，以逆時針方向將「Variable Speed Dial」（變速撥盤）轉動至「Variable Speed 1」（變速 1），再按一下「On/Off」（開/關）開關。
- 將機器關閉後，請等到刀片完全停止，再將杯蓋或容杯從馬達底座上取下。

疑難排解

Vitamix 的馬達設計能防止使用時機身過熱。此功能會關閉馬達，而馬達可能會發出輕微的異味。

請遵循下列步驟重新設定馬達。如果您在遵循這些指示後，仍然持續遇到問題，請立即聯繫您當地的經銷商以取得進一步指示。

過熱保護重新設定程序

如果馬達在攪拌時因過熱而關閉，請先讓機器冷卻 20 到 45 分鐘，再開始另一個攪拌處理。

防止 Vitamix 機器「超載」的訣竅：

- 學習使用機器時，僅加工 Vitamix 食譜。
- 切勿以低於或高於建議的速度加工食譜。
- 切勿以長於建議的時間處理食譜。
- 使用您的攪拌棒處理黏稠混合物並保持配料移動且通過刀片。

保養和清潔

注意：Vitamix 容杯的設計旨在可完全清潔，無需拆下固定螺母和刀片組合。切勿嘗試從容杯中取下固定螺母或刀片組合。我們正常清潔和消毒程序皆將確保您容杯及其元件的徹底完整清潔。如果容杯受損，請勿使用。立即聯絡您的經銷商，以尋求協助。

容杯：

如要清潔：

1. 將溫水注入容杯至半滿的位置後，再加入數滴碗盤清潔劑至容杯內。
2. 將完整的兩件式杯蓋壓到或推到鎖定位置。
3. 將容杯置於底座上。
4. 按一下「啟動/停止」。
5. 再將速度慢慢調高到變速 10。
6. 先運作調理機 30 至 60 秒。
7. 將「Variable Speed Dial」(變速撥盤) 轉回變速 1，按一下「開/關」。
8. 清洗乾淨並晾乾所有組件。

消毒：(醋)

1. 請依照上述清洗說明。
2. 醋溶液的準備：請以一比一用水稀釋醋。切勿過度填滿容杯。
3. 將完整的兩件式杯蓋壓到或推到鎖定位置。
4. 將容杯置於底座上。
5. 按一下「啟動/停止」。
6. 再將速度慢慢調高到變速 10。
7. 先運作調理機 30 至 60 秒。
8. 將「Variable Speed Dial」(變速撥盤) 轉回變速 1，按一下「開/關」。
9. 將混合物額外再置於容杯中滿 3 分鐘。容杯中的醋溶液總置放時間應為 5 分鐘。
10. 將醋溶液從容杯中倒出，再倒入兩件式杯蓋的內側。請重複消毒過程。
11. 讓容杯和杯蓋風乾。消毒後切勿再沖洗。如有需要，下次使用前再沖洗一次。

杯蓋、蓋塞和攪拌棒

分開杯蓋和蓋塞。用溫肥皂水清洗零件。在自來水下沖洗並晾乾。重新組裝後再使用。

重要：為了確保裝置保持卓越的效能，請勿將容杯、杯蓋、蓋塞或攪拌棒放在洗碗機內。

馬達底座

⚠ 警告



觸電危害。

請在清潔機器之前先中斷電源。

未能遵守指示可能會導致死亡或觸電。



1. 拔下電源線。
2. 用濕的軟布或海綿，以中性洗潔劑和溫水清洗外側表面。切勿將馬達底座放在水中。
3. 可以拆下四角墊，以利徹底清潔。
4. 徹底清潔開關，讓其可以輕鬆使用。開關可能會因為使用而有黏著感，請使用沾濕之棉花棒清潔防水開關附近的縫隙。清潔後請立即抹乾所有多餘水份。
5. 請以軟布擦拭。

保固

5 年整機保固

重要限制：VITAMIX 會將產品的保固服務限制在 VITAMIX 或其授權分銷商原先銷售產品的國家/地區中。

- VITAMIX 不建議在此類產品的銷售和製造所在國家/地區之外使用我們的產品。
- 我們的產品皆通過國家/地區安全性標準的核准和認證。
- 每個國家/地區可能對同一產品要求不同的電壓和頻率、電源線和插頭。
- 在 VITAMIX 或其任何授權分銷商最初銷售產品的國家/地區之外，可能無法提供售後服務，因為授權分銷商和維修技術人員的庫存維修零件可能限定用於特定國家/地區。

1. 產品保固。

若要確認保固內容，請聯絡您所在國家/地區的授權 VITAMIX 居家用品分銷商/服務供應商（如本擁有者手冊的國際聯絡方式頁面所列），或造訪 WWW.VITAMIX.COM/US/EN_US/WHERE-TO-BUY 以查找該資訊。

2. 保固適用對象。

本保固由 VITAMIX 向調理機的擁有者提供，僅供個人家庭使用。本保固不適用於將此產品用於商業用途、租賃或轉售等目的。如果在保固期間變更 VITAMIX 的所有權，請提供新擁有者與原始收據的副本，以確認保固的開始日期。

3. 保固範圍。

VITAMIX 向客戶保證，如果本調理機（「調理機」包括馬達底座以及任何一同購買的容杯、杯蓋及攪拌棒）在初次購買之日起 5 年內因材料或工藝瑕疵或因普通室內（家庭）使用造成的正常磨損而出現故障，經授權的 VITAMIX 居家用品分銷商/服務供應商將在收到退貨之日起的 30 日內，免費對有故障的調理機或調理機組件提供維修。

如果經過 VITAMIX 的自行判斷之後，無法修復故障的調理機或調理機組件，則授權的 VITAMIX 居家用品分銷商/服務供應商將選擇免費更換相同型號或次個最接近型號的調理機（如果原始型號不再可供購買）。在此情況下，保固開始日期等同於原始 VITAMIX 的購買日期。

4. 保固不涵蓋的範圍。

- A. 本保固不適用於將調理機用於商業或非家庭的應用。
- B. 本保固僅在調理機依據擁有者手冊中包含的指示、警告和安全措施得到使用和維護時有效。本保固不涵蓋意外造成的損壞（例如：攪拌時容器中有異物、機體或容器掉落等）。
- C. 本保固不涵蓋在銷售和製造所在國家/地區以外使用調理機造成的損壞，保固服務僅限於 VITAMIX 或其授權分銷商最初銷售調理機的國家/地區。
- D. 本保固不涵蓋不會影響效能的外觀變化，例如變色、刮傷或使用磨料或清潔劑的結果或食物結垢。

容杯：處理某些藥草和香料會導致容杯變色，亦可能導致刀片慢慢變鈍。微量的沙子，粗砂和研磨藥草亦可能導致刀片慢慢變鈍。某些藥草可能會釋放出精油，導致容杯永久變色。在這些狀況下，您的容杯和刀片不在 VITAMIX 的保固範圍內。

VITAMIX 對任何未經授權的保固維修費用概不負責。您的 VITAMIX 只能由授權的 VITAMIX 居家用品分銷商/服務供應商提供服務或維修。根據本保固，維修、更換或按購買價格退款是購買者的專屬補救措施和 VITAMIX 與其授權分銷商的唯一責任。不會授權 VITAMIX 或任何其授權分銷商的任何員工或代表作出任何其他保固或對此保固（可能對 VITAMIX 具有約束力）進行任何修改。據此，購買者也不應信賴 VITAMIX 或任何其授權分銷商的任何員工或代表所作的任何其他陳述。在任何情況下，無論是基於合約、補償、保固、民事侵權行為（包括過失）、嚴格責任或其他行為，VITAMIX 概不為任何特殊、間接、意外或衍生損害（包括但不限於利潤或收入損失）負責。

附註：如果您的 VITAMIX 需要維修，但未包含在保固說明內，您仍可以經由付費（維修費與運費）來獲得維修服務。請聯絡您國家/地區中的授權 VITAMIX 居家用品分銷商/服務供應商（如本擁有者手冊的國際聯絡方式頁面所列），以取得詳細資訊。

5. 導致本保固無效的情況。

- 滥用、誤用、疏忽使用、改動調理機，曝露在異常或極端狀況，或不遵循操作指示都會使本保固無效。
- 如果是由 VITAMIX 或經授權 VITAMIX 服務供應商之外的人員維修調理機或調理機的任何組件，或如果將本保固範圍內調理機的任何組件與未獲 VITAMIX 明文授權的馬達底座或容杯一起使用，也會使本保固無效。
- 當調理機與變壓器或轉接器搭配使用以轉換電壓時，保固無效。

6. 如何取得保固服務

請聯絡您所在國家/地區的授權 VITAMIX 居家用品分銷商/服務供應商（如本擁有者手冊的國際聯絡方式頁面所列）。他們將會提供有關如何取得 VITAMIX 維修協助的指引。



EXPLORIAN E310

SOME MODELS NOT AVAILABLE IN ALL COUNTRIES

SPECIFICATIONS - VMO203

Country	VM#	Voltage	Frequency	Watts
Taiwan	VMO203	110V	50 - 60 Hz	1000 W

SYMBOLS

	Warning		Caution
	NEVER touch moving parts. Keep hands and utensils out of container		Operate with lid and lid plug in place
	Electrical Shock Hazard		Read and understand owner's manual
	High temperature when blending hot liquids		Do not immerse
	DO NOT insert items into the container while the blender is in use		On/Off
	Unplug while not in use, before cleaning, changing accessories or approaching parts that move while the blender is in use		

Your Adventure Awaits

vitamix.com

⚠ WARNING: To avoid the risk of serious injury when using your Vitamix® blender, basic safety precautions should be followed, including the following.

⚠ WARNING



To Avoid Injury.

Read and understand the instruction manual before using this machine.

Basic safety precautions should be followed, including the following.

1. Read all instructions.
2. Do not use blender for other than intended use.
3. This appliance is intended to be used in household.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. **WARNING:** To avoid inadvertent activation, turn off and unplug before cleaning.
7. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, power to this blender must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
8. To protect against risk of electrical shock,
9. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
10. Always check that the blender is OFF before plugging cord into wall outlet. To disconnect, turn OFF the blender, then remove plug from wall outlet.
11. Avoid contacting moving parts.
12. Do not operate any blender with a damaged cord or plug or after the blender malfunctions, or is dropped or damaged in any manner. Contact your distributor at once for examination, repair, replacement, or adjustment. If purchased outside the U.S.A. or Canada, contact your local Vitamix dealer.
13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
14. GFI circuit breakers might be installed in your kitchen. Look for them in outlets near sinks. If the blender won't operate, unplug the

blender. Reset the wall outlet or circuit breaker. If the circuit breaker continues to trip, unplug the blender from the outlet. Allow the blender to sit for 24 hours before attempting to use it again. Contact Vitamix Customer Service if the problem persists.

15. Alteration or modification of any part of the blender, including the use of any part or parts that are not genuine authorized Vitamix parts, may cause fire, electric shock, or injury and will void your warranty.
16. The use of attachments not expressly authorized or sold by Vitamix for use with this blender, including canning jars, may cause fire, electric shock, or injury. Use in this way will void your warranty.
17. Do not use outdoors.
18. Do not let cord hang over edge of table or counter.
19. Do not place on or near a hot gas or electric burner, in or on a heated oven.
20. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A rubber scraper or spatula may be used, but only when the blender is not running.
21. The tamper provided must be used only when the main part of the lid is in place.
22. Blades are sharp. Clean around the blade assembly in the container with extreme care to avoid injury.
23. To reduce the risk of injury, never place a blade assembly on the motor base unless assembled to the Vitamix container.

24. Care should be taken when handling the sharp cutting blades, emptying the container and during cleaning.
25. Do not leave foreign objects, such as spoons, forks, knives or the lid plug, in the container as this will damage the blades and other components when starting the blender and may cause injury.
26. Never attempt to operate with damaged blades.
27. Never attempt to operate with the centering pad removed.
28. Always operate blender with lid and lid plug firmly in place. DO NOT remove 2-part lid while blades are rotating. Only remove the lid plug to add ingredients and to use the tamper.
29. When blending hot liquids or ingredients in the 48 oz. (1.4 L) or 64 oz. (2 L) container, use caution; spray or escaping steam may cause burns. Do not fill container to the maximum capacity. Always begin processing on the lowest speed setting, variable speed 1. Keep hands and other exposed skin away from lid opening to prevent possible burns.
30. Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to a sudden steaming.
31. When making nut butters or oil-based foods, do not process for more than one minute after the mixture starts to circulate in the container. Processing for longer periods can cause overheating.
32. Make sure that the container is flush with the centering pad to ensure that the drive spline is engaged with the drive socket before operating.

SAVE THESE INSTRUCTIONS

NOTICE: FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS AND IMPORTANT INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR VITAMIX BLENDER THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS INJURY.

⚠ WARNING



Electrical Shock Hazard, Risk of Fire or Injury.

Do not alter or modify any part of the motor base or container.

Do not use attachments not expressly authorised or sold by Vitamix.

Failure to follow instructions can cause electrical shock, fire or injury.

⚠ WARNING



Electrical Shock Hazard.

Use grounded outlet only.

DO NOT remove ground.

DO NOT use an adapter.

DO NOT use an extension cord.

Always unplug before cleaning the motor base or when not in use.

Do not put the motor base in water or other liquid.

Failure to follow instructions can cause death or electrical shock.

EXPLORIAN E310



Legacy Vitamix Containers -

Legacy (C Series and G Series) containers will work with your Explorian blender base. Vitamix Self-Detect containers will not work with the Explorian Blender. Visit vitamix.com for details.

Lid, Lid Plug and Tamper

- Always use the lid and the lid plug when operating the blender.
- Never operate the blender without checking to make sure that the lid is securely locked in place.
- The lid plug is marked so it can be used as a measuring cup.
- Insert the lid plug through the lid plug opening. Lock the plug in place by turning clockwise. To remove, turn counter-clockwise and lift out.
- Remove the lid plug to use the tamper or to add ingredients.

Motor - The motor is designed to protect itself from overheating. If the blender will not start immediately check to make sure you have plugged the unit in and the On/Off switch is On. If the motor has overheated, allow the motor to cool for 20-45 minutes.

Tips to prevent 'overloading' your blender:

- Process only Vitamix recipes when learning to use the blender.
- Do not process recipes at lower or higher speeds than recommended.
- Do not process recipes for longer than recommended.
- Use your tamper to process thicker mixtures and keep ingredients moving around and through the blades.

CONTROL PANEL

On /Off (I/O) Switch - The On/Off switch controls power to the machine.

Variable Speed Dial - The Variable Speed Dial gives you manual control from Variable 1 (slowest) to 10 (highest).

Pulse (Π) - Pressing down on the Pulse Switch will cause the machine to blend at the speed setting shown on Variable Speed Dial for as long as the Pulse Switch is held down.



IMPORTANT! KNOW YOUR VITAMIX CONTAINER, LID AND TAMPER

⚠ CAUTION



Rotating Blades Can Cause Damage.

Lids and tampers are not interchangeable between different container styles, types and sizes. Use the tamper that was supplied with your blender.

Lids and tampers are not interchangeable between different container styles, types and sizes. Use the tamper and lid that was supplied with your blender.

Before using a tamper during the blending, verify that you have the correct tamper. Only use the tamper with the lid securely locked in place and the lid plug removed. **If a tamper came with your blender at purchase, it is the correct tamper to use.**

1. Place the lid on an empty container.
2. Remove the lid plug and insert the tamper through the lid plug opening. The tamper should fit easily into the opening. It should not come into contact with the blades no matter where you move the tamper inside the container.
3. Visually inspect: **IF THE TAMPER TOUCHES THE BLADES AT ANY ANGLE, DO NOT USE THE TAMPER WITH YOUR CONTAINER.**
4. If you do not have the correct tamper for your container, contact your distributor or Vitamix customer service for assistance.

HOW TO USE THE TAMPER

⚠ WARNING




Rotating Blades Can Cause Severe Injury.

- **DO NOT** put hands, spatulas, etc. in the container while the machine is running or while the container is still on the base.
- Lids and tampers are not interchangeable between different container styles, types, and sizes. Use the tamper that was supplied with your machine. If you do not have the correct tamper for your container, contact your distributor.

IMPORTANT:

- The splash disk (near the top of the tamper) and lid prevent the tamper from hitting the blades when the lid is secured properly in the locked position.
- The container should not be more than two-thirds full when the tamper is used during blending.
- To avoid overheating during blending, DO NOT use the tamper for more than 30 consecutive seconds.
- If the food does not circulate, carefully remove the lid plug while making sure the lid stays firmly in place. Release the contents by inserting the tamper through the lid plug opening.
- Holding the tamper straight down may not help the ingredients circulate. If necessary, point the tamper toward the sides or corners of the container. DO NOT try to force the tamper deeper into the container.

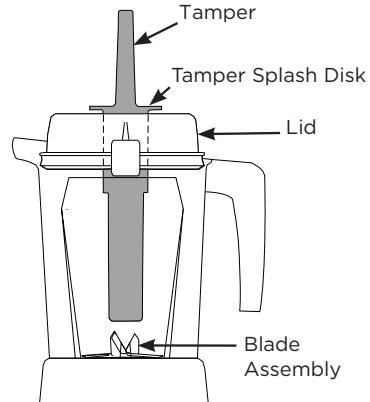

OPERATING INSTRUCTIONS

⚠ CAUTION



Never Start on Speeds Above 1 with Hot Liquids to Avoid Possible Burns.

Escaping steam, splashes or contents may scald. Always start on Variable 1, then slowly increase to 10.



To secure the contents, lock the lid and lid plug securely in place prior to operating the machine.

1. Load the container before placing it on the motor base. Place liquids and soft foods in the container first, solid items and ice last. Although not necessary for blending, you may want to cut or break food into smaller pieces for more precise measuring of ingredients. **Take proper care when handling and processing hot ingredients and making hot soups and sauces.**
2. Securely fasten the 2-part lid. Always use the complete 2-part lid when blending (unless the tamper is inserted through the lid plug opening). Especially when blending hot ingredients, make sure the lid is securely latched.
3. With the motor off, set the wet blade container on the motor base by aligning it over the centering pad. Do not attempt to put a container on an operating motor base or to operate a motor base without a container properly in place.
4. Look at the variable speed dial. Make sure it is pointing to Variable speed 1. Press On/Off to start the machine. The blades will begin to turn.
5. Rotate the Variable Speed Dial between 1 and 10 during the blending cycle to increase or decrease the speed of the blades.
6. At the end of the blend, rotate the Variable Speed Dial counter-clockwise to Variable Speed 1. Press On/Off.
7. After turning the machine off, wait until the blades completely stop before removing the lid or container from the motor base.

TROUBLESHOOTING

Your Vitamix motor is designed to protect from overheating during use. This feature will shut off the motor. The motor will possibly emit a slight odor. Follow the procedures below to reset the motor. If you continue to experience problems after following these instructions, contact your local distributor immediately for instructions.

Overheat Protection Reset Procedure

If the motor shuts off due to overheating while blending, allow the machine to cool for 20 to 45 minutes before beginning another blending cycle.

Tips to prevent "overloading" your Vitamix machine:

- Process only Vitamix recipes when learning to use the machine.
- Do not process recipes at lower or higher speeds than recommended.
- Do not process recipes longer than recommended.
- Use your tamper to process thicker mixtures and keep ingredients moving around and through the blades.

CARE AND CLEANING

Note: Your Vitamix container is designed to be completely cleanable without removing the retainer nut and blade assembly. DO NOT attempt to remove the retainer nut or blade assembly from the container. Our Normal Cleaning and Sanitising procedures will ensure a complete and thorough cleaning of your container and its components. If your container is damaged, please do not use. Contact your distributor for assistance.

Containers:

To Clean:

1. Fill the container half full with warm water and add a couple of drops of washing-up liquid.
2. Snap or push the complete 2-part lid into the locked position.
3. Put the container onto the base.
4. Press Start/Stop.
5. Slowly increase the variable speed to 10.
6. Run the machine for 30 to 60 seconds.
7. Rotate the Variable-Speed dial back to Variable 1. Press On/Off.
8. Rinse and drain all pieces.

To Sanitise: (Vinegar)

1. Follow the cleaning instructions above.
2. Prepare the vinegar solution: dilute equal parts vinegar and water. DO NOT overfill the container.
3. Snap or push the complete 2-part lid into the locked position.
4. Put the container onto the base.
5. Press Start/Stop.
6. Slowly increase the variable speed to 10.
7. Run the machine for 30 to 60 seconds.
8. Rotate the Variable-Speed dial back to Variable 1. Press On/Off.
9. Allow the mixture to stand in the container for an additional 3 full minutes. The total contact time of the vinegar solution in the container should equal 5 minutes.
10. Pour the vinegar solution out of the container over the inside surface of the 2-part lid. Repeat the sanitisation procedure a second time.
11. Allow the container and lid to air dry. Do not rinse after sanitising. If necessary, rinse immediately before the next use.

Lid, Lid Plug and Tamper

Separate the lid and lid plug. Wash the parts in warm soapy water. Rinse clean under running water and dry. Reassemble before use.

IMPORTANT: To ensure continued and effective performance, do not put the container, lid, lid plug or tamper in the dishwasher.

Motor Base

⚠ WARNING



Electrical Shock Hazard.

Disconnect power before cleaning machine.

Failure to follow instructions can cause death or electrical shock.



1. Unplug the power cord.
2. Wash the outside surface with a damp soft cloth or sponge, which has been rinsed in a mild solution of liquid detergent and warm water. Do not place the motor base in water.
3. The centering pad can be removed for more thorough cleaning.
4. Thoroughly clean the switches so they work freely. They may become sticky from use. Use a moistened cotton swab to clean the grooves around the water-shielded switches. Immediately dry any excess water.
5. Polish with a soft cloth.

WARRANTY

5-year full Machine Warranty

IMPORTANT RESTRICTION: VITAMIX MAY RESTRICT WARRANTY SERVICE FOR OUR PRODUCTS TO THE COUNTRY WHERE VITAMIX OR ITS AUTHORISED DISTRIBUTORS ORIGINALLY SOLD THE PRODUCT.

- Vitamix does not recommend use of our products outside of the country where such products were sold and built to be used.
- Our products are approved and certified to country-specific safety standards.
- Each country may require a different voltage and frequency, power cable and plug for the same product.
- After-sales service may not be available outside of the country where Vitamix or any of its authorised distributors originally sold a product, as our authorised distributors and repair technicians stock repair parts that may be country-specific.

1. PRODUCT WARRANTY.

To verify warranty, contact the Authorised Vitamix Household Distributor/Service Provider in your country, as listed on the International Contacts page of this Owner's Manual or visit www.vitamix.com/us/en_us/Where-To-Buy to locate this information.

2. WHO CAN SEEK WARRANTY COVERAGE.

This Warranty is extended by Vitamix to the owner of this Blender for personal household use only. This Warranty does not apply to products used for commercial, rental or re-sale purposes. Should the ownership of the Vitamix change during the warranty period, please provide the new owner with a copy of the original receipt to be able to verify start-date of the warranty.

3. WHAT IS COVERED.

Vitamix warrants to the owner that if this Blender (a "Blender" consists of a motor blender base, any container(s), lids and tamper(s) purchased together) fails within 5 years from the date of purchase due to a defect in material or workmanship or as a result of normal wear and tear from ordinary household use. The Authorised Vitamix Household Distributor/Service Provider will, within 30 days of receipt of the returned Blender, repair the failed Blender or component part of the Blender free of charge.

If, in Vitamix's sole discretion, the failed Blender or component part of the Blender cannot be repaired, the Authorised Vitamix Household Distributor/Service Provider will elect to replace the Blender free of charge with the same model or the next closest model if original model is no longer available to purchase. In this case, the warranty start-date remains the same as the purchase date of the original Vitamix.

4. WHAT IS NOT COVERED.

- a. This Warranty does not apply to Blenders used commercially or in non-household applications.
- b. This Warranty is only valid if the Blender is used and maintained in accordance with the instructions, warnings and safeguards contained in the owner's manual. This Warranty does not cover damage caused by accidents (ex: foreign object in container while blending, dropping of unit or container, etc.).
- c. This Warranty does not cover damage resulting from use of the Blender outside of the country where it was sold and built to be used, and Warranty service may be restricted to the country where Vitamix or its authorised distributors originally sold the Blender.
- d. This Warranty does not cover cosmetic changes that do not affect performance, such as discoloration, scratches, or the effects of the use of abrasives or cleaners or food build up.

Containers: processing certain herbs and spices in the container/cup will result in cosmetic marring of the container/cup and may cause the blades to wear prematurely. Traces of sand, coarse gritty and abrasive herbs will also cause the blades to wear prematurely. Herbs may contain volatile oils, cause the container/cup to retain the oils and cause permanent discoloration. Your container/cup and blades are not covered under the Vitamix warranty under these circumstances.

Vitamix will not be responsible for the cost of any unauthorised warranty repairs. Your Vitamix may only be serviced or repaired by an Authorized Vitamix Household Distributor/Service Provider.

REPAIR, REPLACEMENT OR REFUND OF THE PURCHASE PRICE ARE THE EXCLUSIVE REMEDIES OF PURCHASER AND THE SOLE LIABILITY OF VITAMIX AND ITS AUTHORISED DISTRIBUTORS UNDER THIS WARRANTY. NO EMPLOYEE OR REPRESENTATIVE OF VITAMIX OR ANY OF ITS AUTHORISED DISTRIBUTORS IS AUTHORISED TO MAKE ANY ADDITIONAL WARRANTY OR ANY MODIFICATION TO THIS WARRANTY WHICH MAY BE BINDING UPON VITAMIX. ACCORDINGLY, PURCHASER SHOULD NOT RELY UPON ANY ADDITIONAL STATEMENTS MADE BY ANY EMPLOYEE OR REPRESENTATIVE OF VITAMIX OR ANY OF ITS AUTHORISED DISTRIBUTORS. IN NO EVENT, WHETHER BASED ON CONTRACT, INDEMNITY, WARRANTY, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, SHALL VITAMIX BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF PROFIT OR REVENUE.

NOTE: If your Vitamix needs to be serviced but does not fall within the Warranty guidelines, it may still be repaired at your cost (for repair and shipping). Contact the Authorised Vitamix Household Distributor/Service Provider in your country, as listed on the International Contacts page of this Owner's Manual for further information.

5. WHAT VOIDS THIS WARRANTY.

- Abuse, misuse, negligent use, alteration of the Blender, exposure to abnormal or extreme conditions, or failure to follow the operating instructions in this manual will void this Warranty.
- The Warranty is also void if repairs to the Blender or any component part of the Blender are performed by someone other than either Vitamix or an authorised Vitamix Service Provider or if any component part of a Blender subject to this Warranty is used in combination with a motor base or container that is not expressly authorised by Vitamix.
- The warranty is void when the Blender is used with a transformers or adapters to convert the voltage.

6. HOW TO OBTAIN WARRANTY SERVICE.

Contact the Authorised Vitamix Household Distributor/Service Provider in your country, as listed on the International Contacts page of this Owner's Manual. They will provide guidance on how to get assistance in servicing your Vitamix.

