

ExtremeSteam® 2-in-1 Steamer with turbo

極速強效2合1手持蒸氣掛燙機



INSTRUCTION
BOOKLET
使用說明

CONAIR®

GS308TW

極速強效2合1手持蒸氣掛燙機

重要安全指示

當使用電器時，尤其有兒童在場，應小心及遵守以下安全指示：

使用前請細閱使用說明 電器應遠離水源

安全預防措施

警告：請小心包裝或產品上使用的塑膠袋，請擺放在遠離兒童的位置，因有可能會引起窒息。請勿於嬰兒床、睡床、嬰兒車或兒童遊樂園內使用。塑膠袋的薄層或會堵著鼻子及口腔，阻礙呼吸，此塑膠袋不是玩具，敬請小心以提防意外。

警告：切勿把電器放在臨近或有機會掉進浴缸或洗手盆的地方。

- 當電器在浴室使用後，應立即拔除插頭，因為電器接近水會導致危險，即使開關已關掉。
- 切勿把電器放入或掉進水或其它液體中。
- 如果電源線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
- 若電器曾掉落或水箱滲漏，請馬上停止使用。
- 切勿將已接上電源或開啟的電器置之不理。
- 如若在使用中有任何不妥，請馬上拔去插頭。
- 請不要使用非本產品提供的任何配件。
- 每次用完後或注水和清潔前請先拔去插頭。
- 本產品不該讓領有身心障礙手冊、感官有缺陷或缺乏使用電器經驗與常識的人（包括兒童）單獨使用，而應由有經驗及常識之監管人監察及指導下使用此產品。兒童請小心監督以保證他們不會把玩此產品。
- 待電器冷卻之後才收納。
- 為避免損壞電源線，收藏時切勿將電源線纏繞在電器上並確保其不被拉扯、扭曲或曲折。
- 若蒸氣出口太接近皮膚、頭皮或眼睛，或不恰當使用此電器，噴出的蒸氣會造成灼傷。為了減少接觸蒸氣噴出的熱水的危險，請在每次使用前以遠離人體的方式檢查電器。
- 切勿蒸熨正穿在身上的衣物。
- 接觸發熱的金屬部位、熱水或蒸氣將導致燙傷。將電器倒轉時請小心，因可能有熱水在水箱內。
- 若注水方法不正確，請勿開啟此電器，需用潔淨冷水來添加在水箱中，在硬水質地的地區推薦用蒸餾水或過濾水。
- 不建議使用延長線，但若有此必要，請使用13安培延長線。若使用低安培的延長線有可能引起過熱。請小心處理延長線，以防絆倒他人。
- 切勿猛力拉扯電源線，應抓住插頭部位拔去電源線。
- 僅限於使用蒸餾水或過濾水。

 
- 因掛燙機有發熱裝置、運作時將產生高溫蒸氣，使用時應特別注意小心，避免燙傷及高溫傷害。

注意：首次使用本掛燙機之前，建議先讓它運轉大約5分鐘，然後拉下電源並讓它冷卻。然後，在實際使用之前，排空儲水箱並重新注水。



僅限於家庭使用

儲水箱填裝指示說明：

- 請確保本產品電源插頭已從插座上拔除。
- 請將產品站立放置在桌上，並以單手拿起。
- 請將儲水箱從蒸氣掛燙機身上卸下。
- 橡膠入口蓋位於儲水箱頂部。
- 打開注水口蓋並以蒸餾水或過濾水可於一般商店購得。本公司建議僅使用蒸餾水或過濾水充填，因能防止鍋爐內的礦物質沉澱，這將會降低產品性能或堵塞出水系統。
- 將注水口蓋關閉並將水箱放回原處，請確保水箱安全卡住並裝穩。

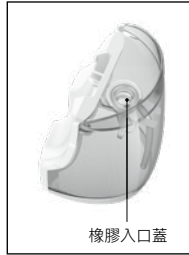

了解你的掛燙機

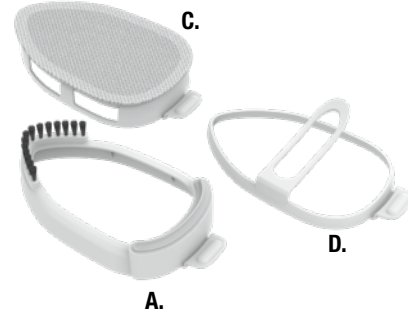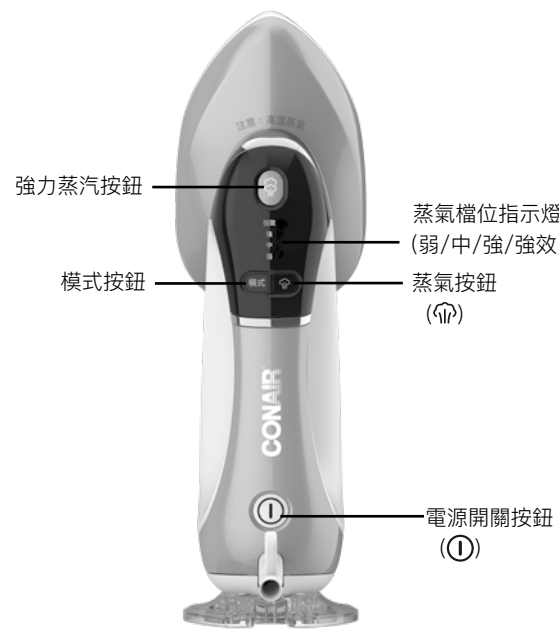  

配件

- (A) 砂膠帶 — 拉緊繩物使熨燙更簡易。
(B) 刷毛頭刷 — 鬆開纖維，使蒸氣容易滲透布料。
(C) 細織衣物保護罩 — 幫助保護精緻纖維與飾品。
(D) 折線壓條器 — 完美壓平褶線。

產品操作指示說明

- 使用蒸餾水或過濾水注入儲水箱內。
- 將設備插入電源插座。
- 按下位於掛燙機背面的電源開關按鈕，啟動蒸氣掛燙機。蒸氣檔位指示燈的設定會停留在「強」位置，並且開始閃爍。待設備暖機10秒鐘之後，當「強」指示燈維持亮著，不再閃爍時，就可以開始使用掛燙機。
- 掛燙機有熨燙烘乾的設定，如果沒有按下蒸氣按鈕，

- 掛燙機的面板就會以熨燙的模式運作。
本掛燙機有四種蒸氣檔位，重複按壓模式按鈕直到您想要的模式為止。精緻面料衣物請選擇「弱」。用於較厚的衣物纖維和嚴重皺褶的表面時，請選擇「強效」。
按下蒸氣按鈕以釋放蒸氣。拿起掛燙機開始使用，噴口請勿朝向自己或室內的任何人。

 
注意：本蒸氣掛燙機有智慧觸碰感應功能，如果沒有將掛燙機拿起離開平面，將不會釋放蒸氣。

- 按下按鈕即可獲得強效蒸氣。
- 要啟動智慧觸碰感應功能，按住模式按鈕2秒，直到檔位指示燈亮燈並緩慢閃爍，此時智慧觸碰感應功能就會啟動。一旦掛燙機放在平面上，智慧觸碰感應功能會自動暫停。要重新啟動掛燙機，只需將其拿起離開平面並可繼續使用。
- 按下電源開關按鈕，關閉電源。
- 使用完畢後，請拔除電源插頭。

二合一配件

- 砂膠帶** — 拉緊繩物以利蒸氣蒸燙。
刷毛刷 — 確保蒸氣滲透，讓壓力更為完整，適用於厚纖維面料上。
精緻軟罩 — 幫助保護精緻衣物纖維與飾品。
褶線器 — 壓平褲子、上衣、襯衫上的褶線。

配件的使用

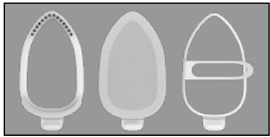

當手持式蒸氣掛燙機處於電源關閉且已冷卻時，將折線壓條器、細緻衣物保護罩、砂膠帶扣在掛燙機上方，確認其是穩固。二合一配件的部分，砂膠帶可以單獨使用，或者您可以選擇將刷毛頭插入砂膠帶上面的卡槽來使用。
注意：二合一配件一次只能選用一種用途。

注意事項：在掛燙機使用過後欲更換配件時，應格外小心謹慎，因為掛燙機頭此時依舊處於高溫狀態。

蒸氣小技巧

- 首先，在需使用蒸氣蒸燙之物品較不顯眼的部位，以最低的蒸氣檔位設定，確保纖維能夠承受蒸氣帶來的影響。若無損壞情形，則可繼續使用。
- 在您準備要以蒸氣處理的纖維上，使用刷毛頭梳理，去除多餘的纖維後，能使蒸氣滲透得更好。
- 把您的衣物吊掛起來。注意：儘可能避免使用金屬掛衣架。

- 注意事項：**如果是將衣物掛在門邊使用掛燙機，請留意蒸氣不要傷害到門。
在有皺褶的織物上方滑過掛燙機，可能需要重複滑過數次，才可完全消除皺褶。
針對較厚或者嚴重皺褶的織物，您可以直接將蒸氣頭放在織物上方停留數秒來壓平皺褶。請謹慎蒸燙精緻的織物。
使用完畢後，再按一次蒸氣按鈕來關閉蒸氣。接著再按下開關按鈕至關閉。保持手部乾燥，拔除掛燙機的插頭。將儲水箱中所有的水全部倒出，避免漏水。拔除插頭之前，請務必確認開關已處於關閉狀態。
使用掛燙機的時候必須保持不斷的移動，不要讓掛燙機停留在同一個部位，或者讓掛燙機頭與織物接觸超過數秒，因為這樣可能會造成織物損壞，包括縮小熔化、或者部分材料變色。
針對較厚、耐用的織物，像是羊毛大衣或寢具，使用「強效」蒸氣設定緩慢滑動掛燙機較能達成好的效果。開始使用前，請先在欲蒸燙織物較不顯眼的部位測試，使用不同的蒸氣設定確認織物可以承受蒸氣的影響，適時調整您的技巧，使成效更佳。
按下蒸氣按鈕可產生蒸氣，以去除最頑固的皺紋。每次使用蒸氣按鈕後，需暫緩數秒，以避免過於頻密至滴水。

清潔

- 使用後待一小段時間設備完全冷卻後再進行清潔工作，並將水箱內未使用完畢的水倒出。
- 將水箱外部完全拭乾。
- 請將此掛燙機放在嬰兒和兒童接觸不到的地方。
- 請勿將電源線纏繞在機器上，並確保在存放時不會扭曲或折疊電源線。
- 為維持設備之最高性能，應時常清除水垢。

備註：水中所含之礦物質可能因使用之地區的不同而有所差異。為確保掛燙機能持續正常運作，請僅使用蒸餾水或過濾水，且須於記得將儲水箱和儲水容器內多餘的水倒出後進行清潔和存放之工作。

使用者保養須知

您的掛燙機基本上毋須特別保養，不用加添潤滑油。切勿讓塵埃堵塞任何通風口或開口。若需清潔掛燙機，拔去電源線待冷卻後用微濕布拭抹表面。若掛燙機有任何損壞，拔去電源線並待之冷卻，然後交給香港美康雅香港有限公司台灣分公司。切勿自行維修電器。

警告

切勿拉扯及扭曲電源線。勿將電源線圍繞掛燙機。因超過一定的壓力電源線或會斷裂並引致短路。請常檢查電源線有否損壞。若有損壞，或於使用時間斷裂，請立即停止使用。

 
收存指示

不使用掛燙機時，拔去插頭並收存在安全、乾爽、遠離兒童的地方。切勿將電源線纏繞掛燙機。

注意：

若您認為關機視同截斷電源，
那便大錯特錯了。

遠離水源



眾所週知，電與水是個很危險的組合。但您知否電器開機後仍是帶電的？只要插上電源，電器仍是帶電的。所以用畢電器後，請拔去插頭。

所有小型家庭電器用畢後， 電源插頭必須拔掉。

一年保固限期

在您購買日期起一年內，並在正常情況下，如產品的品質或零件有任何不妥善之處，我們會為您免費提供維修或換貨服務。注意：此項保固不包括一切因錯誤使用、不依指示處理產品及意外損毀、遺失零件及經自行改造的產品。

保固期之後

請致電香港商美康雅香港有限公司台灣分公司 — 顧客服務中心，詢問維修服務詳情，客服電話：(886) 2-8751-3633，附上您的名字，電話號碼和電郵地址，以及產品問題之詳情。

顧客服務中心

114台北市內湖區瑞光路583巷24、26號6樓
香港商美康雅香港有限公司台灣分公司
消費者服務熱線：(886) 2-8751-3633



設備名稱：極速強效2合1手持蒸氣掛燙機，型號（型式）：GS308TW Equipment name: CONAIR STEAM 2-IN-1 WITH TURBO Type designation (Type): GS308TW						
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
外殼	○	○	○	○	○	○
噴頭鋁板	○	○	○	○	○	○
水泵	○	○	○	○	○	○
電源線	—	○	○	○	○	○
線路板組合	—	○	○	○	○	○
鐵管發熱器	○	○	○	○	○	○
備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.						
備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.						
備考3. “—”係指該項限用物質為排除項目。 Note 3: The “—” indicates that the restricted substance corresponds to the exemption.						

CONTINENTAL CONAIR LIMITED
CHINA CREATIVE DEPARTMENT

Date	7/28/2025
Customer	VS-TW
Model No.	GS308TW
Description	IB
Job No.	
Reference No.	IB-25/282
Revision No.	0
Color	1C+1C(Black)
Open Size	828mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Nancy Lin
Approved by	Ken Xiong
Vendor	Yan Sen
Supplier	

折疊方法
Folding method:
18 pages (9 x 2)



ExtremeSteam® 2-in-1 Steamer with turbo

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not use the unit if it has fallen or if it appears to be damaged or if it is leaking.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before filling or cleaning it.
9. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should

be supervised to make sure they do not treat the unit like a toy.

10. Allow the unit to cool before storing.
11. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
12. When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.
13. Do not steam garments while on a person.
14. Burns could occur from touching hot metal parts, hot water or steam. Use care when you turn steam appliance upside down.
15. Do not operate steamer without correctly filling the water container. Only use clean cold water for filling this appliance. In hard water areas, we recommend the use of distilled water or filtered water.
16. Use of an extension cord is not recommended. If an extension cord is absolutely necessary, a 13-ampere rated cord should be used. Cord rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
17. Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
18. Use distilled water or filtered water only.
19. Due to the heating device in the steam iron, it will generate high-temperature steam during operation. Special care should be taken during use to avoid burns and high-temperature injuries.

NOTE: Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplug the unit and allow it to cool. Empty container and refill before actually using.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

FILLING INSTRUCTIONS

 
 
1. Make sure the unit is unplugged.
2. Stand the unit on a table and grasp with one hand.
3. Pull the reservoir out, away from the steamer body.
4. The rubber inlet cover is located on the top of the water tank.
5. Open the inlet cover and fill the reservoir with distilled water or filtered water (which can be



found in grocery stores). We recommend that you use distilled water or filtered water only, as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system.

6. Close the inlet cover and return the reservoir to its place, making sure that it snaps in place and is secure.

GET TO KNOW YOUR STEAMER

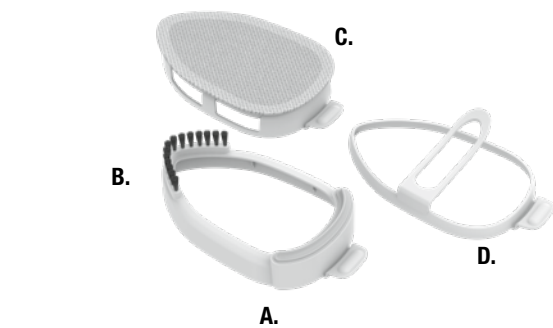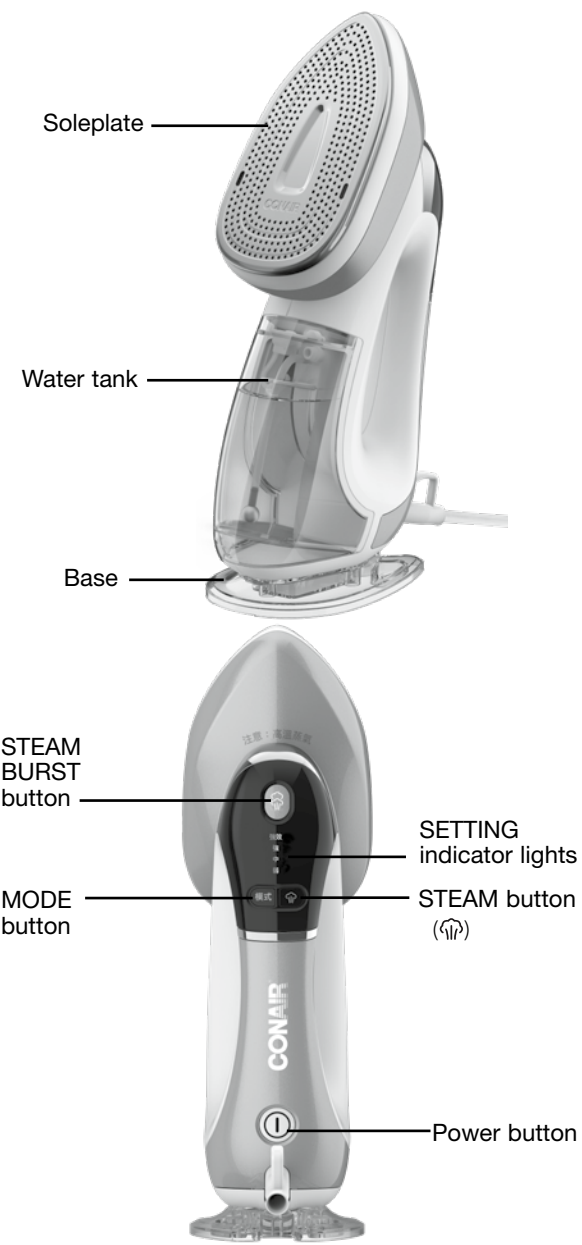

2-IN-1 ATTACHMENT

- (A) Silicone Band** – Pulls fabric taut for easier steaming.
(B) Bristle Brush – Loosens fibers for better steam penetration.
(C) Delicates Bonnet – Helps protect delicate fabrics and trims.
(D) Creaser – For perfect pleats and folds.

OPERATING INSTRUCTIONS

1. Fill water tank with distilled water according to directions.
2. Plug the unit into the electrical outlet.
3. Press the power button located at the bottom of the steamer to turn the unit on. The HIGH setting light will illuminate and begin blinking. Allow 10 seconds for the unit to warm up. The appliance is ready to use when the HIGH setting light stops blinking and remains solid.
4. This steamer has a dry iron setting. Without pressing the button, the soleplate of the steamer will get hot to use as an iron.
5. The steamer has 4 steam settings. Press the MODE button repeatedly until you reach desired setting. Choose LOW for use on delicate fabrics up to Turbo for use on thicker fabrics and heavily wrinkled items.
6. Pick up steamer, press the button, and begin steaming, pointing the jets away from you and anyone in the room.
NOTE: This steamer has a SMART TOUCH SENSOR feature. Steam will not emit until steamer is picked up from flat surface.
7. Press the button to get a powerful burst of steam.
8. To activate the SMART TOUCH SENSOR, hold the MODE button for 2 seconds until lights are flashing. Once lights are flashing, the SMART TOUCH SENSOR has been activated. Once steamer is placed down on a flat surface, the SMART TOUCH SENSOR will



- automatically pause steam. To restart steam, simply pick up steamer and begin steaming.
9. Press power button to turn unit OFF.
10. Unplug the device when it is not in use.

 
ATTACHMENTS

2-IN-1 ATTACHMENT

Silicone Band - pulls fabric taut for better results.
Bristle Brush - ensures steam penetrates fibers for a perfect press, even on heavy fabrics.
DELICATES BONNET – protects trims and fine fabrics.
CREASER ATTACHMENT – creates a crease in pants, shirts, blouses and more.

USING ATTACHMENTS

With the garment steamer off and cool, snap the 2-in-1 Silicone Band/Bristle Brush, Creaser or Delicates Bonnet attachment over the steam head, ensuring it is firmly affixed. For the 2-in-1 attachment, the Silicone Band can be used by itself.
NOTE: Only one function of the 2-in-1 attachment can be used at a time.

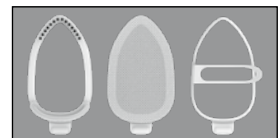

CAUTION: Use extreme care when changing the attachments after the unit has been in use, as the steam head will continue to be hot.

STEAMING TIPS

1. First, test unit on an inconspicuous area of the item to be steamed using the lowest Steam setting to ensure fabric can tolerate the effects of steam. If there is no evidence of damage, you can proceed to use the steamer on that item.
2. To prepare your fabric for steaming, brush it with the brush attachment. This will loosen the fibers and allow better steam penetration.
3. Hang your garment or fabric. **NOTE:** Avoid using metal clothes hangers, if possible.
CAUTION: If hanging garment on a door while steaming, be careful not to damage the door with steam.
4. Pass the steam jets just above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely.
5. For heavier fabrics or severely wrinkled fabrics, you may position the steamer head directly on the fabric for a few seconds to remove wrinkles. Be cautious when

working with delicate fabrics.

6. After use, turn steam off by pressing the button. Then press the power button to turn unit off. With dry hands, unplug your garment steamer from the outlet. Empty any remaining water from the reservoir to avoid leakage.
BE SURE TO PRESS THE ON/OFF BUTTON PRIOR TO UNPLUGGING THE UNIT.
7. When steaming, always keep the unit in motion. Do not continuously hold steamer over one area or touch steamer jets directly to fabric for more than a few seconds, as this can cause damage, including shrinkage, melting, or color shift on certain types of material.
8. In the case of heavier, durable fabrics, such as wool coats or bedding, the TUBRO setting and slower passes with the steamer may be necessary to achieve desired results. As always, start by testing on an inconspicuous area of the item to be steamed, using the lowest steam setting to ensure fabric can tolerate the effects of steam, and adjust your technique as needed to obtain the results desired.
9. Press button for a burst of steam to get out the most stubborn wrinkles. Pause between bursts for a few seconds to avoid dripping.

CLEANING

- After use – wait for it to cool down before cleaning and then remove any water left in water tank.
- Allow the water tank to dry thoroughly.
- Keep this garment steamer out of reach of babies and children.
- Do not wrap the power cord around the unit and ensure it is stored without twisting or folding it.
- For the best performance, limescale should be removed from time to time.
Note: Minerals in water will vary in different areas. To insure continued operation of the steamer, use only distilled water or filtered water, never store without cleaning and removing excess water from the reservoir and water container.

USER MAINTENANCE

Your unit is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to Conair Hong Kong LTD. Taiwan Branch. No repairs should be attempted by the consumer.

CAUTION

 
NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the unit. Damage will occur at the high flex point of entry into the unit, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your unit should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around unit.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under guarantee through the Conair Service Centre. Conair reserves the right to amend terms