


ASSEMBLY GUIDE

S-25 Stand

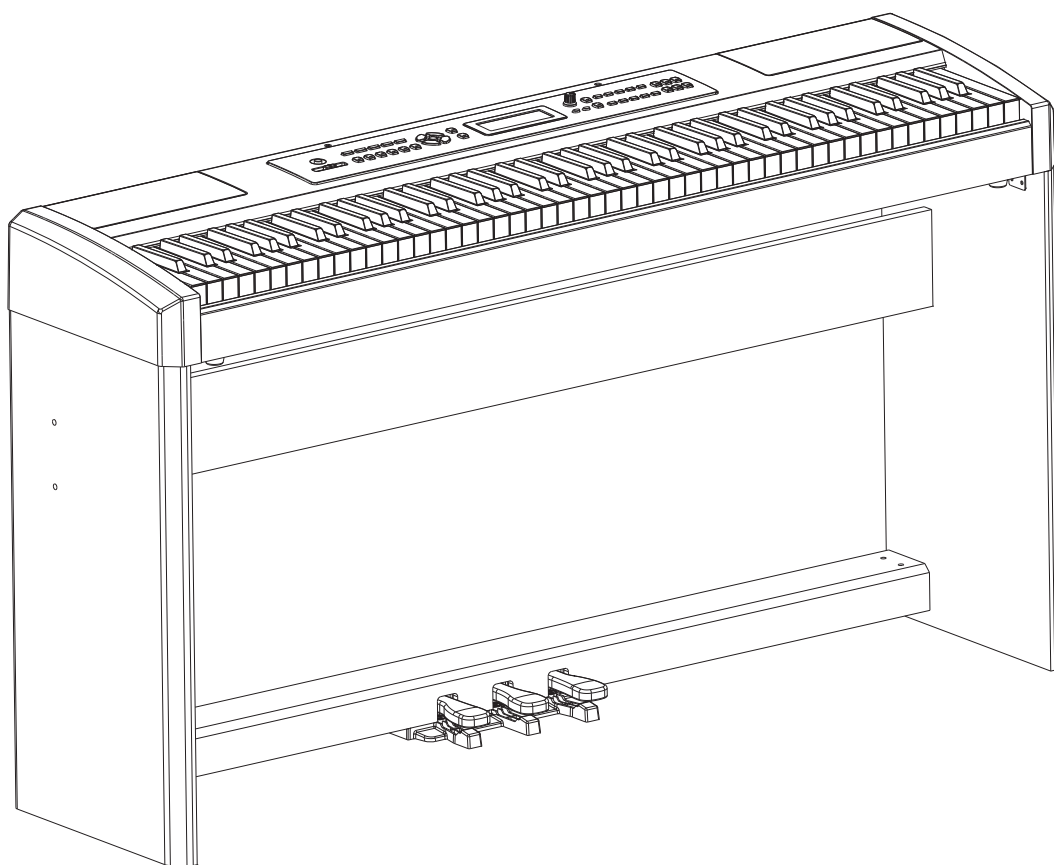

**DO NOT ASSEMBLY YOUR PIANO
BEFORE READING THIS GUIDE!**

Unboxing Your Piano

What's Included

A: 


X4 M6

B: 

X4 M6X55

C: 


X6 M6X16

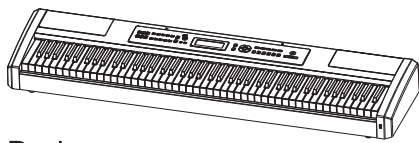



Piano Body



Back Panel

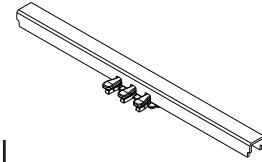


Pedal

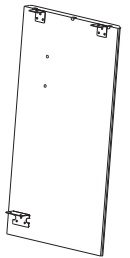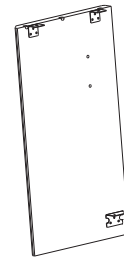


Legs

1. Attaching the Pedal Board


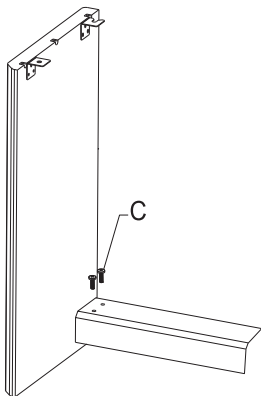


Starting with the right Stand Leg, align the holes in the Pedal Board with the holes in the Pedal Board Bracket as shown. Make sure that the pedals are facing towards the front of the Stand Legs.

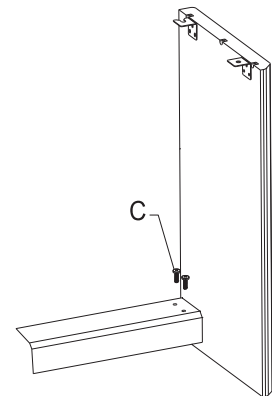


Thread two Bolts (C) through the Pedal Board and into the bracket. Repeat with the left Stand Leg and tighten all bolts fully.


2. Attaching the Back Panel and Piano Body

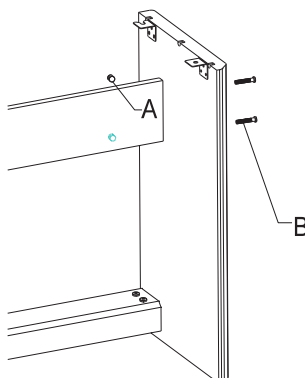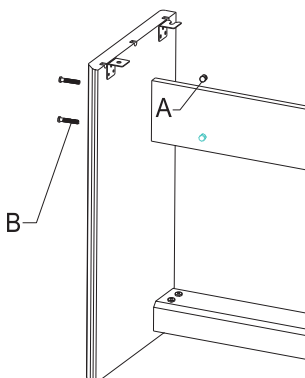

Use four Cylindrical Nuts(A) and four Bolts(B), attach the Back Panel to the left leg and right leg.

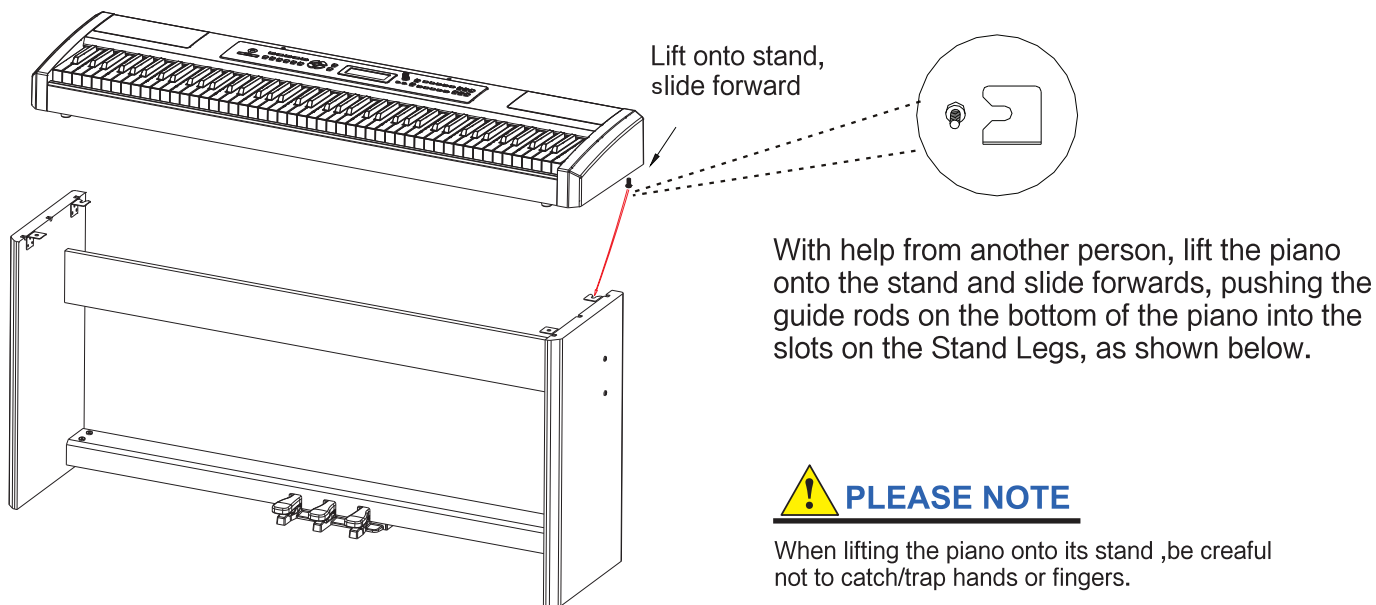


3. Securing the Piano Body

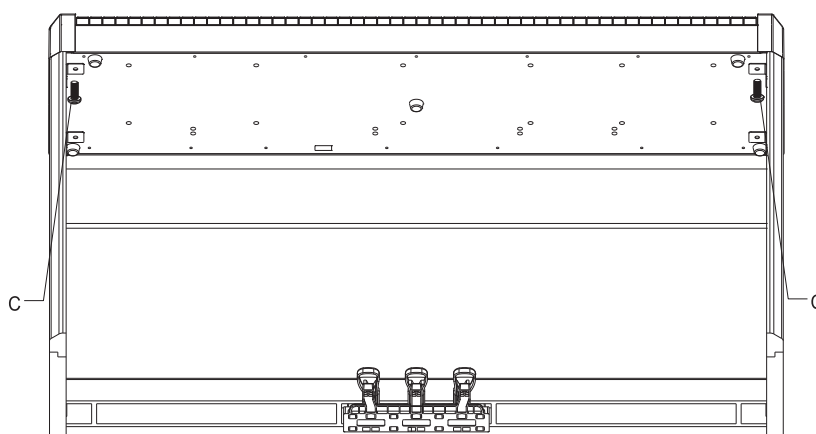

Finish attaching the piano to the stand by using the two Piano Body Bolts (C) to attach the bottom of the piano to its stand.

4. Connecting the Pedal Cable and Power Supply

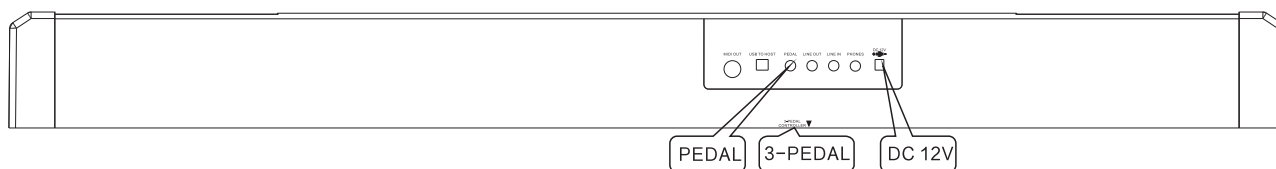

Attach the DC Power Cord and Pedal Cable into their connectors on the bottom of the piano as shown.

