



DETECT™ KITCHEN SYSTEM 強勁攪拌 + 專業調理 (運用 BLENDSense™ 技術) TB401TW | 使用者指南



重要安全說明

使用前請閱讀所有說明 • 僅供家庭使用

	請閱讀並複習操作與使用說明。
	表示若忽略與該符號相關的警告，將存在可能導致人身傷害、死亡或重大財產損失的危險。
	僅供家庭使用。
	表示連接 USB-C 線以為裝置充電的位置。
使用電器產品時，應一律遵循基本安全注意事項，包括以下內容：	

警告：為降低受傷、火災、電擊或財產損失的風險，必須一律遵循基本安全注意事項，包括以下編號警告及後續說明。請勿將本設備用於非原設計用途。

- 1 使用本設備及其配件前，請先閱讀所有說明。
- 2 本產品配備 Ninja Detect™ Total Crushing™ 和切碎刀片（三層立體刀片組件）和切碎刀片組件。**務必**小心處理刀片組件。刀片組件鬆脫、鋒利，且**並非**完全固定在容器中。刀片組件採用可拆卸設計，方便清潔以及按需更換。**僅**從中心軸頂部握持刀片組件。操作刀片組件時若未小心作業，將有造成割傷的風險。
- 3 Hybrid Edge™ 刀片組件鬆脫且鋒利，請小心操作。清潔過程中，在清空調理壺、調理碗或隨行杯時，處理鬆脫、鋒利的刀片組件須特別小心。
- 4 操作前請確認已移除容器中的所有器具。未取出器具可能會導致容器破裂，造成人身傷害與財物損壞。
- 5 **請勿**攪拌高溫、起泡或碳酸液體或食材，否則可能導致壓力升高，進而造成割傷或燙傷的風險。
- 6 完成攪拌後，請從隨行杯移除 Hybrid Edge 刀片組件。**請勿**在刀片組件未移除時，將未攪拌或攪拌後的食材存放在容器內。某些食物可能含有活性成分或會釋放氣體，若存放於密封容器中，可能膨脹而產生過大壓力，導致割傷、燙傷或財物損壞的風險。
- 7 仔細觀察並遵循所有警告和說明。本設備含有電力連接與活動零件，可能對使用者造成風險。
- 8 **務必**慢慢進行拆箱與設定設備，並小心操作。刀片鬆脫且鋒利。**務必**小心處理刀片組件。本設備內含鋒利、鬆脫的刀片，若操作不當可能導致割傷。
- 9 請清點所有內容物，以確保您擁有正確、安全操作本設備所需的全部零件。
- 10 處理食物完畢後，務必先移除刀片組件，**然後再**清空容器的內容物。取出刀片組件時，請小心握住中心軸頂部，然後從容器中提起。在清空容器之前若沒有取出刀片組件，可能導致割傷風險。
- 11 如果使用調理壺的壺嘴，傾倒時請扶住容器蓋子或確認蓋子已鎖緊，以避免割傷風險。
- 12 **僅**從 Hybrid Edge™ 刀片組件底座的外緣握持刀片組件。操作刀片組件時若未小心作業，將有造成割傷的風險。
- 13 若要組裝或拆卸零件或者清洗設備，請先將設備**關閉**，將設備插頭從插座拔除，再完成上述作業。拔除電源時，請握住插頭本體並從插座拔出。**切勿**拉扯電源線來拔除插頭。
- 14 每次使用前，請檢查刀片組件是否有損壞。
- 15 **請勿**在室外使用此設備。本產品僅限於室內家庭使用。
- 16 本設備配有極化插頭（其中一邊的刀片比另一邊刀片寬）。為降低觸電風險，此插頭只能以一種方向插入極化插座。若插頭無法完全插入插座，請將插頭反向插入。若仍無法插入，請聯絡合格的電工。**切勿**以任何方式改裝插頭。

重要安全說明

使用前請閱讀所有說明・僅供家庭使用

- 17 請勿**在電線或插頭損壞、設備故障、曾摔落或以任何方式受損的情況下操作本設備。本設備不含可供使用者自行維修的零件。如有損壞，請聯絡 SharkNinja 進行維修。
- 18** 本設備的插頭金屬刀片上印有重要標示。整條電源線皆不可更換。如有損壞，請聯絡 SharkNinja 進行維修。
- 19 請勿**將本設備與延長線搭配使用。
- 20** 為防止觸電風險，**請勿**將本設備浸入水中，也請避免電源線接觸任何形式的液體。
- 21 請勿**讓電源線懸在桌子或檯面的邊緣，否則可能勾住其他物件，將設備扯落工作台。
- 22 請勿**讓設備或電線接觸高溫表面，包括爐具或其他正在加熱的設備。
- 23 務必**在乾燥且平坦的表面上使用本設備。
- 24 請勿**讓兒童操作本設備或當作玩具使用。在兒童附近使用任何設備時需密切監督。
- 25** 本設備**不**適合身體、感官或心智能力受限者，或缺乏經驗與知識者單獨使用，除非負責其安全的人員在旁監督或指導設備的使用方式。
- 26 僅**使用產品隨附或 SharkNinja 建議的附件與配件。使用非 SharkNinja 建議或販售的配件 (包括罐頭瓶) 可能導致火災、觸電或人身傷害。
- 27 切勿**將刀片組件或圓盤刀片直接放置於馬達底座上，這些組件必須先安裝在對應的容器 (如：調理壺、隨行杯或調理碗) 中並且蓋妥蓋子。
- 28** 裝入食物和操作設備時，請勿將手、頭髮或衣物伸入容器內。
- 29** 操作與處理設備時，請避免接觸運轉中的零件。
- 30 請勿**裝載容器至超過**MAX FILL(最大裝載線)**或**MAX LIQUID(最高水位線)**，以避免因蓋子或容器損壞而造成受傷風險。
- 31 請勿**在容器空無一物時操作設備。
- 32 請勿**將任何設備所提供的容器或配件放入微波爐中加熱。
- 33 切勿**在使用時讓設備處於無人看管的狀態。
- 34 請勿**使用隨行杯搭配 Hybrid Edge 刀片組件、調理壺搭配三層立體刀片組件或調理碗搭配切碎刀片組件來處理乾性食材。
- 35 請勿**使用隨行杯搭配 Hybrid Edge 刀片組件、調理壺搭配三層立體刀片組件或調理碗搭配切碎刀片組件來執行研磨操作。
- 36 切勿**在未蓋妥上蓋的情況下操作本設備。**請勿**嘗試破壞安全鎖機制。操作前，請確保已正確安裝容器和蓋子。
- 37** 在處理食物時，請勿讓手和器具接近運轉中的刀片或圓盤刀片，以降低造成嚴重人身傷害或調理機損壞的風險。**僅限**在調理機未運轉時使用刮刀。
- 38** 如果發現未混合的食材黏在杯壁上，請停止運轉設備，取下刀片組件，並使用刮刀將食材刮除。
- 39 請勿**在調理機運轉過程中打開調理壺。
- 40** 如果發現未混合的食材黏在調理壺壁上，請停止運轉設備，取下蓋子，並使用刮刀將食材刮除。**切勿**將手伸入調理壺內，以免接觸到刀片並造成割傷。
- 41 請勿**在刀片組件仍在旋轉時，嘗試從馬達底座移除容器或蓋子。請等待設備完全停止後，再移除蓋子和容器。
- 42** 若設備過熱，熱保護程序將會啟動並暫時馬達運轉。若要重設，請拔除設備插頭，讓設備冷卻約 30 分鐘後再使用。
- 43 請勿**讓容器與配件曝露於極端溫度變化環境下，否則可能導致損壞。
- 44** 此設備的最大瓦數額定值基於 Hybrid Edge™ 刀片組件和隨行杯配置而設。其他配置可能會消耗較少的功率或電流。
- 45 請勿**將馬達底座或控制面板浸入水中或其他液體中。**請勿**將任何液體噴灑在馬達底座或控制面板上。
- 46 請勿**嘗試自行磨利刀片。

47 在清潔前，請先關閉設備並拔除馬達底座的插頭。

48 此設備用於形成麵團，**並非**用於持續揉麵。麵團成型後，應在工作台上用手繼續揉麵。如果設備在工作台上過度移動，請將麵團取出並用手揉麵。


49 切勿用手將食物放入調理碗中。**務必**將隨附推桿與進料口上蓋搭配使用。

50 請勿誤用本設備，以避免造成可能的傷害。

請妥善保存此說明

零件

- A** 帶壺嘴的調理壺上蓋
B Ninja Detect™ Total Crushing™ 及切碎刀片 (三層立體刀片組件)
C 2.1 公升*全尺寸調理壺
D 強效調理碗進料口上蓋與推桿
E 雙面切片/切絲盤
F 切碎刀片組件
G 中心軸
H 麵團刀片組件
I 1.8 公升強效調理碗
J 即飲杯蓋
K Hybrid Edge™ 刀片組件
L 700 毫升隨行杯
M 馬達底座 (未展示隨附電源線)

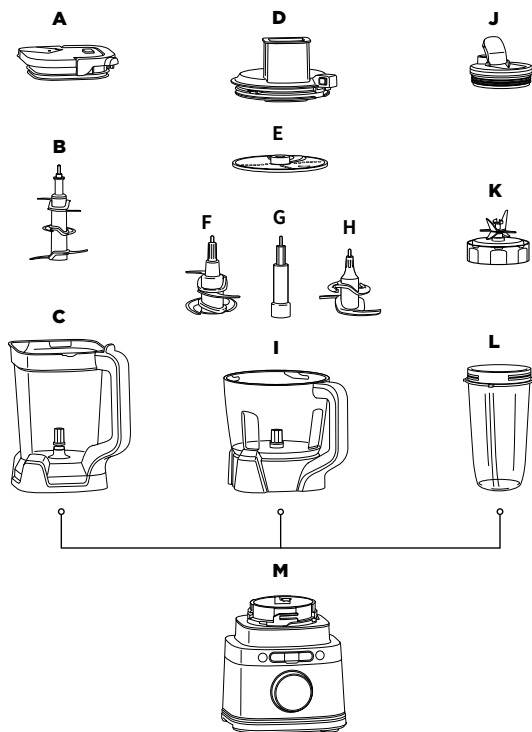

*最大液體容量為 1.9 公升。

如需購買更多配件並發掘優秀的食譜，
請造訪 sharkninja.tw。

第一次使用前

重要事項：請在繼續操作前閱讀本使用者指南開頭的所有警告。

警告：三層立體刀片組件和切碎刀片組件並未完全固定在調理壺內。拿取三層立體刀片組件和切碎刀片組件時，請握持中心軸頂部。

- 請移除設備上的所有包裝材料。請小心拆封三層立體刀片組件、Hybrid Edge 刀片組件和切碎刀片組件，因為刀片鬆脫且鋒利。
- 拿取 Hybrid Edge 刀片組件時，請握持刀片組件底座的邊緣。
- 清洗容器、蓋子和刀片組件時，請使用帶柄的洗碗工具，在溫肥皂水中清洗，以避免直接接觸刀片。刀片組件鬆脫且鋒利，請小心作業。
- 徹底沖洗所有零件，然後自然風乾。
- 請用軟布擦拭控制面板。使用前請確保面板完全乾燥。

注意：所有配件皆不含 BPA。配件可放置於洗碗機上層清洗，但不可使用加熱烘乾行程。將容器放入洗碗機前，請務必先取下刀片組件與蓋子。請小心操作刀片組件。

 
BLENDSENSE™ 技術

智慧 BlendSense 程式顛覆傳統攪拌方式，能夠感測食材並攪拌至完美效果。BlendSense 程式將預設啟用。按下 **⏻** 按鈕，再按 START/STOP (開始/停止)。程式開始運行後，會在攪拌完成時自動停止。若要在程式結束前停止攪拌，請再次按下旋鈕。

只需按下旋鈕即可啟動 BlendSense 程式。



初始攪拌



攪拌模式




注意：選擇攪拌模式後，螢幕會以秒數開始累計運行時間。總運行時間從幾秒到將近兩分鐘不等。

錯誤偵測



使用控制面板

注意：按下旋鈕以開始或停止任何程式。旋轉旋鈕以選擇程式。

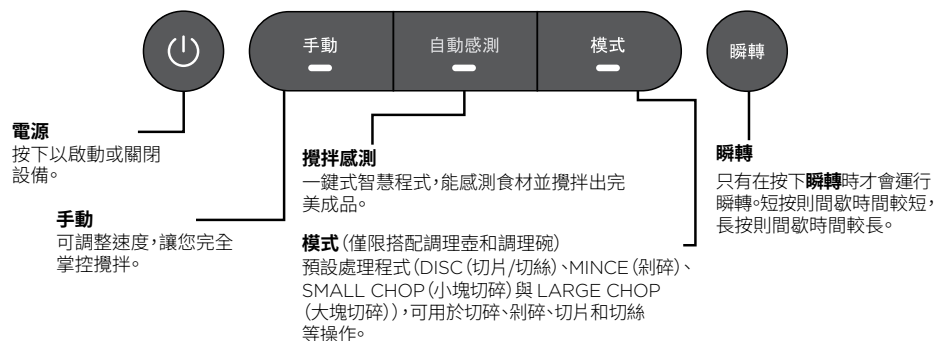

處理模式程式



DISC (切片/切絲)：僅限搭配調理碗。搭配雙面切片/切絲盤使用。

MINCE (剁碎)、SMALL CHOP (小塊切碎) 與 LARGE CHOP (大塊切碎)：僅限搭配調理壺和調理碗。智慧預設程式結合獨特的瞬轉模式，自動完成食材處理。

按下模式，轉動旋鈕選擇所需程式，然後按 START/STOP (開始/停止) 以啟動。程式會在完成後自動停止。如需提前停止程式，再次按下旋鈕即可。這些程式無法與 BlendSense 程式或手動程式同時使用。

注意：螢幕將顯示程式運行的秒數。

手動程式



切換至手動模式，可全面掌控攪拌速度與成品質地。按下手動，轉動旋鈕選擇所需程式，然後按 START/STOP (開始/停止) 以啟動。選擇後，設備會在每個速度下持續運行 60 秒。如需提前停止程式，再次按下旋鈕即可。手動程式無法與 BlendSense 程式或處理模式程式同時使用。

可變速度控制 (速度 1-10)：僅限搭配調理壺。

慢速啟動 (速度 1-3)：請務必從低速開始，這樣可以更均勻地融合食材，防止食材黏在容器壁上。

轉動旋鈕提升速度 (速度 4-7)：較絲滑的攪拌需要較高的速度。低速適合切碎蔬菜，製作果泥或醬汁則需要提高速度。

高速攪拌 (速度 8-10)：持續攪拌直至達到所需的質地。攪拌的時間越長，食材分解得越徹底，成品也會越順滑。

LOW (低)、MEDIUM (中) 或 HIGH (高)：僅限搭配隨行杯和調理碗。

注意：選擇速度後，螢幕會以秒數開始累計運行時間。

使用調理壺

重要事項：

- 請在繼續操作前閱讀本使用者指南開頭的所有警告。
- 作為安全設計，若壺身與蓋子未正確安裝，計時器將顯示 **INSTALL (安裝)** 提示，且馬達將無法啟動。若出現此情況，請重複本頁的**步驟 5**。

警告： Ninja Detect Total Crushing 與切碎刀片組件 (三層立體刀片組件) 鬆脫而鋒利，且並非完全固定。若使用壺嘴，請確保蓋子已完全鎖緊在調理壺上。若要在未蓋蓋子時倒出內容物，請先握住中心軸小心取出三層立體刀片組件。若未遵循此操作，可能造成割傷風險。

注意：


- 請勿在安裝好三層立體刀片組件之前加入食材。
- 若三層立體刀片組件未完全就位，將無法安裝並鎖緊蓋子。
- 調理壺上蓋的提把僅在蓋子安裝於壺身時才能折疊。
- 請勿處理或研磨乾性食材。
- 為獲得最佳效果，請使用隨行杯來攪拌新鮮的葉菜類蔬菜和香草。

- 將馬達底座連接電源並放置在乾淨、乾燥且平穩的表面上，如：檯面或桌子。
- 將調理壺嵌入馬達底座。把手應略微對齊右側，壺身應朝向能露出馬達底座上**鎖定**標誌的方向。順時針旋轉壺身，直至聽見咔嚓聲並固定到位。
- 小心操作，握住三層立體刀片組件的中心軸頂部，然後將其放置於調理壺內部的驅動齒輪上。請注意，刀片組件會鬆脫地安裝在驅動齒輪上。
- 將食材加入調理壺中。**請勿**加入食材至超過 **MAX LIQUID (最高水位)** 線。




- 用蓋子蓋住調理壺。按下提把，直至聽見咔嚓聲並固定到位。蓋子鎖定後，按下電源按鈕以啟動設備。BlendSense 程式會亮起。
- 如欲使用 BlendSense 程式，只需按下旋鈕即可。程式會在完成後自動停止。若要隨時停止設備，請再次按下旋鈕。

- 如欲使用處理模式程式，請選擇**模式**，然後使用旋鈕選擇所需程式。按下旋鈕以啟動。程式會在完成後自動停止。若要隨時停止設備，請再次按下旋鈕。
- 如欲使用手動程式，請選擇**手動**，然後使用旋鈕選擇所需速度 (1-10)。按下旋鈕以啟動。當食材達到您想要的質地後，可再次按下旋鈕，或等待 60 秒，讓設備完全停止運轉。
- 要從馬達底座取下調理壺，請將調理壺逆時針旋轉，然後提起。

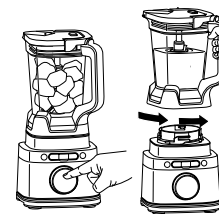

- 要傾倒較稀的混合物，請確保蓋子已鎖緊，然後打開即飲杯蓋。

- 若較濃稠的混合物無法從壺嘴倒出，請在傾倒前取下蓋子和三層立體刀片組件。要移除蓋子，請按下**釋放**按鈕並提起提把。要取出刀片組件，請小心握住中心軸頂部，然後垂直提起。隨後即可清空調理壺。
- 按下電源按鈕以關閉設備，然後拔下電源插頭。請參閱「保養與維護」一節，了解清潔與收納說明。

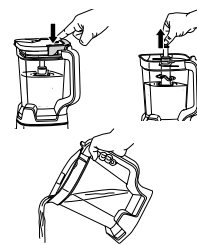

使用高效調理碗刀片組件

重要事項：


- 請在繼續操作前閱讀本使用者指南開頭的所有警告。
- 作為安全設計，若調理碗與蓋子未正確安裝，計時器將顯示 **INSTALL (安裝)** 提示，且馬達將無法啟動。若出現此情況，請重複本頁的**步驟 5**。

⚠警告：切碎刀片組件鬆脫、鋒利，且並非完全固定。倒出碗內的混合食材之前，請先握住中心軸小心取出刀片組件。若未遵循此操作，可能造成割傷風險。

注意：

- 請勿處理或研磨乾性食材。
- 請勿在安裝好刀片組件之前加入食材。
- 按照與切碎刀片組件相同的說明安裝麵團刀片組件。

- 將馬達底座連接電源並放置在乾淨、乾燥且平穩的表面上，如：檯面或桌子。
- 將強效調理碗嵌入馬達底座並順時針轉動，直至聽見咔嚓聲並固定到位。
- 安裝刀片組件時，請小心握住切碎刀片組件中心軸頂部，然後將其放置在碗內的驅動齒輪上。請注意，切碎刀片組件會鬆脫地安裝在驅動齒輪上。
- 將食材加入碗中，確保不要超過 **MAX FILL (最大裝載)** 線。

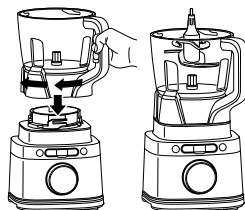

- 將進料口上蓋放在碗上，然後順時針轉動，直至聽聽見咔嚓聲，表示蓋子已固定到位。蓋子鎖定後，按下電源按鈕以啟動設備。BlendSense 程式會亮起。


- 如欲使用 BlendSense 程式，只需按下旋鈕即可。程式會在完成後自動停止。若要隨時停止設備，請再次按下旋鈕。
- 如欲使用處理模式程式，請選擇 **模式**，然後使用旋鈕選擇所需程式。按下旋鈕以啟動。程式會在完成後自動停止。若要隨時停止設備，請再次按下旋鈕。



注意：使用切碎刀片組件時，建議選擇 MINCE (剁碎)、SMALL CHOP (小塊切碎) 或 LARGE CHOP (大塊切碎) 模式。使用麵團刀片組件時，不建議同時使用處理模式程式。

- 如欲使用手動程式，請選擇**手動**，然後使用旋鈕選擇所需速度 (LOW (低)、MEDIUM (中) 或 HIGH (高))。按下旋鈕以啟動。當食材達到您想要的質地後，可再次按下旋鈕，或等待 60 秒，讓設備完全停止運轉。

注意：使用麵團刀片組件時，僅限選擇 LOW (低) 速。

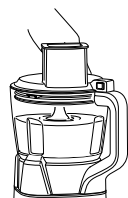


- 完成後，按下蓋子上靠近提把的按鈕來解鎖，然後逆時針旋轉，將蓋子從碗上提起。倒出碗內的食材前，請務必先取出切碎刀片組件。要取出切碎刀片組件，請小心握住中心軸頂部，將其從碗中提起。
- 要將調理碗從馬達底座上取下，請先逆時針旋轉碗身，然後向上提起。
- 按下電源按鈕以關閉設備，然後拔下電源插頭。請參閱「保養與維護」一節，了解清潔與收納說明。

使用雙面切片/切絲盤

注意：

- 切片/切絲盤為雙面可用設計。請使用標示為 Slicer (切片刀盤) 的一面進行切片。小心地將刀盤翻轉至標示為 Shredder (切絲刀盤) 的一面以進行切絲。
- 進料口蓋上配有推桿，用來引導食材通過進料口。


- 將馬達底座連接電源並放置在乾淨、乾燥且平穩的表面上，如：檯面或桌子。
- 將強效調理碗嵌入馬達底座並順時針轉動，直至聽見咔嚓聲並固定到位。
- 若要安裝雙面切片/切絲盤，請將刀盤軸心放置於碗內的驅動齒輪上。接著，抓住雙面切片/切絲盤的指孔，將其放置於刀盤軸心上，並確保您要使用的一面朝上。

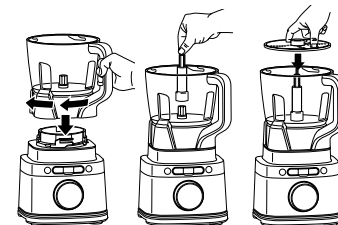

- 將進料口上蓋放在碗上，然後順時針轉動，直至聽聽見咔嚓聲，表示蓋子已固定到位。蓋子鎖定後，按下電源按鈕以啟動設備。BlendSense 程式會亮起。



5a 如欲使用處理模式程式，請選擇**模式**，然後使用旋鈕選擇刀盤。

5b 如欲使用手動程式，請選擇**手動**，然後使用旋鈕選擇所需速度 (建議選擇 LOW (低) 速)。

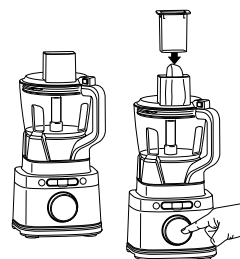

注意：不建議在使用雙面切片/切絲盤時同時使用 BlendSense 程式。

 - 按下旋鈕以啟動程式。將備好的食材放入蓋子上的進料口，準備切片或切絲。使用推桿引導食材通過進料口。程式完成後刀盤會自動停止旋轉。若要隨時停止設備，再次按下旋鈕即可。
- 若要取下蓋子，請按下進料口蓋子上靠近提把的按鈕來解鎖，然後逆時針旋轉蓋子，將蓋子從碗上提起。
- 抓住指孔，小心地將刀盤從調理碗中取出。接著，握住中心軸頂部，將其從碗中提起。

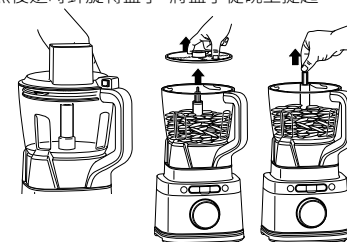

- 要將調理碗從馬達底座上取下，請先逆時針旋轉碗身，然後向上提起。
- 按下電源按鈕以關閉設備，然後拔下電源插頭。請參閱「保養與維護」一節，了解清潔與收納說明。

 

使用隨行杯

重要事項：請在繼續操作前閱讀本使用者指南開頭的所有警告。

⚠警告：

- **Hybrid Edge 刀片組件很鋒利，請小心處理。**
- **處理前請取出所有器具。若未取出，可能會導致隨行杯損壞或破裂，並可能造成人身傷害。**
- **請勿攪拌高溫、起泡或碳酸液體，否則可能導致壓力升高，進而造成割傷或燙傷的風險。**
- **請勿處理或研磨乾性食材。**
- **完成攪拌後，請從隨行杯移除 Hybrid Edge 刀片組件。請勿在刀片組件未移除時，將未攪拌或攪拌後的食材存放在容器內。某些食物可能含有活性成分或會釋放氣體，若存放在密封容器中，可能膨脹而產生過大壓力，導致受傷風險。**

- 1 將馬達底座連接電源並放置在乾淨、乾燥且平穩的表面上，如：檯面或桌子。
- 2 將食材加入隨行杯。**請勿**加入食材至超過杯中的 **MAX LIQUID (最高水位)** 線。
- 3 將 Hybrid Edge 刀片組件安裝到杯子頂部。順時針旋轉蓋子，直至緊密閉合。

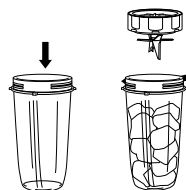


- 4 將杯子倒置並安裝在馬達底座上。將杯子上的卡榫對準底座上的插槽，然後順時針旋轉杯子，直至聽見咔噠聲並固定到位。杯子鎖定後，按下電源按鈕以啟動設備。BlendSense 程式會亮起。

5a 如欲使用 BlendSense 程式，只需按下旋鈕即可。程式會在完成後自動停止。若要隨時停止設備，請再次按下旋鈕。

5b 如欲使用手動程式，請選擇**手動**，然後使用旋鈕選擇所需速度 (LOW (低)、MEDIUM (中) 或 HIGH (高))。按下旋鈕以啟動。當食材達到您想要的質地後，可再次按下旋鈕，或等待 60 秒，讓設備完全停止運轉。




 注意：調理模式程式僅限搭配調理壺使用。



- 6 要將隨行杯從馬達底座上取下，請先逆時針旋轉杯身，然後向上提起。
- 7 逆時針旋轉蓋子，即可將 Hybrid Edge 刀片組件取下。**請勿**在刀片組件未移除時，將攪拌後的內容物存放在容器內。刀片組件很鋒利，請小心作業。

- 8 按下電源按鈕以關閉設備，然後拔下電源插頭。請參閱「保養與維護」一節，了解清潔與收納說明。
- 9 若要隨身攜帶以隨時享用飲品，請用即飲杯蓋蓋住杯口，並順時針擰緊蓋子，直至完全密封。將食材儲存在杯子中時，僅使用即飲杯蓋來蓋住杯口。

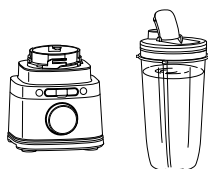

保養與維護

清潔

將所有零件拆開，並使用柔軟布料在溫肥皂水中清洗所有容器。

• 手洗

清洗刀片組件時，請使用帶柄的洗碗工具，在溫肥皂水中清洗，以避免直接接觸刀片。刀片組件鬆脫且鋒利，請小心作業。徹底沖洗所有零件，然後自然風乾。

• 洗碗機

配件可放置於洗碗機上層清洗，但**不可**使用加熱烘乾行程。將容器放入洗碗機前，請務必先取下刀片組件。請小心操作刀片組件。

• 馬達底座

清潔前請先關閉設備並拔除馬達底座的插頭。請用乾淨的濕布擦拭馬達底座。**請勿**使用磨蝕性布料、海綿或刷具清潔底座。

收納

收納電線時，請用魔鬼氈將電線繞在馬達底座後方附近收納。**請勿**將電線繞在底座下方收納。請直立收納設備，並將所有刀片組件放入或固定於各自的容器內，同時將蓋子固定到位。

請勿在 Hybrid Edge 刀片組件未移除時，將未攪拌或攪拌後的食材存放在隨行杯內。

請勿將物品堆疊在容器上方。將其餘配件與設備存放在一起，或放置於不會造成損壞或引發危險的櫃子中。

重設馬達

此設備設有獨特的安全系統，可防止在不小心過載時損壞馬達和驅動系統。如果設備過載，馬達會暫時停止運轉。若發生此情況，請按照以下步驟進行重置。

- 1 將設備從插座拔除。
- 2 讓設備冷卻約 15 分鐘。
- 3 移除容器的蓋子和刀片組件。清空容器並確保沒有食材卡住刀片組件。

重要事項：請確保不要超過最大容量。這是設備過載的最常見原因。

訂購替換零件

欲訂購額外零件與附件，請造訪 sharkninja.tw。

故障排除指南

⚠警告：為降低觸電及意外操作的風險，請在執行故障排除前先關閉電源並拔除插頭。

連接電源後，螢幕會顯示 **INSTALL (安裝) 提示**。

- 將容器放在底座上順時針旋，直至聽見咔嚓聲並固定到位。按下電源按鈕  啟動設備，BlendSense 程式會亮起，表示設備已準備就緒。

在 **BlendSense 程式運行期間**，螢幕顯示「**ADD LIQUID 0**」(加入液體) 提示。

- 若在 BlendSense 程式運行期間，螢幕顯示「ADD LIQUID 0」(加入液體) 提示，表示設備偵測到需要更多液體以完成攪拌。按下 START/STOP (開始/停止)，將杯子從底座取下，然後額外加入 $\frac{1}{2}$ 至 1 杯液體。重新將杯子安裝回底座後，再按下 START/STOP (開始/停止) 以重新運行 BlendSense 程式。此功能僅限搭配隨行杯使用。

螢幕顯示「**Er**」(錯誤)。

- 若螢幕顯示「Er」(錯誤)，請將設備從插座拔除，讓其冷卻 15 分鐘。移除容器的蓋子和刀片組件，清空內容物，確認是否有食材卡住刀片組件。

蓋子或 **Hybrid Edge 刀片組件** 難以安裝至杯子上。

- 將杯子放在平坦的表面上。小心地將蓋子或 Hybrid Edge 刀片組件放在杯子頂部，對準螺紋，讓蓋子或刀片組件平穩地嵌入杯中。順時針旋轉，直至緊密閉合。

無法均勻攪拌；食材卡住。

- 使用 BlendSense 程式是達到理想攪拌效果最簡單方法。其瞬轉與暫停模式能讓食材下沉至刀片組件附近。若食材經常卡住，加入一些液體通常會有所幫助。
- 在裝載杯子時，請依以下順序放入食材：先加入液體或優格，接著放入新鮮水果或蔬菜，然後是葉菜類或香草，再加入種子、粉末或堅果醬，最後再放入冰塊或冷凍食材。

馬達底座無法吸附在檯面或桌面上。

- 確認檯面及吸盤腳已擦拭乾淨。吸盤腳僅能吸附在光滑表面上。
- 吸盤腳無法吸附在某些表面上，例如：木頭、瓷磚或未拋光的表面。
- 請勿在馬達底座吸附於不穩固表面（如：砧板、托盤、餐盤等）時使用設備。

設備難以從檯面取下以進行收納。

- 將雙手放在馬達底座兩側下方，輕輕將設備向上並朝自己方向拉起。

設備螢幕顯示閃爍的「- -」訊息。

- 設備能辨識安裝於馬達底座上的容器。您可能嘗試啟動與所使用容器不相容的程式。螢幕上的程式按鈕會亮起，顯示該容器可使用的對應程式。

食物未均勻切碎。

- 為了達到最佳效果，請將食材切成大小均勻的塊狀，並避免裝載過多內容物到容器中。

調理壺蓋子提把無法折疊。

- 如果蓋子未安裝在調理壺上，提把將無法折疊。為方便收納，請將蓋子蓋在調理壺上，然後按壓提把直至聽見咔嚓聲並固定到位。

Shark NINJA

— (1) 年有限保固

NJA_1_YR_IB_LMTD_WRNTY_TW_TC

此一 (1) 年有限保固適用於從**新加坡商維諾瓦股份有限公司臺灣分公司**授權零售商購買的產品。保固範圍僅適用於原購買人及原產品，且不得轉讓。

SharkNinja 保證在正常家庭使用條件下，並依照《使用者指南》中所示的要求進行維護的情況下，本產品自購買日起一 (1) 年內不會出現材料或做工上的瑕疵，惟需遵守以下條件與排除項目：

保固涵蓋哪些項目？

- 原裝置及/或 SharkNinja 自行判定為有瑕疵的非耗損零件，可在原購買日期起一 (1) 年內進行維修或更換。
- 若為提供更換產品的情況，保固期限將於收到更換產品後六 (6) 個月或原保固期剩餘時間內（取較長者）結束。SharkNinja 保留以等值或更高價值產品進行更換的權利。

保固不涵蓋哪些項目？

- 正常磨損的零件（如攪拌容器、蓋子、杯子、刀片、調理機底座、可拆式內鍋、料理架、烤盤等），這些零件需定期維護及/或更換以確保裝置正常運作，並不在保固涵蓋範圍內。替換零件可於 sharkninja.tw 購買。
- 任何遭到竄改或用於商業用途的裝置。
- 因誤用、濫用、疏忽操作、未執行必要保養（如未保持馬達座凹槽清潔，避免食物殘渣或其他異物堆積），或因運送過程中搬運不當所造成的損壞。
- 衍生性和附帶性損害。
- 由非 SharkNinja 授權維修人員所造成的瑕疵。此類瑕疵包括由非 SharkNinja 授權人員在進行運送、修改或修理的過程中，所導致的 SharkNinja 產品（或其零件）損壞。

如何獲得維修服務

若您的設備在正常家庭使用條件下於保固期內無法正常運作，請造訪 sharkninja.tw 查詢產品保養與維護的自助服務。

產品保固註冊

請至 sharkninja.tw 上傳有效購買憑證（須包含購買日期與商品明細，如發票、出貨單或其他相關證明），並登錄產品序號，即可完成線上保固註冊。

限用物質含有情況標示聲明書

Declaration of the Presence Condition of the Restricted Substances Marking

設備名稱: Ninja Detect 多功能調理機 Equipment name		型號(型式): TB401TW Type designation (Type)				
單元Unit	限用物質及其化學符號 Restricted substances and its chemical symbolsv					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁺⁶)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
Motor	-	-	-	-	-	-
電源線	O	-	-	-	-	-
原子線	O	-	-	-	-	-
PCB	-	-	-	-	-	-
电容	O	-	-	-	-	-
胶件	O	O	O	O	O	O
備考1. 超出0.1 wt %及 超出0.01 wt %係指限用物質之百分比含量超出百分比含量基準值。 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition. 備考2. “O”係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “O” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. 備考3. “-”係指該項限用物質為排除項目。 Note 3: The “-” indicates that the restricted substance corresponds to the exemption.						

掃描以註冊:
sharkninja.tw

型號:
TB401TW

製造編號:
Y20A3109Z1A7



製造編號中前四位為製造日期編號。

In Manufacture Code, the first 4 letters are Manufacture Date Code.

以上圖中“Y20A”為例，Y代表製造月份(參考表A)，20代表製造日期，A代表製造年份(參考表B)。

Take “Y20A” on the above picture as example, “Y” means Month (refer to Table A), “20” means Date, “A” means Year (refer to Table B).

參考表A / Table A		參考表B / Table B	
月份 Month	編號 Code	年份 Year	編號 Code
1月 January	A	2016	A
2月 February	F	2017	F
3月 March	H	2018	H
4月 April	J	2019	J
5月 May	K	2020	K
6月 June	Q	2021	Q
7月 July	R	2022	R
8月 August	S	2023	S
9月 September	U	2024	U
10月 October	Z	2025	Z
11月 November	X	2026	X
12月 December	Y	2027	Y
		接下來 Next	從A座新開始 Start over with “A”

NINJA

DETECT™ KITCHEN SYSTEM POWER BLENDER + PROCESSOR PRO WITH BLENSENSE™ TECHNOLOGY TB401TW | Owner's Guide



ENGLISH

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

	Read and review instructions for operation and use.
	Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.
	For indoor and household use only.
When using electrical appliances, basic safety precautions should always be followed, including the following:	

⚠ WARNING: To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. **DO NOT** use appliance for other than intended use.

- 1 Read all instructions prior to using the appliance and its accessories.
- 2 This product is provided with Ninja Detect™ Total Crushing™ & Chopping Blades (Stacked Blade Assembly) and Chopping Blade Assembly. **ALWAYS** exercise care when handling blade assemblies. The blade assemblies are loose and sharp and are **NOT** locked in place in their containers. The blade assemblies are designed to be removable to facilitate cleaning and replacement if needed. **ONLY** grasp the blade assemblies by the top of the shaft. Failure to use care when handling the blade assemblies will result in a risk of laceration.
- 3 Handle the Hybrid Edge™ Blades Assembly with care, as the blades are loose and sharp. Care shall be taken when handling the loose and sharp blade assemblies while emptying the pitcher, food processor, and single-serve cup during cleaning.
- 4 Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
- 5 **DO NOT** blend hot, effervescent, or carbonated liquids or ingredients. Doing so may cause excessive pressure buildup, resulting in risk of laceration and or the user being burned.
- 6 Remove the Hybrid Edge Blades Assembly from the Single-Serve Cup upon completion of blending. **DO NOT** store ingredients before or after blending them in the cup with the blade assembly attached. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of laceration, burns, or property damage.
- 7 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- 8 **ALWAYS** take your time and exercise care during unpacking and appliance setup. Blades are loose and sharp. **ALWAYS** exercise care when handling blade assemblies. This appliance contains sharp, loose blades that can cause risk of laceration if mishandled.
- 9 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 10 Upon completion of processing, ensure the blade assembly is removed **BEFORE** emptying container's contents. Remove the blade assembly by carefully grasping the top of the shaft and lifting it from the container. Failure to remove the blade assembly before emptying the container results in a risk of laceration.
- 11 If using the pitcher's pour spout, hold the cover in place on the container or ensure lid lock is engaged when pouring to avoid risk of laceration.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY


- 12 ONLY** grasp the Hybrid Edge™ Blades Assembly by the outer perimeter of the blade assembly base. Failure to use care when handling the blade assembly will result in a risk of laceration.
- 13** Turn the appliance **OFF**, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. **NEVER** unplug by grasping and pulling the flexible cord.
- 14** Before each use, inspect blade assemblies for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
- 15 DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- 16** This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** modify the plug in any way.
- 17 DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact SharkNinja for servicing.
- 18** This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact SharkNinja for service.
- 19** Extension cords should **NOT** be used with this appliance.
- 20** To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- 21 DO NOT** allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
- 22 DO NOT** allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
- 23 ALWAYS** use the appliance on a dry and level surface.
- 24 DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 25** This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 26 ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- 27 NEVER** place a blade assembly or disc on the motor base without it first being attached to its corresponding container (pitcher, cup, or processor bowl) with the lid also in place.
- 28** Keep hands, hair, and clothing out of the container when loading and operating.
- 29** During operation and handling of the appliance, avoid contact with moving parts.
- 30 DO NOT** fill containers past the **MAX FILL** or **MAX LIQUID** lines to avoid risk of injury due to damage to the lids or containers.
- 31 DO NOT** operate the appliance with an empty container.
- 32 DO NOT** microwave any containers or accessories provided with the appliance.
- 33 NEVER** leave the appliance unattended while in use.
- 34 DO NOT** process dry ingredients with the Single-Serve Cup and Hybrid Edge Blades Assembly, the pitcher and Stacked Blade Assembly or the processor bowl and Chopping Blade Assembly.
- 35 DO NOT** perform grinding operations with the Single-Serve Cup and Hybrid Edge Blades Assembly, the pitcher and Stacked Blade Assembly or the processor bowl and Chopping Blade Assembly.
- 36 NEVER** operate the appliance without lids and caps in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
- 37** Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe personal injury or damage to the blender. A scraper may be used **ONLY** when the blender is not running.

- 38** If you find unmixed ingredients sticking to the sides of the cup, stop the appliance, remove the blade assembly, and use a scraper to dislodge ingredients.
- 39 DO NOT** open the pitcher's pour spout cap while blender is operating.
- 40** If you find unmixed ingredients sticking to the sides of the pitcher, stop the appliance, remove the lid, and use a spatula to dislodge ingredients. **NEVER** insert your hands into the pitcher, as you may contact one of the blades and experience a laceration.
- 41 DO NOT** attempt to remove the container or lid from the motor base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lids and containers.
- 42** If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 30 minutes before using again.
- 43 DO NOT** expose the containers and accessories to extreme temperature changes. They may experience damage.
- 44** The maximum wattage rating for this appliance is based on the configuration of the Hybrid Edge™ Blades Assembly and Single-Serve Cup. Other configurations may draw less power or current.
- 45 DO NOT** submerge the motor base or control panel in water or other liquids. **DO NOT** spray motor base or control panel with any liquid.
- 46 DO NOT** attempt to sharpen blades.
- 47** Turn off the appliance and unplug the motor base before cleaning.
- 48** Unit is intended to create a dough ball. It is **NOT** intended to continuously knead. After dough ball forms, additional kneading should be done by hand on a work surface. If the unit moves excessively on the work surface, remove the dough ball and knead by hand.
- 49 NEVER** feed food into processor bowl by hand. **ALWAYS** use the provided food pusher with the feed chute lid.
- 50 DO NOT** misuse the appliance to avoid potential injury.

SAVE THESE INSTRUCTIONS

PARTS

- A** Pitcher Lid With Pour Spout
- B** Ninja Detect™ Total Crushing™ & Chopping Blades (Stacked Blade Assembly)
- C** 2.1 L* Full-Size Pitcher
- D** Power Food Processor Bowl Feed Chute Lid and Pusher
- E** Reversible Slicing/Shredding Disc
- F** Chopping Blade Assembly
- G** Spindle
- H** Dough Blade Assembly
- I** 1.8 L Power Food Processor Bowl
- J** Spout Lid
- K** Hybrid Edge™ Blades Assembly
- L** 700 ml Single-Serve Cup
- M** Motor Base (attached power cord not shown)

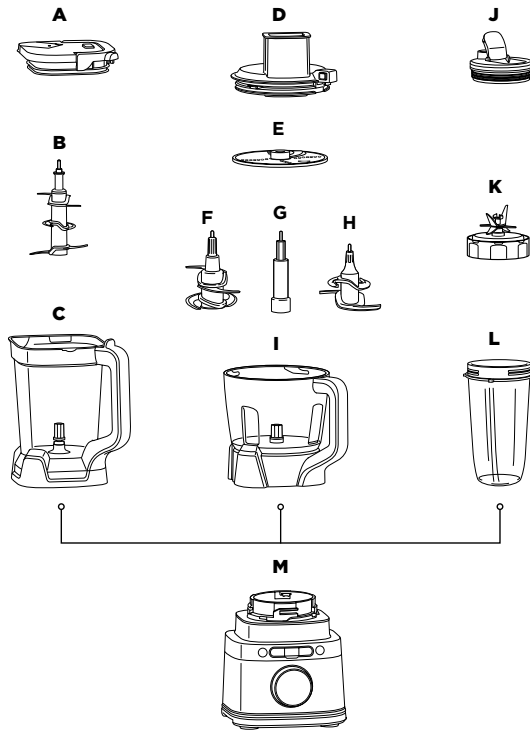

*1.9 L max liquid capacity.

To purchase more accessories and find great recipes, visit sharkninja.tw.

BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

⚠ WARNING: The **Stacked Blade Assembly** and **Chopping Blade Assembly** are **NOT** locked in place in the pitcher. Handle the **Stacked Blade Assembly** and **Chopping Blade Assembly** by grasping the top of the shaft.

- 1 Remove all packaging materials from the unit. Exercise care when unpacking the Stacked Blade Assembly, Hybrid Edge Blades Assembly, and Chopping Blade Assembly, as the blades are loose and sharp.
- 2 Handle the Hybrid Edge Blades Assembly by grasping around the perimeter of the blade assembly base.
- 3 Wash containers, lids, and blade assemblies in warm, soapy, water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assemblies, as the blades are loose and sharp.
- 4 Thoroughly rinse and air-dry all parts.
- 5 Wipe control panel with a soft cloth. Allow it to dry completely before using.

NOTE: All attachments are BPA free. Accessories are top-rack dishwasher safe and should **NOT** be cleaned with a heated dry cycle. Ensure blade assemblies and lids are removed from the containers before placing in the dishwasher. Exercise care when handling blade assemblies.

BLENDSense™ TECHNOLOGY

Intelligent BlendSense program revolutionizes traditional blending by sensing your ingredients and blending to perfection every time. The BlendSense program will be active by default. Press **⏻** button, then **START/STOP**. Once the program begins, it will automatically stop when blending is complete. To stop blending before the end of the program, press the dial again.

Simply press the dial to start the BlendSense program.

1
SENSE
Starts blending to sense your ingredients.



BlendSense is best used to achieve smooth blends such as smoothies, frozen drinks, smoothie bowls, dips, purees, doughs and sauces.

2
BLEND
Automatically chooses the blending speed, time, and pulses.



3
ENJOY
Blends to perfection, no matter the portion size.



INITIAL BLENDING



SENSING

In the first 15 seconds, actively adjusts speed and time based on ingredients and recipe size.

BLENDING POSSIBILITIES



BLENDING
Blends continuously without pulsing.



CRUSH AND MAX-CRUSH
Detects tougher and frozen ingredients, then adjusts the pulsing pattern for a smooth blend.



THICK MODE
Creates thick spoonable results.



DOUGH
Processes doughs and batters, including pie, pizza, and cookie doughs. Use with Dough Blade Assembly.

NOTE: Once blending possibility is selected, runtime will count up on the display in seconds. Total time varies from seconds up to almost two minutes.

ERROR DETECTION



INSTALL

Illuminates if no vessel is installed or if a vessel is installed incorrectly. To resolve, reinstall the vessel.




ADD LIQUID

When using the Single-Serve Cup, this illuminates if, during blending, your recipe requires more liquid to blend. When "ADD LIQUID" displays on the dial, press **START/STOP** and remove the cup from the base. Add 1/2 to 1 cup of additional liquid. Reinstall the cup, then press **START/STOP** to run the BlendSense program again.

USING THE CONTROL PANEL

NOTE: Press the dial to START or STOP any program. Turn to select.

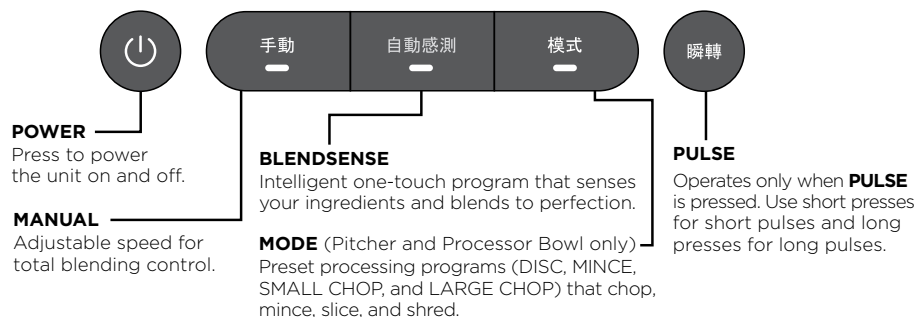

PROCESSING MODE PROGRAMS



DISC: Processor Bowl only. Use with the Reversible Slicing/Shredding Disc.
MINCE, SMALL CHOP, AND LARGE CHOP: Pitcher and Processor Bowl only.
 Smart preset programs combine unique pausing patterns that process for you. Press **MODE**, turn the dial to select your desired program, then press **START/STOP**. The program will automatically stop when complete. Press the dial again to stop the program sooner. They do not work in conjunction with the BlendSense program or Manual programs.

NOTE: Number of seconds is displayed for the program's runtime.

MANUAL PROGRAMS



Go manual for total control of your blending speed and textures. Press **MANUAL**, turn the dial to select your desired program, then press **START/STOP**. When selected, each speed runs continuously for 60 seconds. Press the dial again to stop the program sooner. Manual programs do not work in conjunction with the BlendSense program or Processing Mode programs.

VARIABLE SPEED CONTROL (Speeds 1-10): Pitcher only.

START SLOW (Speeds 1-3): Always start at low speed to better incorporate ingredients and prevent them from sticking to the sides of the vessel.

DIAL UP THE SPEED (Speeds 4-7): Smoother blends call for higher speeds. Low speeds are great for chopping veggies, but you'll need to ramp up for purees and dressings.

HIGH-SPEED BLENDING (Speeds 8-10): Blend until your desired consistency is reached. The longer you blend, the better the breakdown and smoother the outcome will be.

LOW, MEDIUM, HIGH Speeds: Single-Serve Cup and Processor Bowl only.

NOTE: Once speed is selected, runtime will count up on the display in seconds.

USING THE PITCHER

IMPORTANT:


- Review all warnings at the beginning of this Owner's Guide before proceeding.
- As a safety feature, if the pitcher and lid are not properly installed, the timer will display **INSTALL** and the motor will be disabled. If this happens, repeat **step 5** on this page.

WARNING: Ninja Detect Total Crushing & Chopping Blades (Stacked Blade Assembly) are loose and sharp and **NOT** locked in place. If using the pour spout, ensure the lid is fully locked onto the blender pitcher. If pouring with the lid removed, carefully remove the Stacked Blade Assembly first, holding it by the shaft. Failure to do so will result in a risk of laceration.

NOTE:



- DO NOT** add ingredients before completing installation of the Stacked Blade Assembly.
- If the Stacked Blade Assembly is not fully seated, you will not be able to install and lock the lid.
- The pitcher lid handle will not fold down unless it is attached to the pitcher.
- DO NOT** process or grind dry ingredients.
- For best results, blend fresh leafy greens and herbs in the single-serve cup.

- Plug in motor base and place on a clean, dry, level surface such as a countertop or table.
- Lower the pitcher onto the motor base. The handle should be aligned slightly to the right and the pitcher should be oriented so the **LOCK** symbols are visible on the motor base. Rotate the pitcher clockwise until it clicks into place.
- Exercising care, grasp the Stacked Blade Assembly by the top of the shaft and place it onto the drive gear inside the pitcher. Note that the blade assembly will fit loosely onto the drive gear.

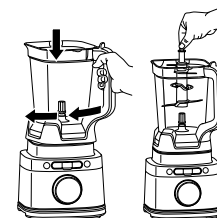


- Add ingredients to the pitcher. **DO NOT** add ingredients past the **MAX LIQUID** line.
- Place the lid on the pitcher. Press down on the handle until it clicks into place. Once the lid is locked in place, press the Power button to turn unit on. The BlendSense program will illuminate.

 - If using the BlendSense program, simply press the dial. The program will automatically stop once complete. To stop the unit at any time, press the dial again.
- If using a Processing Mode program, select **MODE**, then use the dial to select your desired program. To start, press the dial. The program will automatically stop once complete. To stop the unit at any time, press the dial again.
- If using a Manual program, select **MANUAL**, then use the dial to select your desired speed (1-10). To start, press the dial. Once the ingredients have reached your desired consistency, press the dial again or wait 60 seconds for the unit to come to a complete stop on its own.
- To remove the pitcher from the motor base, turn the pitcher counterclockwise and then lift up.

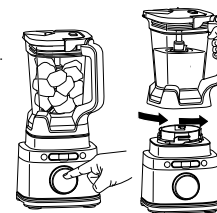

- To pour out thinner mixtures, ensure the lid is locked in place, then open the pour spout cap.

- For thicker mixtures that cannot be emptied through the pour spout, remove the lid and Stacked Blade Assembly before pouring. To remove the lid, press the **RELEASE** button and lift the handle. To remove the blade assembly, carefully grasp it by the top of the shaft and pull straight up. The pitcher can then be emptied.
- Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

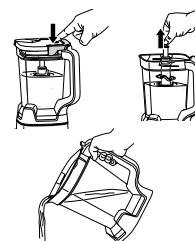

USING THE POWER FOOD PROCESSOR BOWL BLADE ASSEMBLIES

IMPORTANT:


- Review all warnings at the beginning of this Owner's Guide before proceeding.
- As a safety feature, if the processor bowl and lid are not properly installed, the timer will display **INSTALL** and the motor will be disabled. If this happens, repeat **step 5** on this page.

⚠WARNING: Chopping Blade Assembly is loose, sharp, and **NOT** locked in place. Before removing blended ingredients from the bowl, carefully remove the blade assembly first, holding it by the shaft. Failure to do so will result in a risk of laceration.

NOTE:

- **DO NOT** process or grind dry ingredients.
- **DO NOT** add ingredients before completing installation of the blade assembly.
- Follow the same instructions to install the Dough Blade Assembly as the Chopping Blade Assembly.

- 1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.
- 2 Lower the Power Food Processor Bowl onto the motor base and rotate clockwise until it clicks into place.
- 3 To install the blade assembly, exercise care and grasp the Chopping Blade Assembly by the top of the shaft and place it onto the drive gear inside the bowl. Note that the Chopping Blade Assembly will fit loosely onto the drive gear.
- 4 Add ingredients to the bowl, making sure not to exceed the **MAX FILL** line.

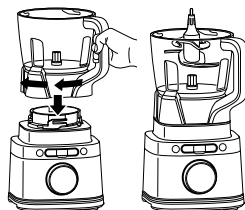

- 5 Place the feed chute lid on the bowl and turn clockwise until you hear a click, indicating the lid is locked in place. Once the lid is locked in place, press the Power button to turn unit on. The BlendSense program will illuminate.


- 6a If using the BlendSense program, simply press the dial. The program will automatically stop once complete. To stop the unit at any time, press the dial again.
- 6b If using a Processing Mode program, select **MODE**, then use the dial to select your desired program. To start, press the dial. The program will automatically stop once complete. To stop the unit at any time, press the dial again.



NOTE: When using the Chopping Blade Assembly, it is recommended to use MINCE, SMALL CHOP, or LARGE CHOP. Processing Mode programs are not recommended when using the Dough Blade Assembly.

- 6c If using a Manual program, select **MANUAL**, then use the dial to select your desired speed (LOW, MEDIUM, or HIGH). To start, press the dial. Once the ingredients have reached your desired consistency, press the dial again or wait 60 seconds for the unit to come to a complete stop on its own.

NOTE: When using the Dough Blade Assembly, only use LOW speed.

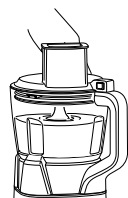



- 7 When finished, press the button on the lid near the handle to unlock, then turn counterclockwise and lift up from the bowl. Always remove the Chopping Blade Assembly before emptying the ingredients from the bowl. To remove the Chopping Blade Assembly, carefully grasp it by the top of the shaft and lift it out of the bowl.
- 8 To remove the bowl from the motor base, turn the bowl counterclockwise and then lift up.
- 9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

USING THE REVERSIBLE SLICING/SHREDDING DISC

NOTES:

- The Slicing/Shredding Disc is reversible. Use the side labeled "Slicer" for slicing. Carefully flip the disc over to the side labeled "Shredder" for shredding.
- The feed chute lid features a pusher to guide food through the chute.



- 1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.
- 2 Lower the Power Food Processor Bowl onto the motor base and rotate clockwise until it clicks into place.
- 3 To install the Reversible Slicing/Shredding Disc, place the disc spindle onto the drive gear inside the bowl. Then, use the finger holes to grasp the Reversible Slicing/Shredding Disc and place it over the spindle, with the side you would like to use facing up.

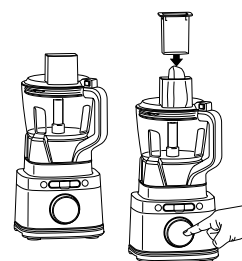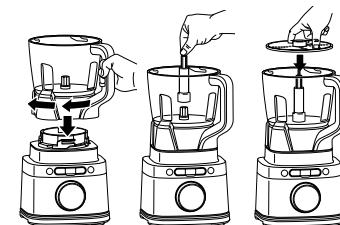

- 4 Place the feed chute lid on the bowl and turn clockwise until you hear a click, indicating the lid is locked in place. Once the lid is locked in place, press the Power button to turn unit on. The BlendSense program will illuminate.
- 5a If using a Processing Mode program, select **MODE**, then use the dial to select DISC.
- 5b If using a Manual program, select **MANUAL**, then use the dial to select your desired speed (LOW recommended).

NOTE: It is not recommended to use the BlendSense program with the Reversible Slicing/Shredding Disc.

 - 6 Press the dial to begin the program. Add the prepped ingredients you want to slice or shred through the feed chute on the lid. Use the pusher to help guide the ingredients through the feed chute. The program will automatically stop spinning once completed. To stop the unit at any time, press the dial again.
- 7 To remove the lid, press the button on the feed chute lid near the handle to unlock, then turn the lid counterclockwise. Lift the lid from the bowl.
- 8 Using the finger holes, carefully lift the disc out of the bowl. Then, grasp the spindle by the top of the shaft and lift it out of the bowl.

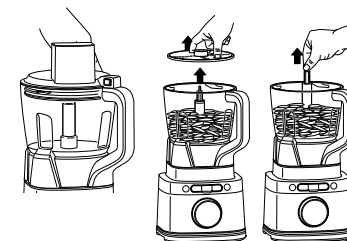

- 9 To remove the bowl from the motor base, turn the bowl counterclockwise and then lift up.
- 10 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

 

USING THE SINGLE-SERVE CUP

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

⚠ WARNING:

- Handle the Hybrid Edge Blades Assembly with care, as the blades are sharp.
- Remove utensils prior to processing. Failure to remove may cause the Single-Serve Cup to be damaged or to shatter, which may cause personal injury.
- DO NOT blend hot, effervescent, or carbonated liquids. Doing so may cause excessive pressure buildup, resulting in risk of laceration and/or the user being burned.
- DO NOT process or grind dry ingredients.
- Remove the Hybrid Edge Blades Assembly from the Single-Serve Cup upon completion of blending. DO NOT store ingredients before or after blending them in the cup with the blade assembly attached. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury.

- 1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.
- 2 Add ingredients to the Single-Serve Cup. **DO NOT** add ingredients past the **MAX LIQUID** line on the cup.
- 3 Install the Hybrid Edge Blades Assembly onto the top of the cup. Twist the lid clockwise until it's sealed tightly.

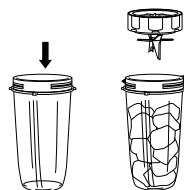


- 4 Turn the cup upside down and install on the motor base. Align the tabs on the cup with the slots on the base, then rotate cup clockwise until it clicks into place. Once the cup is locked in place, press the Power button to turn unit on. The BlendSense program will illuminate.

5a If using the BlendSense program, simply press the dial. The program will automatically stop once complete. To stop the unit at any time, press the dial again.

5b If using a Manual program, select **MANUAL** then use the dial to select your desired speed (LOW, MEDIUM, or HIGH). To start, press the dial. Once the ingredients have reached your desired consistency, press the dial again or wait 60 seconds for the unit to come to a complete stop.




NOTE: Processing Mode programs are only compatible with the pitcher.

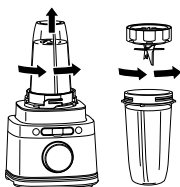

- 6 To remove the cup from the motor base, turn the cup counterclockwise and then lift up.
- 7 Remove the Hybrid Edge Blades Assembly by twisting the cap counterclockwise. **DO NOT** store blended contents with blade assembly attached. Exercise care when handling the blade assembly, as the blades are sharp.

- 8 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.
- 9 To enjoy your drink on the go, place the Spout Lid onto the cup and twist lid clockwise until firmly sealed. For storing ingredients in the cup, use only the Spout Lid to cover.

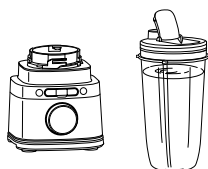

CARE & MAINTENANCE

CLEANING

Separate all parts. Wash all containers in warm, soapy water with a soft cloth.

• Hand-Washing

Wash blade assemblies in warm, soapy water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assemblies, as the blades are loose and sharp. Thoroughly rinse and air-dry all parts.

• Dishwasher

Accessories are top-rack dishwasher safe but should **NOT** be cleaned with a heated dry cycle. Ensure the blade assemblies are removed from their containers before placing in the dishwasher. Exercise care when handling blade assemblies.

• Motor Base

Turn off the unit and unplug the motor base before cleaning. Wipe motor base with a clean, damp cloth. **DO NOT** use abrasive cloths, pads, or brushes to clean the base.

STORING

For cord storage, wrap cord with hook-and-loop fastener near the back of the motor base. **DO NOT** wrap the cord around the bottom of the base for storage. Store the unit upright and store all blade assemblies inside or attached to their respective containers with their lids locked in place.

DO NOT store blended or unblended ingredients in the Single-Serve Cup with the Hybrid Edge Blades assembly attached.

DO NOT stack items on top of the containers. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

RESETTING THE MOTOR

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload the it. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, follow the reset procedure below.

- 1 Unplug the unit from the electrical outlet.
- 2 Allow the unit to cool for approximately 15 minutes.
- 3 Remove the container's lid and blade assembly. Empty the container and ensure no ingredients are jamming the blade assembly.

IMPORTANT: Ensure that maximum capacities are not exceeded. This is the most typical cause of appliance overload.

If your unit needs servicing, please call Customer Service at 55-5531-7275.

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit sharkninja.tw.

TROUBLESHOOTING GUIDE

⚠ WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before troubleshooting.

Display will show “INSTALL” once connected to power.

- Place container on base and rotate it clockwise until container clicks into place. Press the Power button  to turn unit on, and the BlendSense program will illuminate, indicating the unit is ready for use.

Display reads “ADD LIQUID 0” during the BlendSense Program.

- If the display reads “ADD LIQUID 0” during the BlendSense program, the unit detects more liquid is needed to fully blend. Press START/STOP, remove the cup from the base, and add 1/2 to 1 cup of additional liquid. Reinstall the cup on the base, then press START/STOP to run the BlendSense program again. Only available when using the Single-Serve Cup.

Display reads “Er”.

- If the display reads “Er,” unplug the unit from the electrical outlet and allow it to cool for 15 minutes. Remove the container’s lid and blade assembly and empty the contents to ensure no ingredients are jamming the blade assembly.

Lid/Hybrid Edge Blades Assembly is hard to install on the cup.

- Set the cup on a level surface. Carefully place the lid or Hybrid Edge Blades Assembly on the top of the cup and align the threads so the lid/Hybrid Edge Blades Assembly sits flat on the cup. Twist clockwise until you have a tight seal.

Unit doesn’t mix well; ingredients get stuck.

- Using the BlendSense program is the easiest way to achieve great results. The pulses and pauses allow the ingredients to settle toward the blade assembly. If ingredients are routinely getting stuck, adding some liquid will usually help.
- When filling the cup, start with liquids or yogurt, followed by fresh fruit or veggies, then leafy greens or herbs. Next add seeds, powders, or nut butters. Finally, add ice or frozen ingredients.

Motor base won’t stick to counter or tabletop.

- Make sure surface and suction feet are wiped clean. Suction feet will only stick to smooth surfaces.
- Suction feet will not stick on some surfaces such as wood, tile, and non-polished finishes.
- **DO NOT** attempt to use unit when the motor base is stuck to a surface that is not secure (cutting board, platter, plate, etc.).

Unit is difficult to remove from counter for storage.

- Place your hands underneath both sides of the motor base and gently pull the unit up and toward you.

Unit displays a blinking “- -” message.

- The unit can detect which container is on the motor base. You may be trying to use a program that is not designed for the container you have installed. The programs will light up, indicating which programs are available for each container.

Food is not evenly chopped.

- For best results when chopping, cut pieces of ingredients in a uniform size and don't overfill the vessel.

The pitcher lid handle will not fold down.

- The handle will not fold down if the lid isn't attached to the pitcher. For storage, place the lid on the pitcher and press down on the handle until it clicks into place.

PRODUCT REGISTRATION

Please visit sharkninja.tw/service to register your new Ninja™ product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

Shark NINJA

ONE (1) YEAR LIMITED WARRANTY

NJA_1_YR_IB_LMTD_WRNTY_TW_EN

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of **OSONOVA PRIVATE LIMITED TAIWAN BRANCH**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner’s Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in SharkNinja’s sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at sharkninja.tw.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit sharkninja.tw for product care and maintenance self-help. Our Customer Service Specialists are also available at **0800-000-605** to assist with product support and warranty service options. So we may better assist you, please register your product online at sharkninja.tw and have the product on hand when you call.

How to initiate a warranty claim

You must call **0800-000-605** to initiate a warranty claim. You will need the receipt as proof of purchase. We also ask that you register your product online at sharkninja.tw and have the product on hand when you call, so we may better assist you. A Customer Service Specialist will provide you with return and packing instruction information.



註冊您購買的產品 REGISTER YOUR PURCHASE



sharkninja.tw/service



使用行動裝置掃描 QR 碼

Scan QR code using mobile device

請記錄此資訊

型號: _____

序號: _____

購買日期: _____
(請保留收據)

購買商店: _____

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

技術規格

電壓: 110V~, 60Hz

電源: 1200 Watts

TECHNICAL SPECIFICATIONS

Voltage: 110V~, 60Hz

Power: 1200 Watts

經銷商:

104105 臺北市中山區南京東路3段168號2樓之1
2F.-1, No. 168, Sec.3, Nanjing E. Rd., Zhongshan Dist.,
Taipei City 104105, Taiwan (R.O.C.)

Distributed by:

OSONOVA PRIVATE LIMITED TAIWAN BRANCH
2F.-1, No. 168, Sec.3, Nanjing E. Rd., Zhongshan Dist.,
Taipei City 104105, Taiwan (R.O.C.)
sharkninja.tw

圖例可能與實際產品有所不同。我們將持續努力改善我們的產品，因此本文中的規格可能會有所變更，恕不另行通知。

BLENDSENSE, HYBRID EDGE, NINJA, NINJA DETECT, 和 TOTAL CRUSHING
是 SharkNinja Operating LLC 的商標。

Illustrations may differ from actual product. We are constantly striving to improve our products,
therefore the specifications contained herein are subject to change without notice.

BLENDSENSE, HYBRID EDGE, NINJA, NINJA DETECT, and TOTAL CRUSHING
are trademarks of SharkNinja Operating LLC.

© 2025 SharkNinja Operating LLC

TB401TW_IB_TC_E_MP_Mv11

