



設計從心 體驗出色



H90 / H100

多角度調整電視架 Full Motion TV Mount

安裝說明書 Installation Guide



注意：

- 安裝前請詳閱說明書，或由專業人員為您施工。
- 切勿讓兒童攀爬產品或玩耍產品。
- 請勿坐在或站在產品上。
- 請勿放置超過建議荷重重量的物品。
- 如果您不理解這些說明或有疑問，為了確保本次安裝的安全，請聯絡專業施工人員。
- 製造商對下列原因造成的損壞或傷害不承擔責任
例如：不正確的安裝、組裝或使用。
- 此裝置相容規格表所列的吋液晶電視尺寸。
- 電視的重量不得超過規格表所建議之重量。
- 牆壁必須能支撐電視加上支架的五倍重量。
- 處理不當可能會導致割傷或撕裂傷。
- 圖片僅供參考。

Caution:

- Please read the instructions carefully before installation, or have the work performed by a professional.
- Never allow children to climb on or play with the product.
- Do not sit or stand on the product.
- Do not place items that exceed the recommended load capacity.
- If you do not understand these instructions or have any concerns about safety, please consult a professional installer.
- The manufacturer is not responsible for any damage or injury caused by improper installation, assembly, or use.
- This device is compatible with LCD TV sizes listed in the specifications.
- The TV's weight must not exceed the recommended limit.
- The wall must be capable of supporting five times the combined weight of the TV and the mount.
- Improper handling may result in cuts or lacerations.
- Images are for reference only.

規格表

型號：H90
VESA：100x100~600x400mm
螢幕尺寸：40~90吋
建議最大荷重：55kg
傾斜微調角度：+5° / -12°
左右移動角度：60°
水平微調角度：-3° / +3°
離牆距離：65~426mm

型號：H100
VESA：100x100~800x400mm
螢幕尺寸：40~100吋
建議最大荷重：55kg
傾斜微調角度：+5° / -12°
左右移動角度：60°
水平微調角度：-3° / +3°
離牆距離：65~426mm

掃描QR CODE
觀看安裝教學影片

所需工具(未附上) Tools Required (Not Included)

01

x1

02

x1

03

x2

04

x2

05

x2

06

x8

07

x4

08

x1

09

x1

六角螺絲
Lag Bolt

六角螺絲華司
Lag Bolt Washers

塑膠壁虎
Wall Anchor

電視螺絲
TV Screws

華司
TV Washers

墊片
TV Spacers

5/16x2.75"
A x6

B x6

C x6

M4X12mm
D x4

M4X30mm
E x4

M5X25mm
Y x4

M6X15mm
F x4

M6X35mm
G x4

M8X15mm
H x4

M8X30mm
I x4

M8X50mm
X x4

Ø5
J-1 x4

Ø8
J-2 x4

L 5mm
K x8

L 10mm
L x8

步驟1：安裝牆面支架 Step1: Wall Plate Install

1 -1

02

使用定位紙卡於牆面上做記號。
Use the positioning template to mark the wall.

▲ Max. 16 in.
(406mm)

1 -2

於定位點，使用10mm鑽頭鑽入75mm深度。
At the marked points, drill to a depth of 75mm using a 10mm drill bit.

3 in. (75mm)
3/8 in. (10mm)

1 -3

C

1 -4

B

A

09

01

步驟2：選擇正確的電視螺絲 Step2: Select TV Screw

M4

M6

M8

以手動方式將螺絲旋入電視背面的螺紋孔，以判斷應使用哪種螺絲尺寸。
Hand thread screws into the threaded inserts on the back of your TV to determine which screw diameter (M4 , M6 or M8) to use.

太短
Too Short

太長
Too Long

正確
Correct

正確
Correct

✗

✗

✓

✓

步驟3：安裝電視機背掛架 Step3: Secure TV Brackets to the back of TV

D/F/H

J-1/J-2

03

各種墊片安裝方式
Alternate Spacer Setups

E/Y/G/I/X

J-1/J-2

K/L

03

步驟4：安裝橢圓管 Step4: Install elliptical tube

06

05

07

04

01

步驟5：掛上電視 Step5: Hang the TV onto the TV Mount

S1

01

鎖緊安全鎖
Secure the safety lock

S1

步驟6：微調角度 Step6: Angle adjustments

±3°

+5°

-12°

水平調整 Leveling

鎖緊Lock

鬆開Release

08

N1

08

N2

前傾後仰調整 Tilt Adjustment

+5°

-12°