

正面

寶貝星自動吸水電動水槍

電動單發/電動連發


使用說明書

使用步驟說明


感謝您選購本產品，為了您能更快更自如的熟悉和瞭解本產品，請在玩耍前完整的閱讀說明書。包裝和說明書含有重要資訊，應予以保留。




本產品環保無毒，對人體無害。僅供在符合相關法律法規安全的條件下娛樂使用。若擅自改變本產品外觀顏色以及與出廠不相符合的內部構造後所引起的相關法律問題，本廠概不負責，特此聲明！

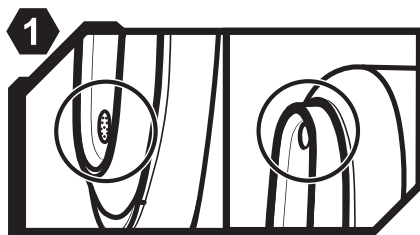


- 電動水槍吸水口
- 電動水槍射水口

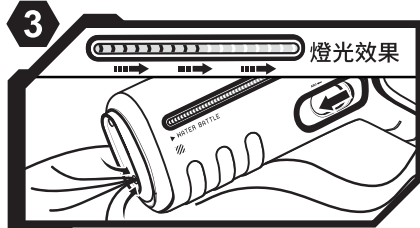


- 將槍吸水口浸入清水中，向前推住扳機，水槍自動吸水。

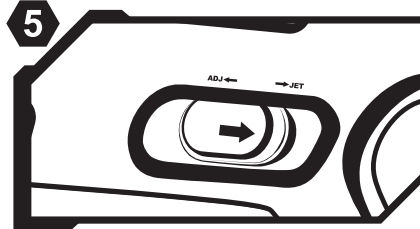

- 打開開關，扣動扳機，電動單發模式；扣動扳機不放，啟動電動連發模式，這時扣動扳機不放可連續發射。

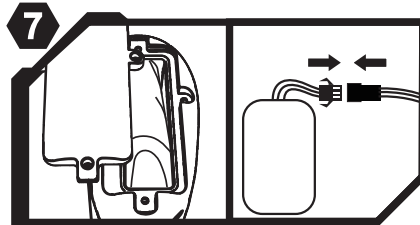


- 打開電池蓋取出電池。拆下電池使用隨機配送的充電線充電。

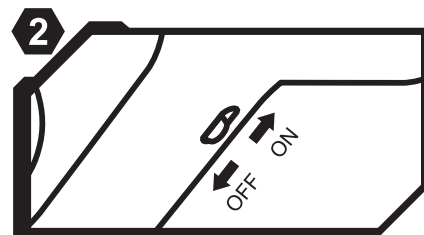


- 向上打開水槍開關，向下關閉水槍開關。使用後，關閉電源開關。



- 水箱吸滿水時會從出水口溢出。

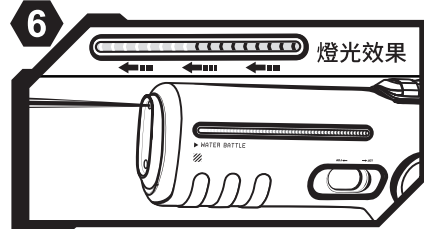

- 發射功能：觸發發射開關會閃耀藍色燈光並發射一段水柱，如果持續按住不鬆開，燈光會變成紅色燈光，水槍會持續發射水柱直至鬆開為止。

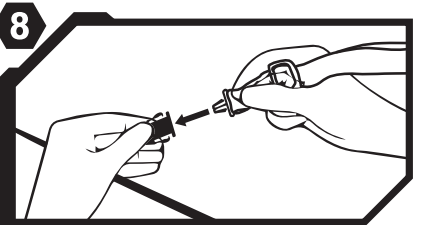

- 插入背帶卡扣。

本產品使用時不能完全浸入水中。

背面


BBS Automatic Water Absorbing Electric Water Gun

INSTRUCTIONS Thank you for purchasing the toy products produced by our factory. In order for you to be familiar with and understand this product faster and more freely, please read the manual completely before playing. The packaging and instructions contain important information and should be retained.




This product is environmentally friendly, non-toxic and harmless to the human body. For recreational use only under safe conditions in compliance with relevant laws and regulations. The factory is not responsible for any legal problems caused by unauthorized changes to the appearance and color of the product and the internal structure that does not conform to the factory's, hereby declares!


INSTRUCTIONS FOR USE

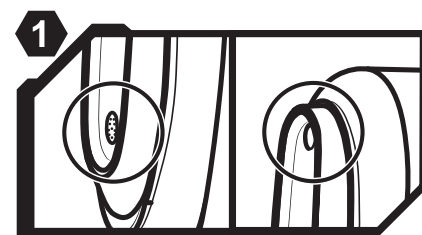


- Electric water gun suction
- Electric water gun nozzle

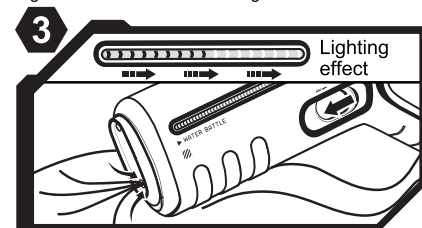

- Dip the nozzle of the gun into clean water, push the trigger forward, and the water gun automatically absorbs water.

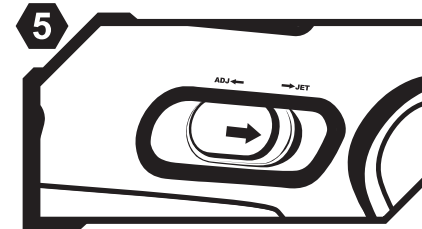


- Turn on the switch, pull the trigger, and switch to electric single engine mode; Pull and hold the trigger to activate the electric continuous firing mode. At this time, pull and hold the trigger to continuously fire.

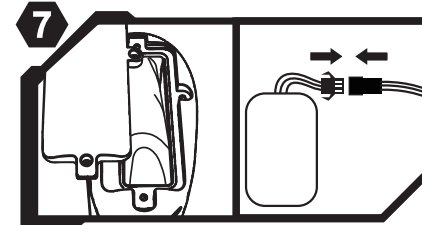


- Open the battery cover and remove the battery. Remove the battery and charge it with the charging cable that comes with the delivery.


This product cannot be completely immersed in water during use.

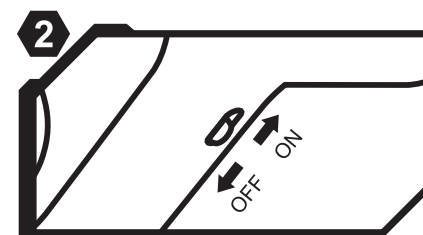


- Turn the water gun switch upward and turn off the water gun switch downward. After use, turn off the power switch.

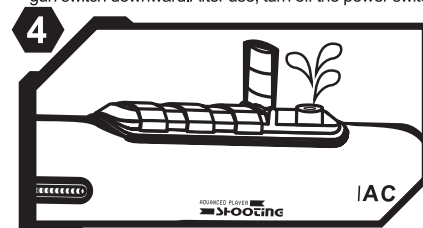

- When the water tank is filled with water, it will overflow from the outlet.

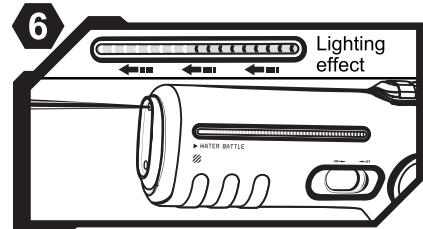

- Launch function: Triggering the launch switch will shine a blue light and Launch a column of water, and if you hold it down, the light will turn into a red light, and the water gun will continue to fire water until it is released. Until.

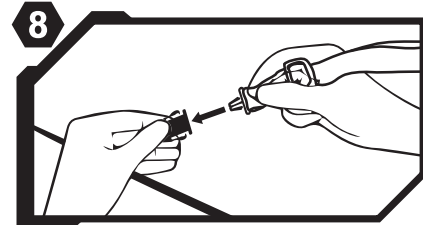

- Insert the strap buckle.