

## EXTREME STEAM FABRIC STEAMER

### 蒸氣手持式掛燙刷



INSTRUCTION  
BOOKLET  
使用說明

**CONAIR®**  
CGS23W

### 蒸氣手持式掛燙刷

#### 重要安全指示

當使用電器時，尤其有兒童在場，應小心及遵守以下安全指示：

#### 使用前請細閱使用說明 電器應遠離水源

#### 安全預防措施

**警告：**請小心包裝或產品上使用的塑膠袋，請擺放在遠離兒童的位置，因有可能會引起窒息。請勿於嬰兒床、睡床、嬰兒車或兒童遊樂園內使用。塑膠袋的薄層或會堵塞鼻子及口腔，阻礙呼吸，此塑膠袋不是玩具，敬請小心以防意外。

**警告：**切勿把電器放在臨近或有機會掉進浴缸或洗手盆的地方。

- 當電器在浴室使用後，應立即拔除插頭，因為電器接近水會導致危險，即使開關已關掉。
- 切勿把電器放入或掉進水或其他液體中。
- 如果電源軟線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
- 若電器曾跌落或有其他不妥，請馬上停止使用。
- 切勿將已插上電源或開啟的電器置之不理。
- 如若在使用中有任何不妥，請馬上拔去插頭。
- 請不要使用非本產品提供的任何配件。
- 每次用完後或注水和清潔前請先拔去插頭。
- 本產品不該讓有智障、殘障、感官有缺陷或缺乏使用電器經驗與常識的人（包括兒童）單獨使用，而應由有經驗及常識之監管人監察及指導下使用此產品。兒童應受監管以保證他們不會把玩此產品。
- 待電器冷卻之後才可收藏。
- 為避免損壞電源軟線，收藏時切勿將電源軟線纏繞在電器上並確保其不被拉扯、扭曲或曲折。
- 若蒸氣出口太接近皮膚、頭皮或眼睛，或不恰當使用此電器，噴出的蒸氣或會造成灼傷。為了減少接觸蒸氣噴出的熱水的危險，請在每次使用前以遠離人體的方式檢查電器。
- 切勿蒸熨正穿在身上的衣物。
- 接觸發熱的金屬部份、熱水或蒸氣或會引起燙傷。將電器倒轉時請小心，因可能有熱水或熱水在水箱內。
- 若注水方法不正確，請勿開動此電器，需用潔淨冷水來添加在水箱中，在硬水質的地區推薦用過濾水。
- 不建議接駁延長線使用，但若有此必要，請使用13安培延長線。若使用低安培的延長線有可能引起過熱。請小心處理延長線，以防絆倒他人。
- 切勿猛力拉扯電源軟線，應抓住插頭部份拔去電源。
- 使用掛燙刷時請小心，因內有熱水。
- 僅限於使用過濾水。

**注意：**本產品帶有熱保護裝置，當水沸騰時，產品將會關閉。不過，最好在水沸騰之前拔下產品電源。這是因為產品表面溫度會持續升高，從而潛在的導致危險或損壞產品。首次使用本掛燙刷之前，建議先讓它工作大約5分鐘，然後拔下電源並讓它冷卻。然後，在實際使用之前，排空水箱並重新注水。

#### 請保留此安全指示

#### 限家庭使用

#### 注水說明

- 將手持式掛燙刷放置在平坦的表面上，請務必確認掛燙刷是沒有接上電源的。（圖A）



 
- 用一隻手按住水箱，向蒸氣噴嘴方向開啟鎖定按鈕。（圖B）



- 拉開水箱，盡量遠離身體。（圖C）



- 把水箱倒轉，露出橡膠水箱蓋。（圖D）

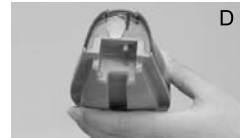

- 請打開水箱水箱蓋，並注入過濾水。（圖E、F）



- 關閉水箱蓋，並把水箱重新裝上主機上，請確保水箱是安全裝置好。（圖G、H）



#### 認識您的手持式掛燙刷

綠色顯示燈，表示掛燙刷已準備就緒可以使用  
紅色顯示燈，表示掛燙刷插上電源



#### 蒸氣重置鈕

水箱後有一紅色蒸氣重置鈕。當使用蒸氣手持式掛燙刷時，在15秒後仍未出現蒸氣，請按此紅色按鈕重新啟動蒸氣。  
**注意事項：**使用蒸氣手持式掛燙刷時，不需每次重新啟動蒸氣重置鈕。

#### 蒸熨配件

您的掛燙刷隨附了三個配件，用於對衣服進行額外整理。硬毛蒸熨刷可以分開纖維，讓蒸氣滲入衣物。無論是否使用蒸熨配件，掛燙刷都能有效消除褶皺。當掛燙刷噴出蒸氣或發燙時，請勿嘗試安裝或拆卸配件。要進行此操作，請等待掛燙刷已完全冷卻。要將蒸熨配件安裝到噴氣頭，只需將蒸熨配件按到蒸氣頭的前端。配件的較寬部分應該朝向掛燙刷的底端。  
**注意：**請必須待掛燙刷冷卻後才可更換或卸下配件。

#### 配件：

- 燙熨夾配件：為西褲及襯衫夾出筆挺折痕。
- 硬毛蒸熨刷配件：掃除衣物上微塵及污垢。
- 軟墊刷配件：蒸熨細織衣物。

#### 操作掛燙刷

- 將掛燙刷插入電源插座。
- 電源指示燈亮起（紅色），待一至兩分鐘時間來加熱，當掛燙刷準備就緒可以使用時，指示燈亮起（綠色）。
- 攪住掛燙刷，讓蒸氣噴嘴盡量遠離自己或其他在房間裡的人，按下手柄上的蒸氣觸發器。這時候掛燙刷應該會噴出蒸氣。若需要連續噴出蒸氣，只需將觸發器向下開啟，便可有連續蒸氣噴出，無需連續按下觸發器。請緊記讓蒸氣出口盡量遠離自己或其他在房間裡的人。
- 當第一次使用掛燙刷時，請於舊衣服上作測試，因為掛燙刷內可能有製造過程中或運輸中遺留下來的輕微灰塵物。

- 在掛燙刷的背面有一個高和低檔之調節設置。高檔是用於較厚及嚴重起皺的衣服，並提供更快速、更熱，及不太明顯的蒸氣。當用於精緻的衣服表面，如絲綢，應該使用低檔並配合軟墊刷配件一起使用。
- 若需要停止噴出蒸氣，只需要鬆開手柄上的蒸氣觸發器，或向上調節開關。
- 請在不使用掛燙刷時拔掉插頭。

#### 使用掛燙刷及清潔

- 準備你需要蒸熨的衣物，先配合軟墊刷配件擦衣物。這可把衣物上的纖維鬆開，使衣物有更好的蒸氣滲透效果。
- 掛起你的衣服或織物。
- 將手持式掛燙刷在衣物上有皺紋的地方噴出蒸氣，可能需要連續噴出蒸氣數次才能完全消除皺紋。
- 較厚的衣物可能需要反覆蒸熨。必要時請再重複使用。
- 通過練習，你將更快速和更有效率地活用這手持式掛燙刷。你很快便會知道哪些面料需要連續噴出蒸氣多次。
- 使用後，請緊記拔掉掛燙刷插頭並把水箱內剩餘的水從水箱倒出，以避免漏水。
- 可用柔軟潔布輕輕拭擦掛燙刷表面作日常清潔。
- 請不要把掛燙刷直接用於大織物或絲綢上。
- 請注意：當在門上掛上服裝蒸熨時，強熱的蒸氣是會有可能損壞門面，請小心。

**注意：**請於衣物表面上不顯眼的地方測試顏色牢固度。蒸熨亞麻布窗簾、毛巾、手帕、餐巾時，請放於桿子或毛巾架上進行蒸熨。

#### 產生褶皺

- 掛起衣物。
- 在想要產生折縫或產生褶皺的位置對折衣物。夾緊褶層並用蒸氣直接蒸熨。

#### 蒸熨領帶

- 將領帶掛在衣架上。
- 將蒸氣直接蒸熨到領帶。

#### 蒸熨披肩和袖套

- 掛起衣物。最好使用填塞式衣架。
- 使用捲圍的毛巾填塞披肩或袖套。
- 將蒸氣噴射到衣物上。

#### 手持式掛燙刷日常問題與解決方法

- 問題—無蒸氣噴出  
原因—並未開機  
解決方法—按下手柄上的蒸氣觸發器
- 問題—掛燙刷不發熱  
原因—並未插上電源  
解決方法—插上電源
- 問題—無蒸氣噴出  
原因—水箱內水位低  
解決方法—拔掉掛燙刷插頭，並注入清水
- 問題—蒸氣不流暢地噴出  
原因—水垢積聚於水箱內  
解決方法—清除水垢

#### 清除水垢指示

若此電器噴出蒸氣的速度開始減慢。或蒸氣間歇地停止噴出，您可能需要清除水垢。水垢是金屬機件上日積月累的鈣化合物。為保持美康蒸氣手持式掛燙刷的最佳運作，請經常清除水垢。清除水垢的頻率視乎水的硬度及使用頻率而定。要清除水垢，混和三份白醋及三份清水並注入水箱。插上電源，待準備指示燈亮起，按下蒸氣觸發器。並待全部的水醋混合物蒸發掉。鬆開蒸氣觸發器，拔去電源，待其冷卻30分鐘。提起水箱倒去水箱內剩餘的水於洗手盆中。重覆以上步驟，通常2-3次，直至噴出蒸氣的速度回復正常。每次請用新混和的水醋混合物。清除水垢後，用冷水重覆以上步驟一次後，才蒸熨衣物。

 
**注意：**不同地區的水所含的礦物成份不同，為確保掛燙刷的持續正常操作，收存前請把水箱清洗乾淨及倒去剩餘的水。

#### 收存指示

非使用掛燙刷時，拔去插頭並收存在安全、乾爽、遠離兒童的地方。切勿將電源線圍繞掛燙刷。

**注意：**  
**若你認為關機視同截斷電源，  
那便大錯特錯了。**

#### 遠離水源

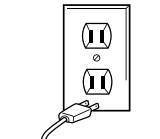

眾所週知，電與水是個很危險的組合。但你是否電器關機後仍是帶電的？只要插上電源，電器仍是帶電的。所以用畢電器後，請拔去插頭。

**所有小型家庭電器用畢後，  
電源插頭必須拔掉。**

#### 一年保固限期

在您購買日期起一年內，在正常使用的情况下，如產品的品質或零件有任何問題，我們會為您免費提供維修或換貨服務。  
**注意：**此項保固不包括一切因錯誤使用、不依指示處理產品及意外損毀、遺失零件及經自行改造的產品。如需獲得此保固服務，請在購買後的一個月內，通過以下任何一種方式進行登記。

#### 保固期之後

請致電使用說明書中所列出您所在地區的顧客服務中心，詢問維修服務詳情，或是電郵至 [conairasia\\_tw@conair.com](mailto:conairasia_tw@conair.com)，附上您的名字，電話號碼和電郵地址，及說明產品問題的詳細情況。

#### 顧客服務中心

**香港商美康雅香港有限公司台灣分公司**  
客服地址：114台北市內湖區堤頂大道二段417號1樓  
客服電話：(886) 2-8751-3633  
電郵：[conairasia\\_tw@conair.com](mailto:conairasia_tw@conair.com)  
網址：[www.conair-asia.com](http://www.conair-asia.com)

產品名稱：掛燙刷  
產品型號：CGS23W  
額定電壓：110V 頻率：60Hz  
額定消耗功率：1100W 商標：CONAIR  
製造商：美康雅電器有限公司  
委製廠商：美善實業有限公司 產地：中國  
進口商：香港商美康雅香港有限公司 台灣分公司  
客服地址：台北市內湖區堤頂大道二段417號1樓  
製造年份：見本機標示  
製造號碼：見本機標示

CGS23W

IB-15/460A

### CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	06/16/17
Customer	COSTCO-TW
Model No.	CGS23W
Description	IB
Job No.	17CF003
Reference No.	IB-15/460A
Revision No.	2
Color	1C+1C(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Nancy Lin
Approved by	Jimmy Ng / Flower Yang
Vendor	MILLPLAN
Supplier	

#### 產品保修卡

親愛的客戶，  
感謝您購買該產品。本保修卡為享有保修服務的重要認證，請確實填寫。謝謝！

自您購買之日起的一年內，在正常使用的情况下，如產品的本身或零件有任何問題，我們將為您免費提供維修或更換服務。如需獲得此項保修服務，請在購買後的一個月內，填寫此產品保修卡，並連同購買憑證如發票或收據的影本，寄到產品說明書中所列出的顧客服務中心。

#### 請填寫以下資料

姓名：\_\_\_\_\_先生/小姐/女士  
郵遞區號：\_\_\_\_\_  
地址：\_\_\_\_\_縣/市\_\_\_\_\_區\_\_\_\_\_路/街\_\_\_\_\_巷  
\_\_\_\_\_弄\_\_\_\_\_號\_\_\_\_\_樓  
電話：\_\_\_\_\_ Email: \_\_\_\_\_  
產品名稱：\_\_\_\_\_  
產品型號：\_\_\_\_\_  
購買商店：\_\_\_\_\_  
購買日期：\_\_\_\_\_

#### 保修條款

- 您的產品按照嚴格的規範製造，使用非授權的零配件、更換或維修造成的故障或損壞，不在本保修範圍內。
- 本保修不包括事故、誤用、運輸或非日常家庭使用造成的任何損壞。
- 本保修不包括所有意外或間接損壞。
- 除了寄回保修卡外，消費者還需要保留購買憑證如發票或收據正本，才能獲得保修權益。如果您沒有最初購買日期的憑證，則本保修卡中的購買日期即認定為製造日期。

折疊方法  
Folding method:  
12 pages (6 x 2)



## Warranty Card

Dear Consumer,  
Thank you for your purchase of this products. This warranty card is an important proof for warranty service. Please complete it earnestly. Thanks!

We warranty that under normal use, if the quality or parts of your product should prove to be defective within 1 year from your purchase date, our Consumer Service Center will repair or replace it at our option, without charge to you. To obtain warranty service, please complete and send the warranty card and purchase proof copies to the Service Center listed in the Instruction Book **WITHIN ONE MONTH**.

### Please fill in the following information:

Name: Mr./Miss/Ms. \_\_\_\_\_ Zip Code : \_\_\_\_\_

Address: \_\_\_\_\_

Tel: \_\_\_\_\_ Email: \_\_\_\_\_

Product Name: \_\_\_\_\_

Model No.: \_\_\_\_\_

Store of Purchase: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

### Warranty Terms:

- Your product has been manufactured to the strictest specifications and has been designed for use with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by accessories, replacement parts or repair service other than those which have been authorized by us.
- This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use.
- This warranty excludes all incidental and consequential damages.
- In addition to return of warranty card, the consumer has to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

## CONAIR EXTREME STEAM FABRIC STEAMER

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

### SAFETY PRECAUTIONS

**WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off.
- Never immerse the unit in water or any other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the unit if it has fallen or if it appears to be damaged.
- Do not leave the unit unattended when it is plugged in or switched on.
- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by manufacturer.
- Unplug the unit after each use and before filling or cleaning it.
- This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
- Allow the unit to cool before storing.
- To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
- When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.
- Do not steam garments while on a person.
- Burns could occur from touching hot metal parts, hot water or steam. Use care when you turn steam appliance upside down.
- Do not operate steamer without correctly filling the water container. Only use clean cold water for filling this appliance. In hard water areas, we recommend the use of distilled water.
- Use of an extension cord is not recommended. If an extension cord is absolutely necessary, a 13-ampere cord should be used. Cord rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
- Use with caution when carrying steamer as it contains hot water.

19. Use distilled water only.

**NOTE:** This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because surfaces continue to heat, which could be hazardous and may damage unit.

Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplug the unit and allow it to cool. Empty container and refill before actually using.

### HOUSEHOLD USE ONLY

### FILLING INSTRUCTIONS

- Place the unit on its back on a flat and stable surface, make sure unit is unplugged. (Fig. A)



 
- While holding the water tank with one hand, move the lock switch up toward the steam head nozzle. (Fig. B)



- Pull the reservoir out, away from the body. (Fig. C)



- Turn the reservoir over, revealing the rubber inlet cover. (Fig. D)

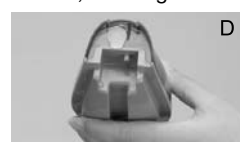

- Open the inlet cover and fill the tank with distilled water. (Fig. E.F)




- Close the inlet cover and return the reservoir to its place, making

sure that it is secure. (Fig. G.H)



### GET TO KNOW YOUR STEAMER

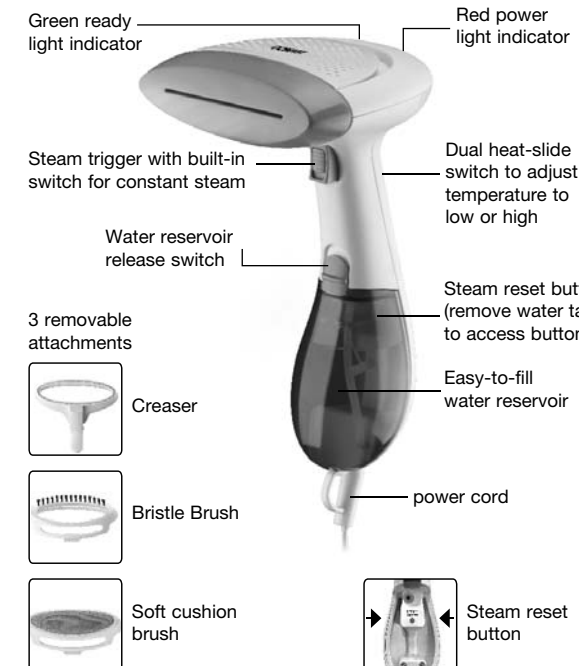 

### STEAM RESET BUTTON

The unit has a red steam reset button located under the water tank. Only press it if the unit does not steam after 15 seconds.  
**Note:** The steam reset button does NOT need to be pressed before each use.

### BRUSH ATTACHMENT

Your garment steamer includes a brush attachment for extra grooming and care of all your clothes. The brush helps the steam penetrate the fabric by separating the fibers. You can use the steamer to effectively remove wrinkles with or without using the brush attachment. Do not attempt to attach or remove the brush attachment while unit is steaming or hot. Wait until unit is completely cool. Place the brush onto the steamer head by simply pushing the brush onto the front of the steamer head. The wider portion of the

brush attachment should be toward the bottom of the unit.

**CAUTION:** Always let the steamer cool down before assembling or removing the attachments.

### ACCESSORIES:

- Creaser attachment: creates creases for trousers and sleeve and general smoothing.
- Bristle brush: Snap onto the steamer head and use to remove loose dirt and dust from the fabric before steaming.
- Soft cushion brush: for delicate garment.

### OPERATING THE STEAMER

- Plug the unit into the electrical outlet.
- The power light will light up (red). Allow one or two minutes for the unit to warm up. The appliance is ready to use when the ready light goes on (green).
- Holding the steam jets away from you and anyone else in the room, engage the trigger. Steam should now be released from the steam jets. To have continuous steam, just move switch on trigger lower so you will have continuous steam without having to hold the trigger. Always have steam facing away from you or anyone in the room.
- When first using the device, test on an old cloth, as there may be sediment left from the manufacturing process or transportation.
- On the back of the steamer there is a sliding switch for high and low settings. High is for heavier and badly wrinkled fabric and provides faster, hotter, less visible steam. Low setting should be used for delicate fabrics like silk, in combination with soft cushion brush attachment.
- To stop the flow of steam, release the trigger or upward the switch.
- Unplug the device when it is not in use.

### STEAMING TIPS

- To prepare your fabric for steaming, brush it with the soft cushion brush attachment. This will loosen the fibers and allow better steam penetration.
- Hang your garment or fabric.
- Pass the steam jets just above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely.
- Heavier fabrics may require repeated steaming. Repeat as necessary.
- With practice, you will gain speed and efficiency. You will soon learn which fabrics require multiple steam applications.
- After use, unplug steamer and empty any remaining water from the tank to avoid leakage.
- Gently wipe the unit by soft cloth for cleaning.
- Do not directly touch velvet or silk with the steam head.
- CAUTION:** When hanging garment on a door while steaming, be careful not to damage the door with steam

**NOTE:** Test fabric for color fastness in an inconspicuous spot. Drape linens, towels, handkerchiefs and napkins over a rod or place onto a towel rack.

### TO MAKE CREASES OR PLEATS

- Hang garment.
- Fold fabric where crease or pleat is desired. Hold fold in place while applying steam directly to fold.

### TO STEAM TIES

- Hang tie on hanger.
- Apply steam directly to tie.

### TO STEAM SHOULDERS AND SLEEVES

- Hang garment, preferably on a padded hanger.
- Fill out shoulders or sleeves with folded towel.
- Apply steam to garment.

### TROUBLESHOOTING THE STEAMER

- PROBLEM** — No steam  
**CAUSE** — Steamer not turned on  
**SOLUTION** — Slide the steam trigger
- PROBLEM** — Steamer fails to heat  
**CAUSE** — Steamer not plugged in  
**SOLUTION** — Plug into electrical outlet
- PROBLEM** — No steam  
**CAUSE** — Water level is low  
**SOLUTION** — Unplug the steamer and refill water container
- PROBLEM** — Poor steam performance  
**CAUSE** — Sediment in container  
**SOLUTION** — Decalcify water container

### DECALCIFICATION

If the appliance begins to produce steam more slowly than usual, or stops producing steam and then starts again, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits that form over time on the metal parts of the steamer. For best performance from the Conair Garment Steamer, decalcify the unit from time to time. The frequency depends upon the hardness of your tap water and how often you use the steamer. To decalcify, use a solution of 1/3 white vinegar and 2/3 water in the water reservoir.

Plug the unit into electrical outlet. Wait the ready light goes on then activate the steam trigger, and run until all amount has steamed. Release the steam trigger, unplug from electrical outlet, and allow to sit for 30 minutes.

Repeat the above procedure as many times as necessary until a normal steam rate returns, usually 2 to 3 times. With each repeated cycle, use a fresh solution of vinegar and water. Run one cycle of fresh, cold water through the unit at the completion of decalcification before using the unit again to steam garments.

 
**Note:** Minerals in water will vary in different areas. To insure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water container.

### STORAGE

When not in use, your unit should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around unit.

**WARNING:**  
**IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

**KEEP AWAY FROM WATER**



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

### ALWAYS UNPLUG SMALL APPLIANCES

### ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. Please fill in and return the Warranty Registration as instructed or log into [www.conair-asia.com](http://www.conair-asia.com) to register. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under guarantee through the Conair Service Centre. Conair reserves the right to amend terms and specifications without prior notice. To obtain service under this warranty, please send in registration within one month of purchase through either one of the following ways.

### OUT OF GUARANTEE

Call customer service in your region as listed in this Instruction Booklet for details of repair service. Or email to [conairasia\\_tw@conair.com](mailto:conairasia_tw@conair.com), contact telephone number and email address and details of the fault.

### CUSTOMER SERVICE:

1F, No.417, Sec. 2, Tiding Blvd., Neihu Dist.,  
Taipei City 114, Taiwan (R.O.C.)  
Conair Customer Hotline: (886) 2-8751-3633  
E-mail: [conairasia\\_tw@conair.com](mailto:conairasia_tw@conair.com)  
Website: [www.conair-asia.com](http://www.conair-asia.com)