

# Cuisinart®

## INSTRUCTION BOOKLET



**Cuisinart® Thermal 10-Cup  
Programmable Coffeemaker**

**DCC-1150BKTW**

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

---

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles and knobs.
3. To protect against electric shock, do not place cord, plug, or base in water or other liquids.
4. **Always unplug from outlet when not in use and before cleaning.** Allow to cool before putting on or taking off parts and before cleaning the appliance.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest Cuisinart Repair Center for examination, repair, or electrical or mechanical adjustment.
6. The use of accessory attachments not recommended by Cuisinart may cause injuries.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter, or touch any hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Always fill water reservoir first, then plug cord into the wall outlet. To disconnect, turn controls to off, then remove plug from wall outlet.
11. Do not use appliance for other than intended use.
12. Snap lid securely onto carafe before serving any beverages.
13. Scalding may occur if the lid is removed during the brewing cycle.
14. The thermal carafe is designed for use with appliance base only. It must never be used on the range top.
15. Do not set a hot carafe on a wet or cold surface.
16. Do not use a cracked carafe or a carafe having a loose or weakened handle.
17. Do not clean carafe or resting plate with cleansers, steel wool pads, or other abrasive materials.
18. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BASE PANEL. NO USER SERVICEABLE PARTS ARE INSIDE. REPAIR SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL.**
19. Avoid contact with moving parts.
20. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

### WARNING: RISK OF FIRE OR ELECTRIC SHOCK



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

---

## SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

## OPERATING NOTICE

Clogging and backing up of water and/or coffee in the filter basket can occur under any or a combination of any of the following conditions: The use of too finely ground coffee, using two or more paper filters, using the gold tone filter in conjunction with a paper filter or not properly cleaning coffee grounds from the gold tone filter, or allowing coffee grounds to spill over the filter.

**Caution:** Never open the reservoir cover during the brewing cycle, even if no water is draining from the filter basket, since extremely hot water/coffee can spill out from the basket and cause injury. If water/coffee is not draining from the filter basket during the brewing cycle, unplug the unit and wait 10 minutes before opening the reservoir cover and checking the basket.

## IMPORTANT UNPACKING INSTRUCTIONS

1. Place the box on a large, sturdy, flat surface.
2. Remove the instruction book and any other literature.
3. Turn the box so that the back side of the coffeemaker is down and slide the coffeemaker from the box.
4. After the coffeemaker has been removed, place the box out of the way and remove the top and bottom two pulp box.
5. Grasp the carafe by its handle, remove it from the heater plate and remove the polybag.
6. Remove the polybag covering from the coffeemaker and lift the coffeemaker off the remaining two inserts.

We suggest you save all packing materials in the event that future shipping of the machine is needed. Keep all plastic bags away from children.



# CONTENTS

Important Safeguards. . . . . 2

Special Cord Set Instructions . . . . . 3

Notices . . . . . 3

Important Unpacking Instructions . . . . . 3

The Quest for the  
Perfect Cup of Coffee . . . . . 4

Features and Benefits . . . . . 5

Control Panel . . . . . 6

Programming Your Coffeemaker . . . . . 7

Making Coffee . . . . . 8

Cleaning and Maintenance . . . . . 9

Warranty . . . . . 10

# INTRODUCTION

Congratulations on the purchase of your new Cuisinart® Classic Thermal 10-Cup Programmable Coffeemaker! Please take a few moments to discover the features of your new coffeemaker, including the double-wall thermal carafe, and the programmable brew functions. Classic Cuisinart style means you'll enjoy every cup for years to come.

## THE QUEST FOR THE PERFECT CUP OF COFFEE

### ELEMENT 1: WATER

Coffee is 98% water. The quality of that water is as important as the quality of your coffee. If water doesn't taste good from the tap, it won't taste good in your coffee. Cuisinart includes a charcoal water filter to remove chlorine, bad tastes and odors, for the purest coffee flavor, every time you brew.

### ELEMENT 2: COFFEE

While coffee is 98% water, all of the flavor comes from the beans. To achieve the same great taste you enjoy at a coffee bar, you need to use the same quality of coffee. If you choose to grind your own beans, buy them fresh and whole. Buy only about a two-week supply at a time, because once the bean is broken, its flavor degrades quickly.

### ELEMENT 3: GRIND

The grind is critical for proper flavor extraction. If the grind is too fine, over-extraction and bitterness will result. Too fine a grind may also clog the filter. If grind is too coarse, the water will pass through too quickly and the maximum flavor will not be extracted. When grinding your own beans, we recommend a medium-fine grind.

### ELEMENT 4: PROPORTION

Coffee that is too strong or too weak is always a disappointment. Follow the recommended portions of ground coffee in the instructions under Brewing Coffee, and later adjust the amount to suit your taste.

## FEATURES AND BENEFITS

### 1. Reservoir Cover

Flips back for easy filling.

### 2. Coffeemaker Water Reservoir (not shown)

With water level indicator window.

### 3. Showerhead (not shown)

Distributes water evenly over coffee, reducing temperature loss as water passes through grounds.

### 4. Charcoal Water Filter Holder

Holds filter firmly in place.

### 5. Charcoal Water Filter

Eliminates chlorine, bad tastes and odors from tap water.

### 6. Filter Basket (not shown)

Holds a #4 paper filter **OR** a permanent filter.

### 7. Filter Basket Holder (not shown)

### 8. Permanent Gold-Tone

 
#### Commercial-Style Filter (not shown)

Eliminates the need for paper filters.

**NOTE:** Some fine grounds may flow through the filter and appear as sediment in the carafe.

### 9. Brew Pause™

Stops flow of coffee from basket when carafe is removed (30 seconds max) from the heater plate, so a cup can be poured in mid-brew.

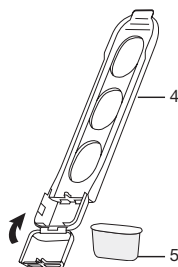

### 10. Thermal Carafe with Hands-Free Lid

The double-wall insulated 10-cup stainless steel carafe has an ergonomic handle and hands-free lid. A ball built into the lid *floats* to let coffee flow in and out without opening or turning the lid. Unique design seals out air to protect coffee flavor.

### 11. Resting Plate

Scratch resistant with black, nonstick coating.

### 12. Ready Tone

Signals the end of the brew cycle with five beeps.

 
### 13. Cord Storage (not shown)

Convenient storage area keeps counters clear.


### 14. Power Loss Back-up System (not shown)

One-minute protection if a breaker trips, unit is unplugged, or power fails. Holds all programmed information, including time of day, Auto On time and Auto Off time.

### 15. Measuring Scoop (not shown)

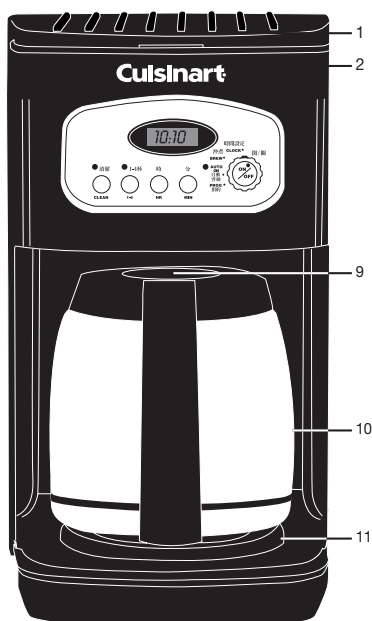

## GETTING TO KNOW YOUR CONTROL PANEL

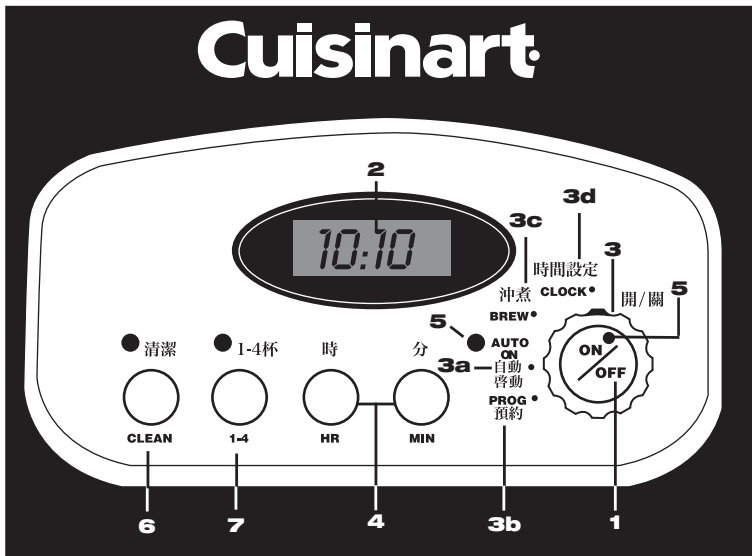 

## 1. On/Off Button

Used to turn your coffeemaker on and off; also works in tandem with the function knob.

## 2. Clock Display

Displays time of day and auto on time.

### 3. Function Knob

For setting time of day, and auto on time.

### a. Auto On

The Auto On feature is used to program the start time of the brew cycle. The auto on time can be set for any time, day or night. The PM indicator is displayed on the LCD for nighttime program times.

### b. Program Set

The Program Set function is used to set the time for the Auto On function.

**c. Brew**

The Brew function is used to start the brew cycle directly.

#### d. Clock Set

Used to program the time of day.

#### 4. Hour and Minute Buttons

For use in setting hour and minute for time of day, and auto on time.

## 5. On/Off and Auto On Indicator Lights

## 6. Clean Setting

Used to indicate time to clean your coffeemaker to remove calcium buildup.

## 7. 1-4 Cup Setting

For brewing smaller pots of coffee – it provides double heating of the water, so coffee is piping hot.

## 8. Audible Tone

The Cuisinart® Thermal 10-Cup Programmable Coffeemaker is equipped with an audible tone which will sound 5 times when the coffee has completed brewing (coffee will continue to stream from the filter for a few seconds after tone).

---

# PROGRAMMING YOUR COFFEEMAKER

## TO BREW COFFEE

1. Turn the function knob to “Brew.”
2. Press the On/Off button and release.  
The red On indicator light will illuminate and brew cycle will begin.

## TO TURN THE COFFEEMAKER OFF

Press the On/Off button and release.

**Note:** This coffeemaker shuts off automatically after brewing is complete.

## PROGRAMMING YOUR COFFEEMAKER FOR DELAYED BREW TIME

### To set the time:

1. Turn the function knob to “Clock.”
  - a. **Set Hour:** Press and hold the Hour button to scroll through numbers quickly. When number displayed approaches the desired setting, press and release (pulse) the button to advance one digit at a time. After setting the correct hour, the default will be the last time set unless power is shut off.

**NOTE:** When the number count passes 12, the PM light will be displayed on the LCD.

- b. **Set Minutes:** Press and hold the Minute button to scroll through numbers quickly. When number displayed approaches the desired setting, press and release (pulse) the button to advance one digit at a time. After setting the correct minute, the default will be the last time set unless power is shut off. To finish setting time, turn the Function Knob to any other setting or simply wait until the numbers stop blinking.

## To program the Auto On (brew start time)

1. Turn the function knob to “Prog.”
2. Set the time you want coffee to begin brewing by using the minute and hour push-buttons. Follow the same instructions you used to set the time of day, in the **To set the time** section above.
3. Turn the function knob to “Auto On.” LCD will display the current time.
4. Press the On/Off button and release. The green indicator light will come on to remind you that the programming function is in use. At the programmed time, the red indicator will come on as well, indicating that the brew cycle is starting. Both lights will go off when keep warm cycle ends.

**NOTE:** To reactivate the auto-on feature to start brew cycle at the same time another day, simply press the On/Off button and release. The green Auto-On light will illuminate.

## 1 - 4 Cup Setting

The 1- 4 cup setting button is used when you make small amounts of coffee. The 1-4 cup setting basically double heats the water, making your smaller amount piping hot.

**To use:** When making a smaller amount, press the 1-4 button on the control panel after turning on the unit.

## Power Loss Back-up

One-minute protection in case a breaker trips, the unit is unplugged, or the power fails. It holds all programmed information, including time of day, auto on time and auto off time.

## CHARCOAL WATER FILTER

 
Your Coffeemaker comes with a charcoal water filter that eliminates chlorine, bad tastes and odors from tap water.

### Inserting the Water Filter

- Remove the filter from the polybag and soak it, fully immersed, in cold tap water for 15 minutes.
- Lift the water filter holder out of the water reservoir (see diagram, page 5).
- Press down on the filter compartment and pull toward you to open.
- Place filter into the holder and snap it closed. Be careful – improper placement can tear the filter skin.
- Flush filter by running cold tap water through holes in bottom of compartment for 10 seconds.
- Allow the filter to drain completely.
- Slide the water filter holder back into the channel in the water reservoir, pushing it down to the base of the unit.

**NOTE:** We recommend changing the water filter every 60 days or after 60 uses, and more often if you have hard water.

Replacement filters can be purchased in stores, by calling Cuisinart Customer Service, or at [www.cuisinart.com](http://www.cuisinart.com).

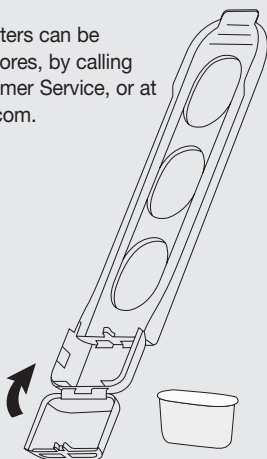

## BREWING COFFEE

**Follow instructions in Before First Use on previous page.**

### 1. Insert charcoal water filter

Follow directions for the preparation and insertion of the filter on page 8.

### 2. Fill the water reservoir

Open the Coffeemaker reservoir cover by lifting it up. Pour in the desired amount of water using the water level indicator located at the side of the coffeemaker.

### 3. Cup preference

Push the 1–4 cup button if you are brewing fewer than 5 cups.

### 4. Add the ground coffee

Remove the filter basket by grasping the handle and lifting straight up. Insert a #4 paper filter **OR** permanent filter. Be sure that a paper filter is completely open and fully inserted in the basket. It may help to fold and flatten the seams of a paper filter beforehand. Add 1 level scoop of ground coffee per cup. Adjust the amount according to taste.

**NOTE:** The maximum capacity for ground coffee is 15 tablespoons for this coffeemaker. Exceeding this amount may cause overflow if the coffee is too finely ground.

Replace the filter basket in the filter basket holder and press firmly on cover to be sure it closes securely.

### 5. Before brewing coffee

Make sure the glass carafe is in position on the heater plate and the top cover is closed. Plug the cord into an electrical outlet.

### 6. Power unit

Turn the Function knob to BREW, press the On/Off button, and the blue indicator light will turn on. Or, set the AUTO ON function (see page 7) and the Auto On indicator will light.

### 7. After brewing is complete

When the brewing cycle has been completed, five beeps will sound. Coffee will continue to stream from the filter for several seconds.



---

**NOTE: Reservoir cover may be hot during and directly after brewing. Wait at least 10 minutes before opening.**

## CLEANING AND MAINTENANCE

Always turn coffeemaker OFF and remove the plug from the electrical outlet before cleaning.

Lift up the reservoir cover. Remove and discard the paper filter and ground coffee. The filter basket and permanent filter can be washed in warm, soapy water and rinsed thoroughly, or cleaned in the upper rack of the dishwasher.

Dry all parts after use.

**Do not put any water in the unit once the filter basket has been removed. Wipe the area under the filter basket with a damp cloth.**

Remove the carafe from the resting plate.

Discard any remaining coffee. The carafe and lid can be washed in warm, soapy water and rinsed thoroughly, or placed in a dishwasher.

The carafe and carafe lid should be placed on the upper rack only.

Do not use any scouring agents or harsh cleansers on any part of the coffeemaker.

Never immerse base unit in water or other liquid. To clean base, simply wipe with a clean, damp cloth and dry before storing.

Fingerprints and other blemishes on the stainless steel housing can be washed off with soap and water or a nonabrasive cleaning solution. Wipe resting plate with a clean, damp cloth. Never use rough, abrasive materials or cleansers to clean the resting plate. Do not dry the inside of the water reservoir with a cloth, as lint may remain.

## MAINTENANCE

Any other servicing should be performed by an authorized service representative.

## DECALCIFICATION

Decalcification refers to the removal of calcium deposits that form over time on the metal parts of the coffeemaker.

### To Decalcify Your Coffeemaker

For best performance from your Coffeemaker, decalcify the unit from time to time. The frequency depends upon the hardness of your tap water and how often you use the Coffeemaker. The flashing Clean light will indicate when unit should be cleaned. If the Clean light begins to flash when the Coffeemaker is turned on, it is telling you that the calcium buildup is interfering with the functioning of your Coffeemaker and the flavor of your coffee. To clean, fill the water reservoir to capacity with a mixture of  $\frac{1}{3}$  white vinegar and  $\frac{2}{3}$  water. Press the Clean button. When the Clean light glows, turn the Coffeemaker on by pressing the On/Off button. The Clean light will shine steadily. The Coffeemaker is now in CLEAN mode. One cycle should be sufficient to adequately clean the Coffeemaker. When the cycle is completed and the five beeps sound, the Coffeemaker will shut off. Turn the Coffeemaker on to see if the Clean light continues to flash. If it does, turn it off and then repeat the cleaning procedure with a fresh solution of vinegar and water.

If the Clean light no longer flashes, turn the Coffeemaker off and then run one cycle of fresh cold water through the unit before using the unit again to brew coffee.

### Notes on the CLEAN Function

Pressing the Clean button cancels all other settings. If it is pressed accidentally, press it again to return the Coffeemaker to all its previous settings. Pressing On/Off will also exit the CLEAN mode and turn the Coffeemaker off.

---

## WARRANTY

This Cuisinart appliance is guaranteed for domestic consumer use for 2 years warranty.

The guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorized persons.

If the appliance does not perform satisfactorily due to defects of material or manufacture, please contact local distributor for maintenance service.

### **Customer Service Centre:**

Conair Hong Kong Limited, Taiwan Branch  
6F., No.24-26, Ln. 583, Ruiguang Rd.,  
Neihu Dist., Taipei City 114, Taiwan (R.O.C.)  
Tel: +886-2-8751-3633

**Notice:** Chinese version is taken as standard for guarantee period and specifications.

NOTES:

©2018 Cuisinart®  
6F., No.24-26, Ln. 583, Ruiguang Rd.,  
Neihu Dist., Taipei City 114, Taiwan (R.O.C.)  
Tel: +886-2-8751-3633  
Fax: +886-2-8751-3922

Customer Service Hotline (Taiwan):  
+886-2-8751-3633

Trademarks or service marks referred to herein are  
the trademarks or service marks of their respective owners.

**F IB-16/252B**

本文提及其他商標或服務標記均屬其各自所有者。

F IB-16/252B

顧客服務熱線(台灣):  
+886-2-8751-3633

電話: +886-2-8751-3633  
傳真: +886-2-8751-3922  
統一編號: 54378282  
台北市內湖區瑞光路583巷24、26號6樓  
香港商美康雅香港有限公司台灣分公司  
©2018 Cuisinat®

姓名	電話：		
地址			
商品			
機型			
機號			
為確保您的權益，請檢查各項資料是否正確，並檢查是否蓋上經銷商確認章，無蓋章者無效。			
• 非台灣型號者，恕難提供售後服務。			
• 日期未填寫者，本保證書無效。			
公認經銷商章			
購買(交易)日期：年 月 日			

香港商美康雅香港有限公司台灣分公司  
台北市內湖區瑞光路583巷24、26號6樓  
1st / 2nd=WW=YY年中第幾週數;  
3rd / 4th=YY=西元年的後兩位數字=20YY)  
製造日期格式說明:

設備名稱：半自動10杯經典美式咖啡機

EQUIPMENT NAME：半自動10杯經典美式咖啡機  
型號(型式)：DCC-I150BKTW  
RESTRICTED SUBSTANCES AND ITS CHEMICAL SYMBOLS

單元 UNIT					
鉛 LEAD (PB)	汞 MERCURY (HG)	鎘 CADMIUM (CD)	六價鉻 HEXAVALENT CHROMIUM (CR <sup>(6)</sup> )	多溴聯苯 POLYBROMINATED BIPHENYLS (PBB)	多溴二苯醚 POLYBROMINATED DIPHENYL ETHERS (PBDE)
○	○	○	○	○	○
電源線材	○	○	○	○	○
PCB	○	○	○	○	○
雲母片	○	○	○	○	○
外殼塑料	○	○	○	○	○

備考 1：“超出0.1 WT %”及“超出0.01 WT %”係指限用物質之百分比含量超出百分比含量基準值。  
NOTE 1：“EXCEEDING 0.1 WT %” AND “EXCEEDING 0.01 WT %” INDICATE THAT THE PERCENTAGE CONTENT OF THE RESTRICTED SUBSTANCE EXCEEDS THE REFERENCE PERCENTAGE VALUE OF PRESENCE CONDITION.

備考 2：“○”係指該項限用物質之百分比含量未超出百分比含量基準值。  
NOTE 2：“○” INDICATES THAT THE PERCENTAGE CONTENT OF THE RESTRICTED SUBSTANCE DOES NOT EXCEED THE PERCENTAGE OF REFERENCE VALUE OF PRESENCE.

備考 3：“-”係指該項限用物質為排除項目。  
NOTE 3：“-” INDICATES THAT THE RESTRICTED SUBSTANCE CORRESPONDS TO THE EXEMPTION.

## 保固

### 主機兩年保固

本保證書僅適用於消費者。如果您在零售商店購買Cuisinart®半自動10杯經典美式咖啡機，並供個人、家人或家庭使用，您就是一個消費者。除非適用法律另有要求，本保證書不適用於零售商或其他商業購買者或所有人。

我們保證，您的Cuisinart®半自動10杯經典美式咖啡機，自初始購買之日起2年，在正常家庭使用情況將能正常使用。

消費者需保留原始購買證明，因此才能獲得保固。如果您沒有購買日期的證明，用於保證書的購買日期將以生產日期為準。

如果您的Cuisinart®半自動10杯經典美式咖啡機按照嚴格的規範製造，僅適用於使用110伏的插座、經授權的配件和更換配件。本保證書明確排除使用轉換器以及非Cuisinart授權的配件、零件或維修服務造成的任何缺陷或損壞。本保證書不包括因意外、誤用、運輸或者其他非普通家庭使用造成的任何損壞。本保證書不包括所有意外或間接損壞。

**重要提示：**如果不合格產品由Cuisinart授權服務中心以外的其他人維修，請提醒維護人員致電我們的消費者服務中心886-2-8751-3633，以確保正確診斷問題、用正確的配件維修產品以及該產品仍在保證書期內。

您的Cuisinart®半自動10杯經典美式咖啡機將由Cuisinart台灣分公司，台北市內湖區瑞光路583巷24、26號6樓。

## 清潔和維護

清潔之前，務必先關閉咖啡機，再從電源插座移除插頭。

打開水箱蓋，取出並丟棄濾紙和咖啡粉。過濾網架和永久過濾網可先用溫熱的肥皂水洗滌再徹底沖洗，或放在洗碗機的上層擱架清洗。

用後，擦乾所有配件。

取出過濾網架後，切勿再加水。用濕布擦拭過濾網架下方的區域。

從托盤取出咖啡壺。倒掉剩餘的咖啡。

咖啡壺和蓋子可先用溫熱的肥皂水洗滌再徹底沖洗，或放在洗碗機中清洗。咖啡壺和蓋子只能放在上層擱架。

切勿使用任何洗滌劑或去污粉清洗咖啡機的任何配件。

## 維護

任何其他服務應由獲授權的服務代表來完成。

## 脫鈣

脫鈣指除去經過一段時間在咖啡機裡的金屬配件上形成的鈣鹽沉積。

## 咖啡機脫鈣

為保證咖啡機的最佳性能，應經常脫

鈣。頻率取決於所用自來水的硬度和使用咖啡機的頻率。清潔燈閃爍，表示應清潔設備。咖啡機啟動時，如果清潔燈開始閃爍，表示積聚的鈣會影響咖啡機

## 清潔功能的注意事項

按下清潔按鈕，取消所有其他設定。如果無意碰到按鍵，再次按下，咖啡機恢復到以前的所有設定。按開/關按鈕也可退出清潔模式，並關閉咖啡機。

如果清潔燈不再閃爍，關閉咖啡機，先用乾淨清水運行一次程序，然後再沖泡咖啡，避免醋味殘餘影響咖啡味道。

的運作和咖啡的味道。清潔時，在水箱中加入 $\frac{1}{3}$ 的食用白醋和 $\frac{2}{3}$ 的水(勿超過10杯最大水量)。按清潔按鈕。當清潔燈亮起，按下開/關按鈕，啟動咖啡機。清潔燈將持續亮起。咖啡機現在處於清潔模式。一次的清潔程序應足以充分清洗咖啡機。當此程序結束時，發出五聲嗶嗶聲，咖啡機將關閉。啟動咖啡機，查看清潔燈是否繼續閃爍。如果閃爍，將其關閉，然後用新的醋和水的混合溶液重複清潔過程。



## 沖煮咖啡

首次使用前，請遵守上頁說明。

### 1. 插入活性炭濾水器

遵循第8頁的濾水器準備和插入說明。

### 2. 加滿水箱

打開水箱蓋，根據咖啡機側面的水位指示器倒入所需的水量。

### 3. 選擇沖煮的杯數

如果正在沖泡的量少於5杯，按1-4杯按鈕。

### 4. 添加咖啡粉

抓住手柄和垂直向上提起，取出過濾  
器。插入4號濾紙或永久性過濾網。  
確保濾紙完全展開，並完全服貼網  
內。可以事先折疊和展平濾紙的接  
縫。每杯添加1勺咖啡粉。根據口味  
調整添加量。

註：咖啡機可最多添加15勺咖啡粉。  
如果咖啡粉過細，超過此數量可能會  
溢出。

### 5. 沖泡咖啡之前

確保將玻璃咖啡壺放在加熱板的適當  
位置，且頂蓋關閉。將電源線插入電  
源插座。

### 6. 通電

將功能旋鈕轉到沖煮，按開/關閉按鈕，  
綠色指示燈會亮起。或者，設定自動  
啟動功能（見第7頁），自動啟動指  
示燈會亮起。

### 7. 沖泡完成後

沖煮程序完成時，發出五聲嗶嗶聲。  
咖啡將持續從過濾網流過幾秒鐘。  
註：在沖煮程序及沖煮程序剛完成  
後，水箱蓋可能會很熱。等待至少10  
分鐘再打開

## 活性炭濾水器

咖啡機配有木炭濾水器，可去除自來  
水中的氯、不好的味道和氣味。

### 插入濾水器

• 從塑膠袋取出過濾網，在冷自來水  
中完全浸泡15分鐘。

• 從水箱中提起濾水器支架（見圖，  
第5頁）。

• 按下過濾網，然後拉開。

• 將過濾網插入支架，並扣上。要小心  
放置不當可能會撕裂過濾網。

 
• 通過隔室底部的孔用冷自來水沖洗  
過濾網10秒。

• 讓過濾網完全排淨水分。

• 將濾水器支架滑回水箱內的通道，  
將其向下推到裝置的底部。

註：建議每隔60天或使用60次後更  
換濾水器，如果使用硬水，應更加頻  
繁地更換。

• 若家中有淨水器可不必再使用活性  
炭濾水器。

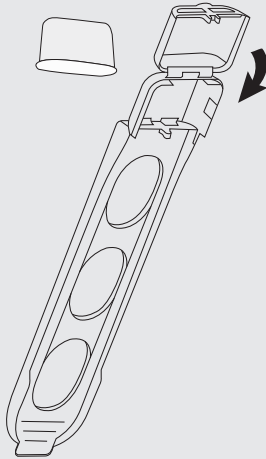

# 咖啡機設定

沖泡咖啡

1. 將功能旋鈕轉到“沖煮”。

2. 按下開/關按鈕。紅色的指示燈將亮起，沖煮程序將開始。

關閉咖啡機

按下開/關按鈕。

註：沖煮完成後，咖啡機將自動關閉。

設定咖啡機的延遲沖煮時間

設定時間：

1. 將功能旋鈕轉到“時鐘”。

a. 設定小時：

按住小時按鈕至時間閃爍，松手后再  
按住按鍵可快速設置時間。當顯示的  
數字接近所需要的設定時松开手，再  
按下按鈕。

註：當數字計數經過12時，PM指示燈

將亮起。

b. 設定分鐘：

按住分鐘按鈕至時間閃爍，松手后再  
按住按鍵可快速設置時間。當顯示的  
數字接近所需要的設定時松开手，再  
按下按鈕。

# 設定自動啟動（沖煮開始時間）

1. 將功能旋鈕轉到“程式”。

2. 使用分鐘和小時按鈕設定開始沖泡  
的時間。按照同樣的說明設定當日  
的時間，如上述設定時間所示。

3. 將功能旋鈕轉到“自動啟動”。LCD

會顯示當前的時間。

4. 按下開/關按鈕。綠色指示燈將亮

起，提醒您設定功能可用。到達設  
定的時間時，紅色指示燈將亮起，  
表明沖煮程序開始。保溫程序結束  
時，兩個指示燈均將熄滅。

註：要想在第二天的同一時間重新啟動自  
動啟動功能並開始沖煮程序，只需按下開/  
關按鈕。綠色自動啟動指示燈將亮起。

1-4杯設定


沖泡少量咖啡時，使用1 - 4杯設定按  
鈕。1-4杯設定基本上會雙倍加熱水，  
讓少量咖啡滾燙。

使用：沖煮少量咖啡時，開機之後，按

控制台上的1-4按鈕。

程序設定記憶功能

 可保留所有設定資訊，包括當日時間、  
斷路器跳閘、拔掉插頭、或電源故障，  
自動打開時間和自動關機時間。

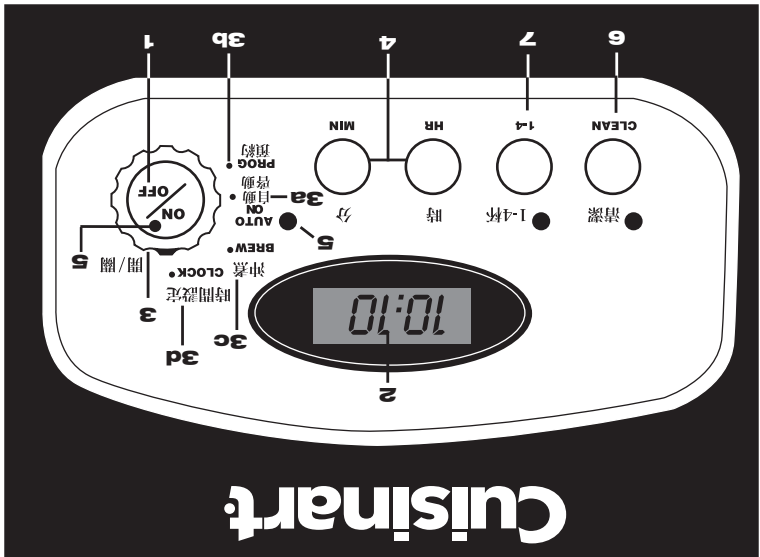

1. 開/關按鈕  
用來打開和關閉咖啡壺；也可配合功能旋鈕使用。
2. 時鐘顯示  
顯示當日時間和自動啟動時間。
3. 功能旋鈕  
設定當日時間和自動啟動時間。
  - a. 自動啟動  
自動啟動功能用於設定沖泡程序的開始時間。自動啟動時間可設定為白天或晚上的任何時間。PM指示燈顯示晚上時間。
  - b. 預約程式設定  
程式設定功能用於設定自動啟動沖泡功能用於直接啟動沖煮程序。
  - c. 沖煮  
沖泡功能用於設定自動啟動的時間。
  - d. 時鐘設定  
用於設定當日時間。
4. 小時和分鐘按鈕  
用於設定當日時間的小時和分鐘可自動啟動使用。
5. 開/關和自動指示燈
6. 清潔設定  
用於顯示清潔咖啡壺的時間，去除積聚的鈣。
7. 1-4杯設定  
沖泡少量咖啡，雙倍加熱水，使咖啡滾燙。
8. 就緒音  
Cuisinart®半自動10杯經典美式咖啡機有就緒音，咖啡沖泡完成時，會發出五次嗶嗶聲。

## 特色和優點

### 1. 水箱蓋

向後翻，便於加水。

### 2. 咖啡機水箱 (未顯示)

水位指示窗口。

### 3. 注水頭 (未顯示)

均勻地供給咖啡配水，水流過時，減少溫度損耗。

### 4. 活性炭濾水器支架

固定過濾器。

### 5. 活性炭濾水器

去除自來水中的氯、不好的味道和氣味。

### 6. 過濾網架 (未顯示)

固定4號濾紙或永久過濾網。

 
 
### 7. 過濾網架槍 (未顯示)

無需使用濾紙。註：一些細粉可能會流過過濾網，並在咖啡壺沉澱。

### 8. 永久金屬過濾網 (未顯示)

### 9. 沖泡暫停

從加熱板取下咖啡壺時 (30秒以內)，咖啡不會從過濾網流出，可倒一杯咖啡。

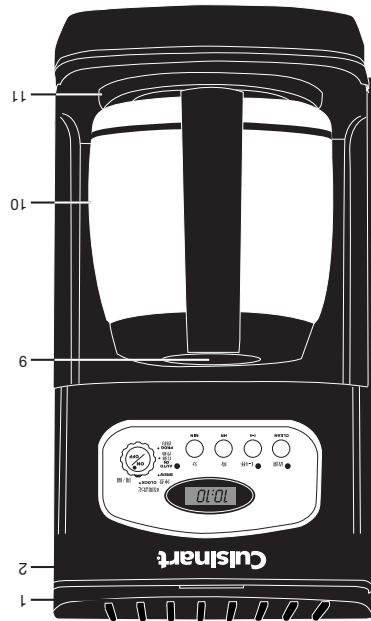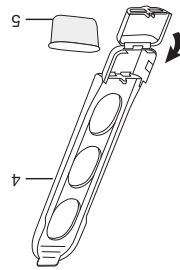

### 10. 咖啡保溫壺

雙壁絕緣10杯不銹鋼咖啡壺有符合人體工程學的手柄和免提蓋子。蓋子內有一個球漂浮，可讓咖啡流進或流出，無需打開或關閉蓋子。獨特的設計不會讓空氣進入，保存了咖啡的味道。

### 11. 托盤

耐磨不粘塗層。

### 12. 就緒音

唧唧聲響五次，表示沖泡完成。

### 13. 電源線存儲 (未顯示)

便捷的存儲區域。

### 14. 程序記憶功能 (未顯示)

斷路器跳閘，拔掉插頭，或電源故障，一分鐘內續電，可保留所有設定資訊，包括當日時間、自動打開時間和自動關機時間。

### 15. 咖啡量勺 (未顯示)

目錄

重要安全須知	2
特殊電線元件說明	3
注意事項	3
重要開箱說明	3
製作完美咖啡的要素	4
特點和優點	5
瞭解控制面板	6
咖啡機設定	7
沖煮咖啡	8
清潔和維護	9
保固	10

前言

恭喜您購買Cuisinart®半自動10杯經典美式咖啡機！請花幾分鐘時間來瞭解新咖啡機的功能，包括雙層保溫咖啡壺和可設定沖泡功能。Cuisinart讓您可以盡情享受每一杯咖啡。

製作完美咖啡的要素

要素1：水

咖啡含有98%的水。水的品質與咖啡的品質同樣重要。如果水的味道不好，咖啡的味道也不會好。Cuisinart內置木炭濾水器，可去除氯、不好的味道和氣味，讓您時刻沖泡最純的咖啡。

要素2：咖啡

雖然咖啡含有98%的水，但所有香味均來自咖啡豆。要想獲得您在咖啡吧享受的同樣美味，您需要使用同樣品質的咖啡。如果您自己研磨咖啡豆，應購買新鮮的整粒咖啡豆。每次約購買兩周的用量，因為一旦咖啡豆壞了，味道就會迅速下降。

要素3：研磨

研磨是獲得美味的關鍵。過細會導致過度萃取，出現苦味。過細還可能會堵塞過濾器。過粗，會導致水過快流過，無法萃取最佳味道。自己研磨咖啡豆時，建議研磨成中等細度。

要素4：比例

咖啡味道太濃或太淡都不會呈現最佳味道。請按照沖泡咖啡的說明選擇研磨咖啡的比例，此後，可根據自己的口味調整。

## 特殊電線元件說明

短電源線可防止纏結或有人被絆倒。

配備長電源線，請小心使用。

使用長電源線時，長電源線的額定功率至少須與電器相同，應安置好電源線，切勿讓其從檯面或桌面垂下，防止被兒童牽拉或有人被絆倒。

## 使用注意事項

發生以下任何一種情況或多種情況時，過濾網中的水和/或咖啡會堵塞和回流：使用太精細的研磨咖啡，使用兩張或多張濾紙，同時使用金屬過濾網和濾紙，或未適當清洗金屬過濾網的咖啡渣，或咖啡渣溢出過濾器。

**注意：**切勿在沖泡期間打開蓋子，若水沒有從過濾網排出，極熱的水/咖啡可能會從網中溢出並燙傷您。如果在沖泡期間，水/咖啡未從過濾網排出，拔下電源線，等待10分鐘，再打開蓋子，並檢查過濾網。

 
## 重要開箱說明

1. 將盒子放在大而堅固且平坦的表面。
2. 取出說明書和任何其他宣傳文宣。
3. 打開盒子，咖啡機的背面向下，從盒子滑出咖啡機。
4. 取出咖啡機後，將盒子拿開，取下頂部和底部的兩個紙聚盒。

5. 握住正咖啡壺手柄，從加熱板取下，取下塑膠袋。

6. 從咖啡機取下塑膠袋，抬起咖啡機，取出剩餘兩塊襯墊。

我們建議您保存好所有包裝材料，以便將來運輸機器。所有塑膠袋應遠離兒童。

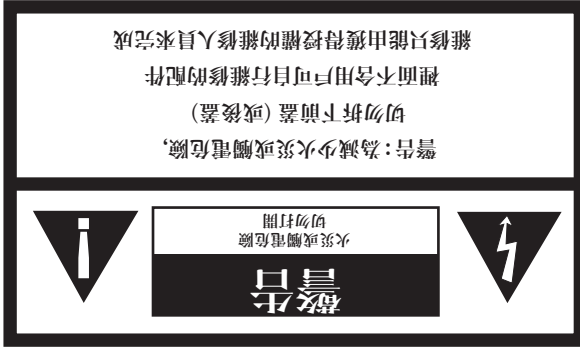

# 重要安全須知

使用電器時，請務必遵循基本安全預防措施，以避免火災、觸電和/或人身傷害風險，包括：

## 1. 閱讀所有說明。

2. 切勿接觸熱表面。使用手柄和旋鈕。

3. 為防止觸電，切勿將電源線、插頭或底座放入水中或其他液體中。

4. 當任何機器由兒童使用或使用時近旁有兒童時，必要有嚴密的監控。不使

用時和清洗前，從插座上拔下插頭。  
安裝、取下配件及清洗電器前，先讓電器冷卻。

5. 電源線或插頭損壞，或電器發生故障或以任何方式掉落或損壞，切勿操作電器。將電器交由最近的Cuisinart維修中心進行檢查、維修或進行電氣或機械調整。

6. 使用非Cuisinart搭配的配件可能會造成傷害。

7. 切勿在室外使用。

8. 切勿讓電源線懸掛在桌子或櫃檯邊緣，或接觸任何熱表面。

9. 切勿靠近熱氣體或電爐或放在其上方或加熱的烤箱內。

10. 先加滿水箱，再將插頭插入插座。關閉時，先關閉控制開關，再從插座移除插頭。

## 警告：火災或觸電危險



等邊三角形內帶箭頭符號的閃電，旨在提醒使用者產品外殼內有未絕緣的危險電壓，有可能大到足以引發火災或觸電危險。

等邊三角形內的感嘆號，旨在提醒用戶電器伴有重要的操作和維護(維修)文字說明。

## 妥善保存這些說明 僅限於家用

11. 除指定用途外，切勿將電器用於其他用途。
12. 在沖泡任何咖啡之前，將蓋子牢固地蓋在咖啡壺上。
13. 如果在沖泡期間取下蓋子，可能會燙傷。
14. 保溫咖啡壺只能放在電器底座使用。切勿放在頂部使用。
15. 切勿將熱咖啡壺放在潮濕或寒冷的表面。
16. 切勿使用破裂的咖啡壺或手柄鬆動或晃動的咖啡壺。
17. 切勿用清潔劑、鋼絲絨墊或其他研磨材料清洗咖啡壺或托盤。
18. 警告：為了減少火災或觸電危險，切勿卸下底座面板。裡面不含用戶可自行維修的配件。維修只能由獲授權的人員來完成。
19. 避免接觸活動配件。
20. 請勿在廚櫃中或壁櫥下方使用此產品。當將此產品保存在廚櫃中時，請拔除電源插頭。若是不遵循此動作將可能會導致火災，特別是在此產品碰觸到廚櫃牆面或是門面時。不要放置抹布於機器下方，否則會阻礙咖啡機下方的空氣流通。



# Cuisinart®

使用手冊



Cuisinart® 半自動10杯  
經典美式咖啡機

DCC-1150BK TW

為了您的安全和產品之持續使用，使用前請詳細閱讀此說明書。



Version no.: DCC1150BKTW IB-16/252B
IB Size: 148mm(W) x 210mm(H)
Die Cut: new
Material: 105gsm gloss art paper for whole book
Coating: gloss varnishing in cover
Colors(Cover): 4C+1C(black)
(Inside): 1C+1C(black)
Date: JUL/10/2018 Co-ordinator: Astor You / Annie Liu
Revise Ver: F DCC1150BKTW IB-16/252B (0.0) Operator: liao

 宝发柯式印刷有限公司

Tel: 0769-87720314 87886328 Fax: 0769-87720324  
E-MAIL: pofatprepress@pofat.com

