

CARE GUIDELINES 保養指南



Heat Usage: Avoid excessive dry heat. Choose low to medium setting; high heat damage falls outside warranty coverage.

加熱使用：避免乾燒，設定中低熱源加熱；高溫使用造成的損壞不在保固範圍內。



Cleaning : Suitable for Dishwasher. Avoid bleach, steel wool, and abrasive cleaners.

Staining isn't a defect and isn't covered by warranty.

清潔方式：使用中性清潔劑搭配海綿刷清洗，避免使用漂白水、鋼絨刷。使用後的食物染色非產品瑕疵，也不在保固範圍內。



Metal Utensils: Don't use metal utensils to prevent damage.

Metal utensil damage isn't covered by warranty.

金屬用具：不要使用金屬用具，以免造成塗層損傷。金屬用具造成的損壞不在保固範圍內。



Sprays and Oils: Avoid aerosol or low-calorie sprays. Use minimal vegetable oil to maintain non-stick performance.

油量使用：避免使用噴霧式油瓶或幾乎不加油使用。適量的油才能有最佳的不沾效果。



Initial Use: Remove stickers, wash with warm, soapy water before first use.

初次使用：可先用溫肥皂水清洗。



Gas Stove: Avoid using a large gas stove when heating. Use the small stove for optimal heating.

瓦斯爐：避免用於大型瓦斯爐爐口。使用小爐口可獲得最佳的加熱效果。



Stovetop Use: Follow manufacturer's guidelines. Prevent scratching by not sliding cookware. Avoid placing hot pan on cool glass stovetop to prevent fusion. Damage to stovetops isn't covered by warranty.

爐具使用：遵循製造商使用指南，不要在爐上滑動保鮮盒，防止刮傷。

避免將熱保鮮盒放在涼爽的玻璃灶台，以防止融化。

爐具損傷不在保固範圍內。



Induction Stove: Please make sure to use Induction Adapter Plate when using electric stove.

電磁爐：需搭配導熱板一起使用。

USER WARRANTY 保固說明



Our warranty service is available online and requires proof of purchase.

保固服務可透過線上註冊（參照彩盒）取得，須提供購買資訊。



This product is warranted against defects under normal household use.

本產品保證在正常使用下不會有瑕疵。



Warranty valid for original buyer with proof and non-transferable; excludes unofficial purchases.

保固服務僅提供給原買家，不得轉讓，也不包含非官方授權的通路購買。



The warranty period starts from the purchase date, as specified on our website for your region.

保固期自購買日起算，其他詳細內容請參網站說明。



Adhere to provided care guidelines for the warranty to be valid.

依保養指南使用，將可延長產品使用壽命。



Defects replaced within warranty; free repair/replacement by Swanz.

Sets: only faulty item replaced. 針對保固期內出現保固範圍的情況，提供免費維修與更換。

*僅提供更換有瑕疵的零件

 
Exclusions: This warranty does not cover normal wear and tear, damage due to failure to follow instructions, nonstick coating damage from metal utensils, stains or discoloration from overheating or washing, damage from extreme conditions or corrosive materials, unauthorized repairs, cosmetic damage that doesn't affect functionality, commercial use, minor imperfections or color variations, and incidental or consequential damages.

以下情況非保固服務範圍：正常使用下的磨損、未依指南使用造成的損壞、金屬器具造成的不沾淨塗層損壞、過熱或清洗造成的污漬或變色、腐蝕性材料造成的損壞、未經授權的維修以及使用後的顏色變化。

REVO 不沾石墨烯保鮮盒 LUNCH BOX



Airtight & Leakproof 密封防漏


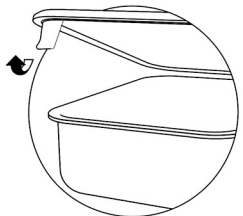


1. Stretch the until it covers all the bento opened surface, and close the lid.

拉住蓋子一邊直到覆蓋住整個盒身開口後，往下套住盒身。


2. Make sure all the comers are aligned and secured by pulling the corner handles.

  拉扯蓋子四個角落，確保蓋子整體貼齊盒身。

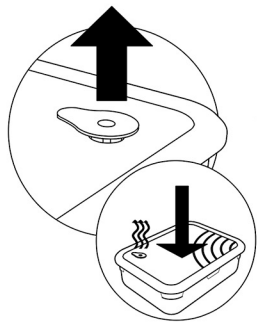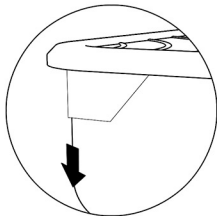

3. Open the ventilation plug by pulling it upward and push the lid a little bit until air comes out from the bento box.

 
上拉開啟透氣塞並稍微推壓上蓋，讓多餘空氣排出保鮮盒。

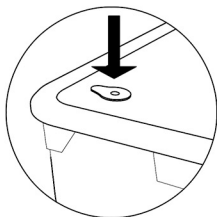

4. Close and secure the ventilation plug while pushing the lid down to make it airtight.

關上透氣塞並下壓蓋子讓保鮮盒更密封。

 Microwave Heating Instruction 微波加熱說明

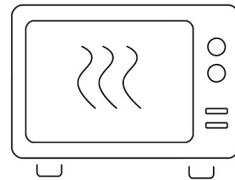

Our stainless steel metal steamer is safe to use with the Revo bento with the lid on. But during microwave, avoid putting the metal steamer into the Revo bento without any water/food. To prevent potential equipment damage, it is advised to refrain from placing additional metal utensils in the microwave alongside REVO Bento Box.

Swanz的金屬蒸架可以安全地與不沾石墨烯保鮮盒(含蓋)一起微波加熱。但請避免於盒內沒有水與食物的情況下，將金屬蒸架放入不沾石墨烯保鮮盒內微波。也不要將其他金屬器具與不沾石墨烯保鮮盒一起微波，避免微波爐損壞。

When placing the box with separator inside microwave, Do not cover the bento box with the silicon lid

當要同時使用雙格餐盤一起微波時，請取下上蓋，以免影響整體加熱效能。

