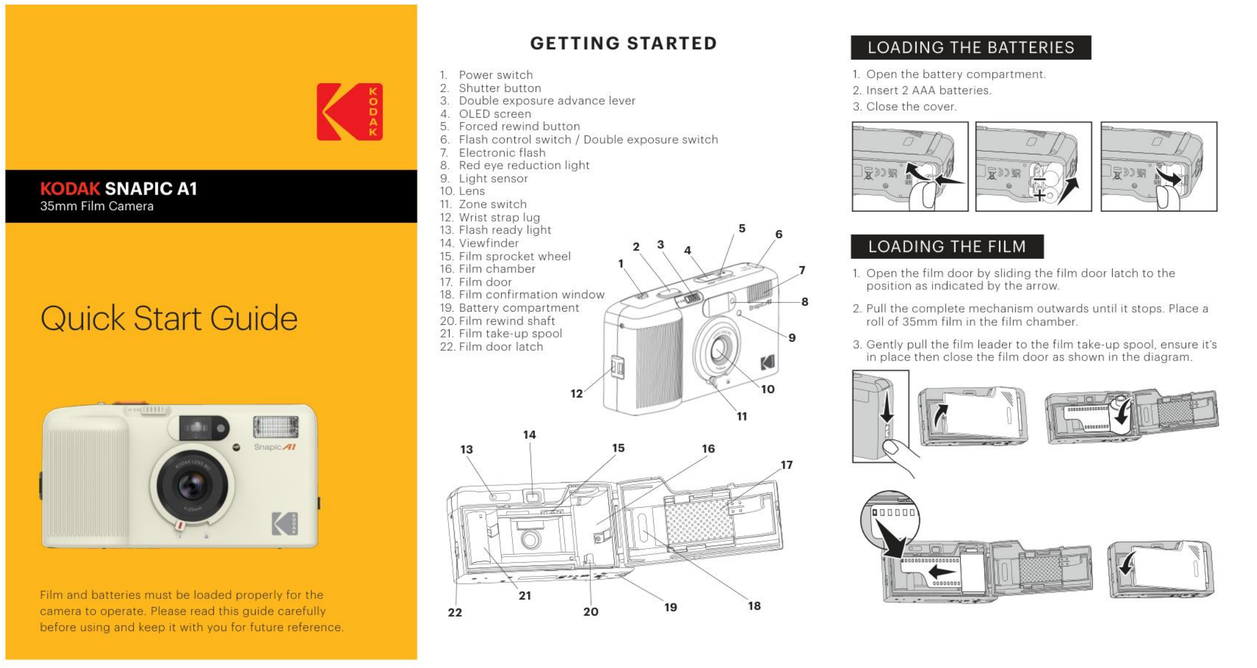


KODAK SNAPIC A1
35mm Film Camera

Quick Start Guide

Film and batteries must be loaded properly for the camera to operate. Please read this guide carefully before using and keep it with you for future reference.

GETTING STARTED

1. Power switch
2. Shutter button
3. Double exposure advance lever
4. OLED screen
5. Forced rewind button
6. Flash control switch / Double exposure switch
7. Electronic flash
8. Red eye reduction light
9. Light sensor
10. Lens
11. Zone switch
12. Wrist strap lug
13. Flash ready light
14. Viewfinder
15. Film sprocket wheel
16. Film chamber
17. Film door
18. Film confirmation window
19. Battery compartment
20. Film rewind shaft
21. Film take-up spool
22. Film door latch

LOADING THE BATTERIES

1. Open the battery compartment.
2. Insert 2 AAA batteries.
3. Close the cover.

LOADING THE FILM

1. Open the film door by sliding the film door latch to the position as indicated by the arrow.
2. Pull the complete mechanism outwards until it stops. Place a roll of 35mm film in the film chamber.
3. Gently pull the film leader to the film take-up spool, ensure it's in place then close the film door as shown in the diagram.

第 1 頁繁體中文翻譯

KODAK SNAPIC A1 35mm 底片相機

快速入門指南

底片與電池必須正確裝入，相機才能正常運作。使用前請仔細閱讀本指南，並妥善保存以供日後參考。

開始使用

1. 電源開關　2. 快門按鈕　3. 雙重曝光過片桿　4. OLED 螢幕　5. 強制回捲按鈕　6. 閃光燈控制／雙重曝光開關　7. 電子閃光燈　8. 防紅眼燈　9. 光線感應器　10. 鏡頭　11. 對焦區域切換開關　12. 手腕帶孔　13. 閃光燈就緒指示燈　14. 觀景窗　15. 底片齒孔輪　16. 底片室　17. 底片背蓋　18. 底片確認窗　19. 電池室　20. 底片回捲軸　21. 收片軸　22. 背蓋卡榫

安裝電池

1. 打開電池室。
2. 裝入 2 顆 AAA 電池。
3. 關閉電池蓋。

裝入底片


1. 依箭頭方向滑動背蓋卡榫，打開底片背蓋。
2. 將整個機構向外拉至停止，並把一卷 35mm 底片放入底片室。
3. 輕輕將片頭拉至收片軸，確認底片已正確定位後，依圖示關閉背蓋。

左側完整保留原始說明書頁面圖片。


USING THE CAMERA

1. Power On


- Insert batteries, load film then push power switch to "ON" position. Power on, OLED lights up and the screen shows double arrows moving downwards.



- Press the shutter button for the first time, one frame will be automatically advanced. The OLED screen displays a single arrow.




- Press the shutter button for the second time, one frame will be automatically advanced. The OLED screen displays "0".



2. Power Off

- Push the power switch to "OFF" position to power off. The OLED screen will turn off. The camera will automatically save the photo count and restore it on the next power on.



3. Taking Photos

- Press the shutter button to take a photo. Film will advance and add 1 photo count displaying on the OLED screen.



Note:

- During film advance, pressing the shutter button again will immediately brake the motor. The motor will continue to advance after the shutter is released and stop when advance is complete.

4. Automatic Rewind

- When the film roll is advancing to the last frame and unable to advance further, the camera begins rewinding into the film canister automatically. The OLED screen will display the rewind animation.



5. Forced Rewind

- Press and hold the forced rewind button for 2 seconds then release it. It will start the forced rewind if battery is sufficient and stop when rewind is completed. The OLED screen has an icon indication.




6. No Film Loaded

- When there is no film loaded to the camera, the flash, flash control switch, shutter button, and force rewind button are ineffective.



7. Flash Control

- After loading the film and batteries, briefly press the flash control switch. The flash indicator blinks while charging and stays on when fully charged. The flash status will go through a cycle as shown below:

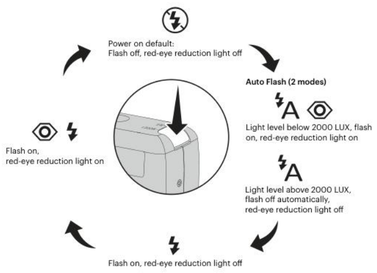

第 2 頁繁體中文翻譯

使用相機

1. 開機

裝入電池及底片後，將電源開關推至 ON。OLED 螢幕亮起，畫面顯示雙箭頭向下移動。第一次按下快門時，相機會自動前進一格，OLED 顯示單箭頭；第二次按下快門時，再自動前進一格，OLED 顯示 0。

2. 關機

將電源開關推至 OFF。OLED 螢幕熄滅。相機會自動儲存已拍攝張數，並在下次開機時恢復。

3. 拍攝照片

按下快門拍照。底片會自動前進一格，OLED 顯示的拍攝張數加 1。注意：底片過片時再次按下快門，馬達會立即停止；放開快門後會繼續過片，完成後停止。

4. 自動回捲

當底片已到最後一格且無法繼續前進時，相機會自動將底片回捲至底片盒內，OLED 顯示回捲動畫。

5. 強制回捲

按住強制回捲按鈕 2 秒後放開。電量足夠時會開始強制回捲，完成後停止，OLED 會顯示對應圖示。

6. 未裝底片

相機未裝入底片時，閃光燈、閃光燈控制開關、快門按鈕及強制回捲按鈕皆無作用。

7. 閃光燈控制

裝入底片及電池後，短按閃光燈控制開關。充電時指示燈閃爍，充電完成後恆亮。模式依序為：關閉閃光燈及防紅眼燈 → 開啟閃光燈、關閉防紅眼燈 → 開啟閃光燈及防紅眼燈 → 自動閃光。自動模式下，環境低於 2000 LUX 時開啟閃光燈及防紅眼燈；高於 2000 LUX 時自動關閉。


左側完整保留原始說明書頁面圖片。

8. Double Exposure


- Press and hold the flash control switch. The first exposure icon "1" will blink on display. Release the shutter button to take the first exposure



- After pressing the shutter button to take a photo, the camera will not advance the film, and the display will show the double exposure advance icon in motion.

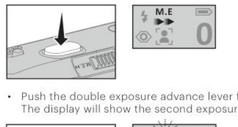

- Push the double exposure advance lever for the second advance. The display will show the second exposure icon "2," which will blink.




- After pressing the shutter button to take a photo, the camera will automatically advance the film, completing the double exposure. It will then switch to normal single exposure mode.



Note:

- To exit double exposure mode before shooting, press and hold the flash control button.
- If you've already taken a photo, you cannot exit double exposure mode using the flash control button. Instead, power off the camera and then turn it back on to automatically cancel double exposure. After powering on, half-press and release the shutter button to automatically advance the film.

9. Battery Level Display



Battery > 50%

Battery 24-50%

Battery 10-25%

Battery < 10% : The battery symbol will blink for a minute and the flash ready light will start pulsing before the camera powers off. The auto film advance function will be disabled, so please replace the batteries w hen this occurs.

If the low battery warning appears:

During auto film advance:


The motor will stop and the camera will power off. Please replace the batteries, then power on the camera. Half-press and release the shutter button to automatically advance the film.

During the auto rewind process:

The motor will stop and the camera will power off. Please replace the batteries, then power on. Press and hold the forced rewind button, then release it to perform a forced rewind.

10. Distance / Close-up Lens Switching

Toggle the zone switch to switch between close-up and distance lenses. The OLED screen will show the corresponding icon.



Close-up lens.

Distance lens.

• Film ISO Suggestion •	
ISO100 / 200	Sunny / Partly cloudy
ISO400	Cloudy / Overcast / Indoor with Flash

• Flash Suggestion •	
Indoor / Low-light	Need to turn flash or auto flash on
ISO100 / 200	Photograph distance 0.5M-1.5M
ISO400	Photograph distance 1M-2.5M

BATTERY WARNING:
Improper replacement of battery may present a risk of leakage or explosion, and may cause personal injuries. Mistreated rechargeable battery may present a risk of fire or chemical burn. Do not disassemble or expose the battery to conducting materials, moisture or extreme heat. Do not use or charge the battery if it appears to be leaking, discoloured, deformed, or in any abnormalities. Do not leave the battery discharged or unused for an extended period of time. Avoid extremely high or low temperatures during use, storage or transportation of batteries. Battery life varies with usage. Non-operational battery should be disposed according to local laws, or dispose it in a waste bin for electronics if not governed by applicable laws or regulations. Keep batteries away from children.

www.retopro.co/kodak
© 2025 RETO Production Ltd. All rights reserved.
The Kodak trademark, logo and trade dress are used under license from Eastman Kodak Company.

第 3 頁繁體中文翻譯

8. 雙重曝光

長按閃光燈控制開關，螢幕上的第一次曝光圖示「1」會閃爍。放開後按下快門完成第一次曝光。此時底片不會前進，螢幕顯示雙重曝光過片圖示。推動雙重曝光過片桿，螢幕顯示第二次曝光圖示「2」並閃爍。再次按下快門後，相機會自動過片並完成雙重曝光，隨後回到一般單次曝光模式。

注意

拍攝前要退出雙重曝光模式，請長按閃光燈控制按鈕。若已拍攝第一次曝光，無法用此按鈕退出；請關機再重新開機以自動取消，開機後半按再放開快門，使底片自動前進。

9. 電池電量顯示

電量 > 50%；電量 24-50%；電量 10-25%。當電量低於 10% 時，電池圖示會閃爍 1 分鐘，閃光燈就緒燈會脈動閃爍，之後相機關機；自動過片功能會停用，請更換電池。

低電量警告處理

自動過片中：馬達停止並關機。更換電池後開機，半按再放開快門以自動過片。
自動回捲中：馬達停止並關機。更換電池後開機，按住強制回捲按鈕後放開，以執行強制回捲。

10. 遠景／近拍鏡頭切換

撥動對焦區域切換開關，可在近拍鏡頭與遠景鏡頭之間切換，OLED 螢幕會顯示對應圖示。

底片與閃光燈建議

ISO 100／200：晴天或晴時多雲。ISO 400：陰天、多雲或室內搭配閃光燈。室內或低光環境請開啟閃光燈或自動閃光。ISO 100／200 建議拍攝距離 0.5-1.5 公尺；ISO 400 建議拍攝距離 1-2.5 公尺。

電池警告

不當更換電池可能造成漏液或爆炸並導致受傷。請勿拆解電池，或使其接觸導電物、濕氣及極端高溫。若電池漏液、變色、變形或出現異常，請勿使用。請依當地法規回收廢電池，並放置於兒童無法取得之處。

左側完整保留原始說明書頁面圖片。