

35mm camera


front

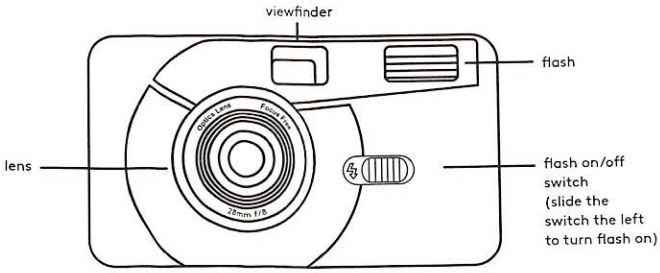


back

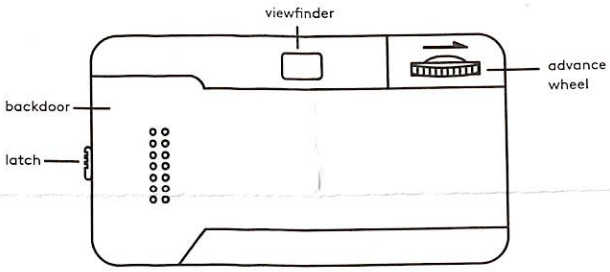

top

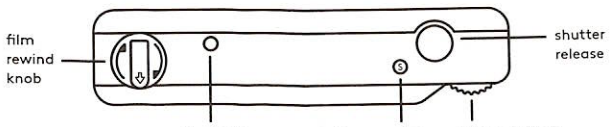

bottom



included

- 35mm film camera

quick tips

- The camera supports ISO 200 and ISO 400 and has a flash range of about 9 feet
- The camera can be used horizontally or vertically
- Be sure to hold the camera with two hands when photographing
- Be sure to stand at least 3 feet from subjects
- Photos should be taken in sunny or partly sunny weather
- Be sure to face away from the sun when photographing
- Use the flash when photographing in low lighting environments or a subject that's further away
- Use the viewfinder to help center subjects when photographing as this is the area that will be the most focused
- If there is a roll of film in the camera, do not open the backdoor until it has been completely rewound back into the canister

taking pictures


- Use your thumb and turn the advance wheel to the right to prepare the film; keep turning the wheel until it won't go any further
- Use the viewfinder to help frame subject
- Ensure that there is nothing blocking the lens then press the shutter release button on top of the camera
- After each photo remember to turn the advance wheel to prepare for the next photo
- The film counter is marked by 3s and will keep track of how many photos you've taken; each time you turn the advance wheel, the counter will graduallly move towards the next marker
- When photographing in low-lighting environments or photographing a subject that's further away, turn on the flash

camera flash

- Before using the flash, ensure that there is a working AA battery in the battery chamber on the bottom of the camera
- To replace or insert a new battery, open the battery door
- Insert one AA battery into the battery chamber; ensure that battery is inserted so that the + and - icons are aligned to match what's shown on the battery cover
- To turn on the flash, slide the flash on/off switch to the left
- The flash LED on top of the camera will light up when it is charged and ready to use Note: the flash does not automatically reset back to the off position after being used; you must manually slide the switch back to the right/off position; when the switch is on the right/off position, the flash will have remaining power for one more shot and will go off when taking your next picture


loading a new roll of film

① film canister

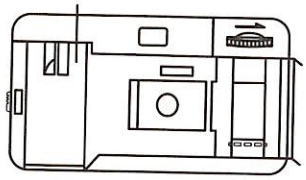


This camera uses 135 film/35mm film. Open the camera backdoor by firmly pushing down the latch on the side of the camera. The backdoor of the camera should softly pop open.

② film rewind knob, film leader tab

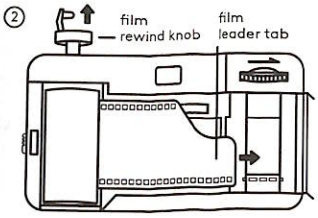


Lift and pull the film rewind knob up. Insert the new roll of film into the film canister so that the film leader tab is at the bottom.

③

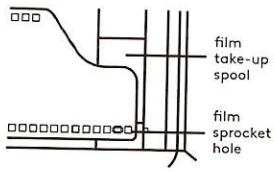


Use one hand to hold down the new roll of film and the other hand to pull the film leader tab to the film take-up spool. Hook one of the bottom film sprocket hole onto one of the notch. Ensure that the new film roll remains flushed inside the film canister.

④ advance wheel

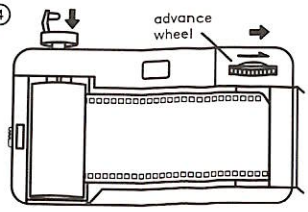

Push the film rewind knob down into place. Slightly turn the film advance wheel to the right while ensuring that the film is flat against the center of the camera. When the film has wrapped around the spool once, close the backdoor. If the film is curving, carefully unattach the film leader tab from the spool and follow steps 2 and 3 again.

⑤ film counter, advance wheel

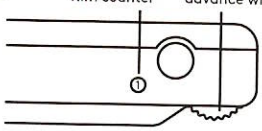


Continue to advance the film by turning the film advance wheel until it stops, then press the shutter button. Repeat this process until the film counter shows the number "1." The camera is now ready to take photos.

note:
Once the film counter shows the number "1" do not open the backdoor anymore. If the backdoor is opened, the film roll will be exposed to light and possibly ruined. The backdoor should not be open again until you are unloading and the roll of film has been completely rewound.

unloading roll of film

① rewind button

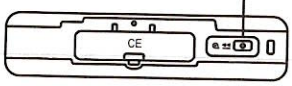


When you've used up the film roll in the camera, press the rewind button located at the bottom of the camera to release the film roll. Do not open the backdoor yet.

② film rewind knob



Lift the handle on the film rewind knob and turn it clockwise until all of the film has completely rewound back into the film canister. You can tell when the film has been completely rewound when you no longer feel any resistance while turning the knob.

③

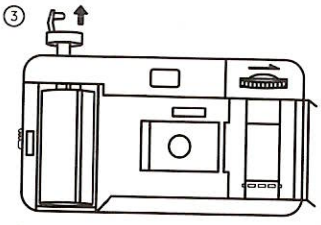

Open the camera backdoor of the camera. Lift and pull up the film rewind knob then remove the roll of film. The used roll of film should be kept out of the light as long exposure to light could ruin it. Take your film to your local film developer to get developed and printed.