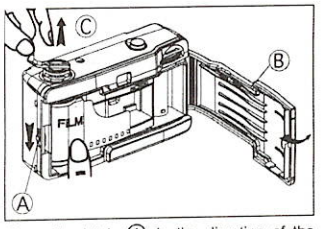
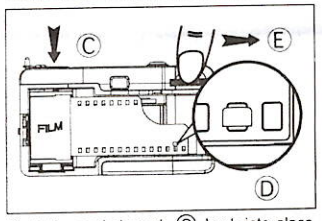
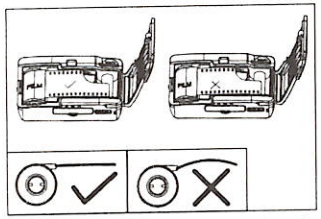
35mm CAMERA USER MANUAL

① 

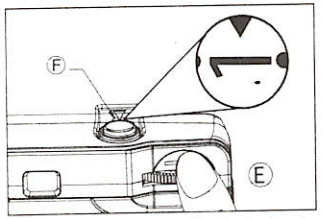
Press the latch Ⓐ in the direction of the arrow and open the camera back door Ⓑ. Lift up the film rewind crank Ⓒ and place a new roll of film into the film chamber.

② 

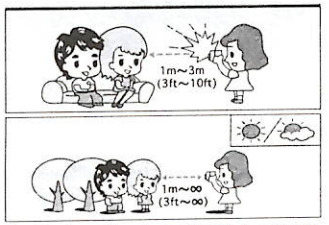
Push the rewind crank Ⓒ back into place. Pull out the film from the film canister and hook the 2nd hole onto the flm take-up spool Ⓓ. Slightly advance the film by turning the film advance wheel Ⓔ.

③ 

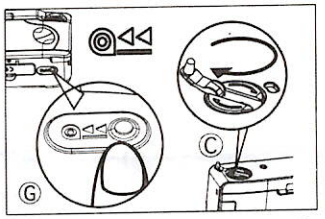
Ensure that the film lays flat against the center of the camera and close the camera's back door.

④ 

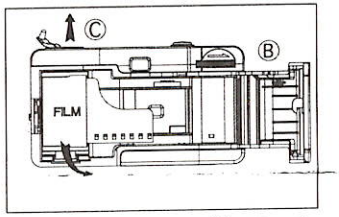
Continue to advance the film by turning the film advance wheel Ⓔ until it stops. Press the shutter button. Repeat this procedure

⑤ 

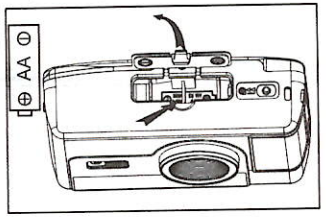
For best results, stand at least 1 meter (3 feet) from the subject and take photos in sunny or partly sunny weather. When taking pictures, keep the sun at your back.

⑥ 

After all the pictures are taken, press the rewind button Ⓖ located at the bottom of the camera. Turn the film rewind crank Ⓒ clockwise until all film is re-wound back into the film canister.

⑦ 

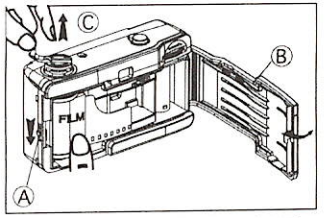
Open the camera back door Ⓑ. Lift up the film rewind crank Ⓒ, and remove the film for processing.

⑧ 

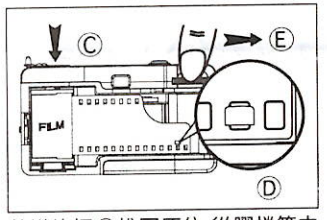
Open the battery door in the direction of the arrow. Insert one " AA "alkaline battery into the battery chamber. Make sure the battery is inserted according to the correct polarity. The correct polarity (the "+" and "-" ends of the battery) is indicated inside the battery compartment.

Switch the flash button to the " ⚡ " position.

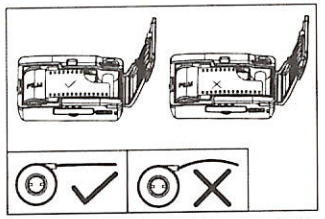
35mm相機 使用說明書

① 

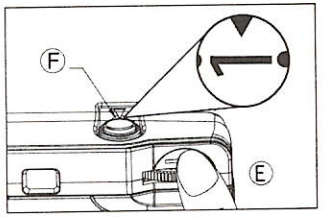
沿箭頭方向推下後蓋鎖Ⓐ;打開相機後蓋Ⓑ;提起導片柄Ⓒ;將一卷新的膠捲放入膠捲槽。

② 

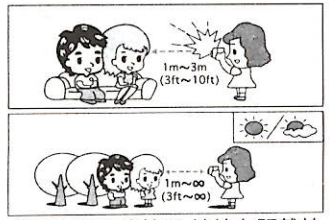
將導片柄Ⓒ推回原位;從膠捲筒中取出膠捲,將第二個孔掛在卷軸Ⓓ上。通過轉動卷片輪Ⓔ輕輕導入膠捲。

③ 

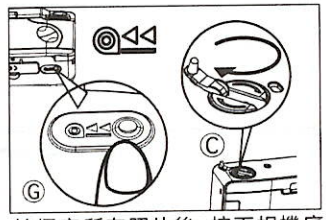
確保膠捲平鋪在相機的中央,然後關上相機的後蓋。

④ 

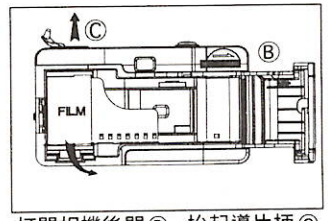
按箭頭方向轉動卷片輪Ⓔ直至不能再轉動,即上片完成。按下快門按鈕,再重複這個步驟一次。膠

⑤ 

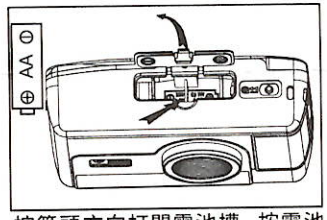
為了獲得最佳效果,請站在距離拍攝對象至少 1 米(3 英尺)的地方,在晴朗或部份晴朗的天氣裏拍照。拍照時,太陽應在您的背後。

⑥ 

拍攝完所有照片後,按下相機底部的倒片按鈕Ⓖ。順時針轉動膠片導片柄Ⓒ,直到所有膠捲重新捲進膠捲筒內。

⑦ 

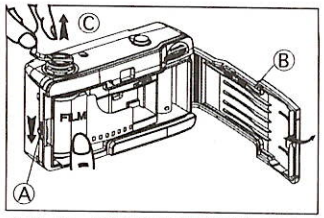
打開相機後門Ⓑ。抬起導片柄Ⓒ,取出膠捲待後期沖洗。

⑧ 

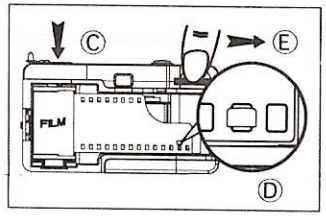
按箭頭方向打開電池槽。按電池室內所指示將一個" AA "鹼性電池放入電池槽。請確保電池的正負極方向正確。

於光線不足或室內場景拍照時請使用閃光燈。將閃光燈按鈕切換

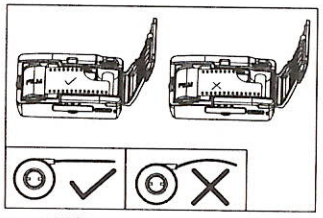
35mmカメラ
ユーザーマニュアル

① 

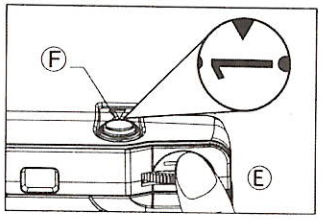
開閉レバー Ⓐ を矢印の方向に押して、カメラの裏ブタⒷを開けます。フィルム巻き戻しクランク Ⓒ を上方向に持ち上げて、新しいフィルムをフィルム室に入れます。

② 

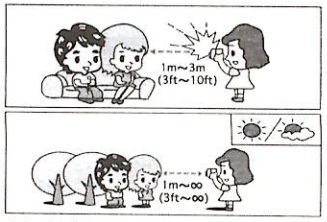
巻き戻しクランクⒸを所定の位置に押し戻します。フィルムを引き出し、2つ目の穴をフィルム巻き取りスプールⒹに引っ掛けます。フィルム送りダイヤル Ⓔ を矢印の方向に回して、フィルムを少し進めます。

③ 

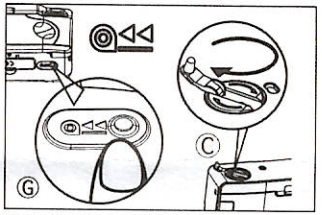
フィルムがカメラの中心に対して水平になるようにし、カメラの裏蓋を閉じます。

④ 

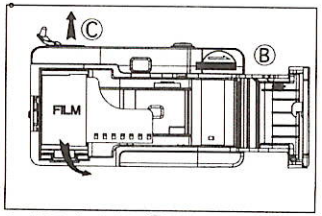
フィルム送り Ⓔ が止まるまで回して、フィルムを送り続けます。シャッターボタンを押します。この手順をもう一度繰り返します。フ

⑤ 

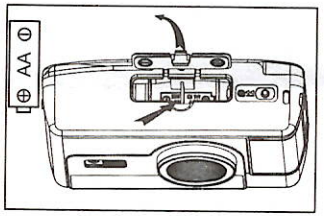
キレイに撮影するためには、被写体から少なくとも1メートル以上離れてください。場所で太陽を背にして、撮影してください。

⑥ 

すべての写真を撮影した後、カメラの下部にある巻き戻しボタン Ⓖ を押します。すべてのフィルムが巻き戻されるまで、フィルム巻き戻しクランク Ⓒ を時計回りに回します

⑦ 

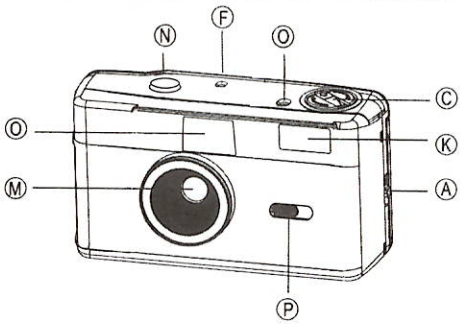
カメラのバックドアⒷを開けます。フィルム巻き戻しクランクⒸを持ち上げ、フィルムを取り外します。

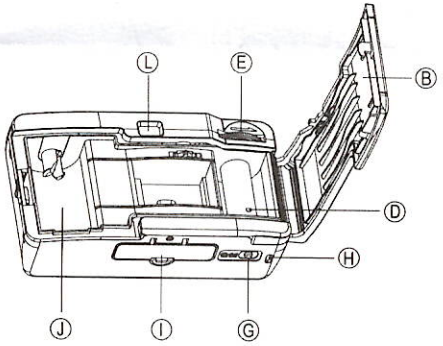
⑧ 

バッテリードアを矢印の方向に開きます。「単4」電池をバッテリールームに1つ挿入します。バッテリーが正しい方向に従って挿入されていることを確認してください。正しい方向（バッテリーの「+」と「-」の端）がバッテリールーム内に印字されています。

フラッシュボタンを「 ⚡ 」の位置に切り替えます。Flash Ready LEDが点灯するまで

PRODUCT STRUCTURE





Ⓐ Latch
Ⓑ Back Door
Ⓒ Film Rewind Crank
Ⓓ Film take-up Spool
Ⓔ Advance Wheel
Ⓕ Film Counter
Ⓖ Rewind Button
Ⓗ Hand Strap Hole
Ⓘ Battery Cover
Ⓙ Film Chamber
Ⓚ Flash Light
Ⓛ Viewfinder
Ⓜ Lens
Ⓝ Shutter Release
Ⓞ Flash Ready Light
Ⓟ Flash Button

Product specification

Film Format: 135 Film (24x36mm)
ISO 200/400
Optics Lens: 28mm, F=8, 1 element
Focusing: Focus Free, 1m~∞
Shutter Speed: 1/120s

35MM CAMERA(BHF-01)
USER MANUAL

