NINJA

CRISPI™

FN090TW Series | 使用者指南



重要安全說明

僅供室內家庭使用 • 使用前請閱讀所有說明

	請閱讀並複習操作與使用說明。
	表示若忽略與該符號相關的警告，將存在可能導致人身傷害、死亡或重大財產損失的危險。
	請注意避免接觸高溫表面。使用時務必配戴防燙手套，以避免燙傷。
	僅供家庭使用。

⚠危險

若無法遵循上述指引，可能會導致觸電、火災或灼傷危害，進而引致財產損失、人身傷害或死亡。使用電器產品時，應一律遵循基本安全注意事項，包括以下內容：

請勿觸碰高溫表面或排氣口。

1 使用過程中，PowerPod™、轉接環、Ninja CleanCrisp™玻璃容器和酥脆盤會變得非常燙手。
為避免造成燙傷或重傷：
- 請務必戴上隔熱手套並透過手把抓握玻璃容器。請勿直接觸碰玻璃容器。
- 從頂部抓握 PowerPod™。
- 請勿在沒有隔熱墊或隔熱手套的情況下觸碰任何其他元件。

2 使用過程中，設備會釋放高溫空氣和蒸氣。雙手和臉部請遠離排氣口。

適用使用者

3 請勿讓兒童使用、清潔、維護本設備或拿來玩耍。在兒童附近使用時需密切監督。

4 身心感官能力受限或缺乏相關經驗和知識者，可在獲得適當監督或指導安全使用本設備之方式，並瞭解相關風險後使用本設備，但需密切監督。

適用範圍

5 本設備僅限用於氣炸烹調。請勿用於油炸。請勿將本設備用於任何非原設計用途。

選擇安全的位置

6 請確認本設備已放置於合適的位置後再開始使用。使用過程中請勿移動或搬動本設備。
當玻璃容器裝有熱食、油或液體時，務必格外小心。不當使用可能導致食物溢出，進而造成嚴重燙傷或人身傷害。

僅限室內檯面使用

7 本設備僅限室內家庭使用。請勿在室外或移動中的車輛或船隻中使用。

8 僅限於檯面使用。請確保表面平坦、乾淨和乾燥。請勿將設備置於操作檯邊緣。

遠離熱源

9 為避免造成火災或財產損失，請勿將本設備或電源線放置在爐具上。切勿放置於高溫表面上，或靠近高溫瓦斯或電爐，或放置於烤箱中。

預留空間以利通風

10 請勿在裝置運作時蓋住進氣口或排氣口，否則無法均勻烹調，並會損壞裝置或導致裝置過熱。使用設備時，所有物品應距離通風口至少 15 公分。

避免NINJA CLEANCRISP™玻璃容器破裂：

11 玻璃容器遇溫度驟變可能會破裂。
- 請勿將冰涼液體或食物放入高溫玻璃容器中。請勿將高溫液體或食物放入冰涼玻璃容器中。
- 請勿讓高溫玻璃直接接觸冰涼或潮濕的表面或物品。請先讓玻璃容器冷卻，再放入水槽或進行清洗、冷藏或冷凍。

重要安全說明

僅供室內家庭使用・使用前請閱讀所有說明

⚠危險

若無法遵循上述指引，可能會導致觸電、火災或灼傷危害，進而引致財產損失、人身傷害或死亡。使用電器產品時，應一律遵循基本安全注意事項，包括以下內容：

12 玻璃容器不可放入烤箱、烤架或在爐具上加熱。除 Crispi PowerPod™ 或微波爐以外，請勿與任何加熱設備或熱源一起使用。請勿將空玻璃容器放入微波爐中加熱。

13 物理損傷或撞擊可能使玻璃容器破裂，或使其更容易因溫度變化而破裂。
- 使用金屬餐具或刀具時，請小心避免刮傷玻璃容器。
- 請勿使用磨蝕性清潔工具。
- 請勿讓玻璃容器掉落、碰撞硬物或用餐具敲擊玻璃容器。
- 請勿使用或修理任何曾掉落、有缺口、碎裂或嚴重劃傷的玻璃容器。
- 如果玻璃容器出現缺口或破裂，清掃玻璃碎片時請戴上厚手套並小心處理。碎片可能很鋒利並且難以發現。
- 請丟棄破損的玻璃；請勿回收。

14 Ninja CleanCrisp™ 玻璃容器可使用洗碗機清洗。如需刷洗，可以使用熱肥皂水和非磨蝕性的清潔劑以及塑膠或尼龍百潔布來手洗。
- 塑膠蓋子不含 BPA，僅供微波爐加熱和保存食物使用。

將插頭直接插入適用的插座

15 請將本設備及其電線放在兒童無法觸及的地方。

16 請選擇安裝於檯面上方的插座，並將電源線繞至兒童無法觸及的位置，且遠離高溫表面及設備排氣口。

17 本設備配有極化插頭（其中一邊的刃片比另一邊刃片寬）。為降低觸電風險，此插頭只能以一種方向插入極化插座。若插頭無法完全插入插座，請將插頭反向插入。若仍無法插入，請聯絡合格的電工予以協助。請勿以任何方式嘗試改裝插頭。

18 為避免設備因拉扯而掉落，進而造成嚴重燙傷或人身傷害：
- 請勿讓電線懸掛在桌子或操作檯的邊緣。
- 請勿使用延長線。
- 使用較短電線是為了降低有人抓取電線或被電線纏繞的風險，同時避免人們被較長的電線絆倒。

如發現電線有損壞，請勿使用

19 請定期檢查設備和電線。如發現本設備有任何損壞（包括電源線或插頭），請勿使用。在操作期間，如果設備發生故障，請立即停止使用，並致電客服專線。

20 如果 Ninja 玻璃容器曾掉落或有缺口、碎裂或嚴重劃傷，請勿使用；因玻璃容器強度可能受損，容易破裂或碎裂，應立即丟棄。

操作準備

21 操作前務必確保 PowerPod™ 已正確固定在 Ninja CleanCrisp™ 玻璃容器上。

裝填至適當容量

22 為防止食物與加熱元件接觸，進而造成傷害或影響本設備的安全使用，請勿在 CleanCrisp™ 玻璃容器中裝入過多食物，以至超出玻璃容器邊緣。

檢查食物溫度

23 插座電壓可能有所不同，從而會影響產品的效能。為避免引發疾病，請使用溫度計確定食物已烹調至建議溫度。

清潔

24 無需使用時及清潔前，請務必關閉設備並從插座拔下插頭。

25 為避免觸電，請勿將電線、插頭或主裝置外殼浸泡在水中或其他液體中。

26 請勿使用金屬鋼絲球。金屬鋼絲球可能會掉落碎屑並接觸到電子零件，進而導致觸電風險。

27 請參閱「清潔」一節。


切勿改造或使用未經核准的配件

28 改造或使用非 SharkNinja 建議的配件或零件，可能導致火災、觸電或傷害。僅使用 SharkNinja 建議或銷售的烹調玻璃容器、配件、附件或替換零件。

29 為避免損壞加熱元件，切勿拆下 PowerPod™ 的防護網。

請妥善保存此說明

零件和配件

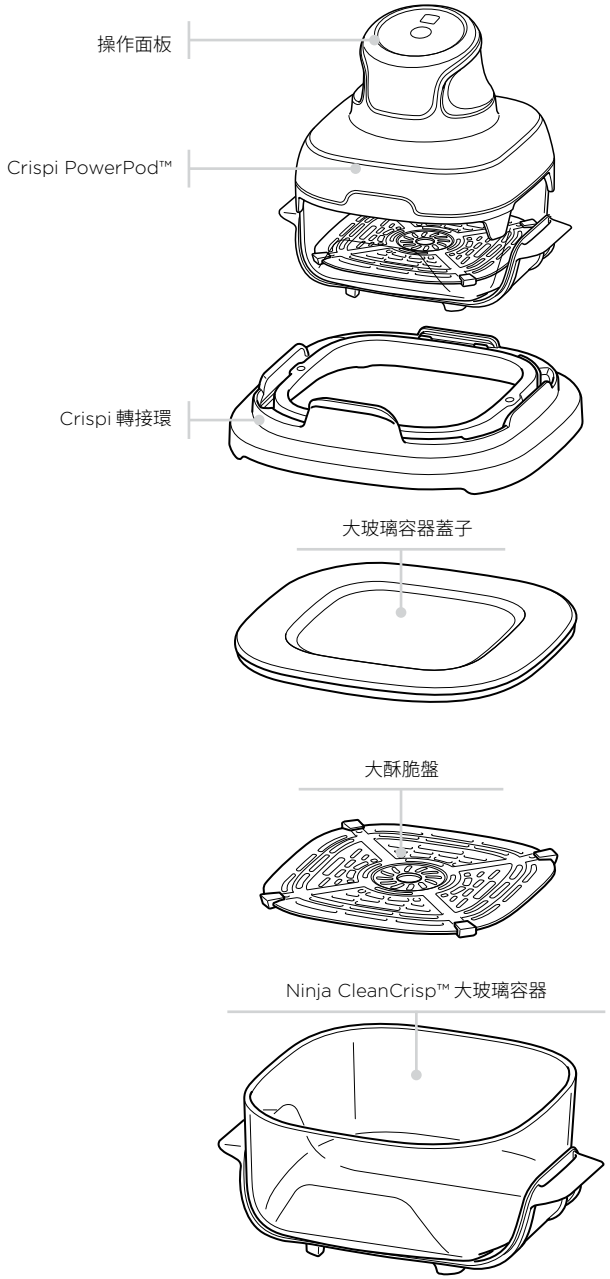

瞭解 NINJA CRISPI™



若要恢復烹調，請將 PowerPod™ 放回 Ninja 玻璃容器上，並按下「開始」按鈕。

功能按鈕

回酥：低溫加熱，讓冷藏菜餚重現酥脆美味。

氣炸：用於少油或無油烹調，呈現酥脆口感。

燒烤：以高溫迅速烹調食物，打造極致酥脆口感。最適合處理預先包裝的冷凍食品。

操作按鈕

「開始」按鈕：按下以啟動 PowerPod。在 PowerPod 安裝到玻璃容器上後，按下即可開始或停止烹調。按住 2 秒可關閉 PowerPod。

「模式」按鈕：按下可依次切換至所需的功能。

時間 - 和 + 按鈕：用於在烹調前或烹調過程中調整任何功能的烹調時間。

第一次使用前

1. 請移除並丟棄設備的所有包裝材料、貼紙和膠帶。
2. 從包裝中取出所有配件，並仔細閱讀本手冊。為避免受傷或財產損失，請仔細閱讀操作說明、警告和重要安全說明。
3. 用熱肥皂水清潔玻璃容器、轉接環、酥脆盤和蓋子，然後徹底沖洗乾淨並晾乾。**切勿**使用洗碗機清潔 PowerPod。

使用與保養指南

POWERPOD™

1. PowerPod **不得**與 Ninja玻璃容器以外的任何玻璃容器配搭使用。
2. **不得**在未將 PowerPod 放置於 Ninja 玻璃容器上時使用。
3. 將 PowerPod 放置於 Ninja 玻璃容器上時，**務必**確保易抓握手把與 Pod 的左右兩側對齊，**而非**與前後兩側對齊。
4. PowerPod 從 Ninja 玻璃容器上取下就會自動暫停烹調。若要恢復烹調，請將 PowerPod 放回 Ninja 玻璃容器上，並按下「開始/電源」按鈕。
5. **切勿**拆下 PowerPod 的防護網。
6. 使用設備時，所有物品應距離 PowerPod 的通風口至少 15 公分。
7. PowerPod 支腳可方便您在使用後將 PowerPod 直接放在任何檯面上。

注意：如果任何支腳出現破損或損壞，請完全停止使用 PowerPod。

NINJA 玻璃容器

1. 隔熱底座和易抓握手把永久固定於 Ninja 玻璃容器上，**切勿**嘗試拆除。
2. 如果易抓握手把或隔熱底座破損或損壞，請停止使用 Ninja 玻璃容器。
3. Ninja 玻璃容器可安全放入冷凍櫃、使用微波爐加熱或使用洗碗機清潔。
4. Ninja 玻璃容器**不得**使用烤箱/爐具/烤爐加熱。
5. 請小心使用玻璃容器。如果掉落、碰撞堅硬表面或用堅硬餐具敲擊可能使玻璃容器破裂。如果玻璃容器出現任何破損，請立即丟棄。
6. 如果 Ninja 玻璃容器有缺口、碎裂或嚴重劃傷，**請勿**使用；因玻璃容器強度可能受損，容易破裂或碎裂。

注意：如果任何 Ninja 玻璃容器出現缺口或破裂，清掃玻璃碎片時請戴上厚手套並小心操作，因碎片可能很鋒利。請將玻璃碎片丟棄在標準垃圾桶中；**請勿**回收。

玻璃容器蓋子

1. 蓋子可放入冷凍櫃冷凍、使用微波爐加熱（確保在微波爐中加熱時蓋子**未**密封蓋在 Ninja 玻璃容器上）以及使用洗碗機清潔（僅限放於上層）。
2. 烹調後，**請勿**立即用蓋子密封蓋住 Ninja 玻璃容器。
3. 烹調後，**切勿**將 PowerPod、Ninja 玻璃容器或酥脆盤直接放在蓋子上。

酥脆盤

1. 酥脆盤可使用洗碗機清洗，但**不得**使用微波爐或烤箱加熱。

轉接環

1. 轉接環**只需**在使用PowerPod 烹調時與 3.8 公升 Ninja 玻璃容器搭配使用。
2. 轉接環可使用洗碗機清洗，但**不得**使用微波爐或烤箱加熱。

注意：在使用 1.4 公升 Ninja 玻璃容器烹調時，**切勿**使用轉接環。

3. 使用後的轉接環非常燙手；請先讓其冷卻 10 分鐘後再做處理。

如何使用轉接環組裝

1. 將 PowerPod 放在轉接環中，確保 PowerPod 的 4 個支腳與轉接環的四個角對齊。
2. 將 PowerPod 向下壓，直到感覺轉接環卡入 PowerPod 為止。
3. 將已組裝好的 PowerPod 和轉接環放置於 Ninja 大玻璃容器上。

拆卸

1. PowerPod 和轉接環在烹調過後會非常燙手，請讓其冷卻 10 分鐘後再操作。
2. 用一隻手握住 PowerPod 的頂部，用另一隻手抓住轉接環前面的卡耳。
3. 向下按住卡耳同時向上提起 PowerPod，即可輕鬆將 PowerPod 從轉接環上拆下。

注意：將 PowerPod 稍微向後推，同時向上提，即可輕鬆拆下。

使用 NINJA® CRISPI™

使用烹調功能

若要啟動 PowerPod™，請先將電源線插入牆壁插座。按下「開始/電源」按鈕。

注意：為獲得最佳口感，**請勿**混合生、冷凍和/或經過烹調的食材同時烹調。每次**僅**烹調其中一類。

氣炸

1 在 Ninja 玻璃容器中放入酥脆盤。請小心操作，避免折彎酥脆盤。


2 將食材放入 Ninja 玻璃容器中。

注意：為獲得最佳口感，**請勿**使用「氣炸」功能來處理冷凍食品。

3 將 PowerPod 放在 Ninja 玻璃容器上方，確保易抓握手把與 PowerPod 的左右兩側對齊，**而非**與前後兩側對齊。如果未穩妥固定，操作面板將顯示「LID（加蓋）」字樣。

注意：使用 Ninja 大玻璃容器烹調時，請務必使用轉接環。將 PowerPod 插入轉接環，直至卡入到位，然後將轉接環放置於玻璃容器上方。

4 按下「模式」按鈕依次切換功能，然後選擇「氣炸」。面板將會顯示預設時間。

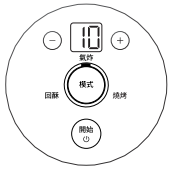

5 使用時間 – 和 + 按鈕選擇所需的烹調時間。

6 按下「開始/電源」按鈕開始烹調。烹調行程開始時，裝置會發出提示音。

7 如需在烹調期間翻動或翻面食材，請從玻璃容器上取下 PowerPod（取下後烹調會自動停止），或按下「開始/電源」按鈕暫停烹調。抓住易抓握手把搖晃玻璃容器或使用矽膠餐具將食物翻面。將 PowerPod 放回玻璃容器上並按下「開始/電源」按鈕以繼續烹調。

8 烹調完成時，PowerPod 會發出提示音，且螢幕會顯示「END（結束）」。PowerPod 將開始冷卻，可從玻璃容器上取下，並直接放置於任何檯面上。

9 直接使用玻璃容器進食，或使用矽膠料理夾/餐具取出食物，或抓住易抓握手把倒出食物。

回酥

1 在 Ninja 玻璃容器中放入酥脆盤。請小心操作，避免折彎酥脆盤。

2 將食材放入 Ninja 玻璃容器中。

注意：為獲得最佳口感，**請勿**使用「回酥」功能來處理冷凍食品。

注意：如果需要一次性回酥多種食物，請將一層食材放在玻璃容器底部，然後放入酥脆盤，在酥脆盤上放置第二層食材。

3 將 PowerPod 放在 Ninja 玻璃容器上方，確保易抓握手把與 PowerPod 的左右兩側對齊，**而非**與前後兩側對齊。如果未穩妥固定，操作面板將顯示「LID（加蓋）」字樣。

注意：使用 Ninja 大玻璃容器烹調時，請務必使用轉接環。將 PowerPod 插入轉接環，直至卡入到位，然後將轉接環放置於玻璃容器上方。

4 按下「模式」按鈕依次切換功能，然後選擇「回酥」。面板將會顯示預設烹調時間。



5 使用時間 – 和 + 按鈕選擇所需的烹調時間。

6 按下「開始/電源」按鈕開始烹調。烹調行程開始時，裝置會發出提示音。

7 如需在烹調期間翻動或翻面食材，請從玻璃容器上取下 PowerPod（取下後烹調會自動停止），或按下「開始/電源」按鈕暫停烹調。抓住易抓握手把搖晃玻璃容器或使用矽膠餐具將食物翻面。將 PowerPod 放回玻璃容器上並按下「開始/電源」按鈕以繼續烹調。

8 烹調完成時，PowerPod 會發出提示音，且螢幕會顯示「END（結束）」。PowerPod 將開始冷卻，可從玻璃容器上取下，並直接放置於任何檯面上。

9 直接使用玻璃容器進食，或使用矽膠料理夾/餐具取出食物，或抓住易抓握手把倒出食物。

燒烤

注意：為將冷凍食品烹調至最佳口感，**只能**使用「燒烤」功能。


1 在 Ninja 玻璃容器中放入酥脆盤。請小心操作，避免折彎酥脆盤。

2 將食材放入 Ninja 玻璃容器中。

3 將 PowerPod™ 放在 Ninja 玻璃容器上方，確保易抓握手把與 PowerPod 的左右兩側對齊，**而非**與前後兩側對齊。如果未穩妥固定，操作面板將顯示「LID（加蓋）」字樣。

注意：使用 Ninja 大玻璃容器烹調時，請務必使用轉接環。將 PowerPod 插入轉接環，直至卡入到位，然後將轉接環放置於玻璃容器上方。

4 按下「模式」按鈕依次切換功能，然後選擇「燒烤」。面板將會顯示預設時間。

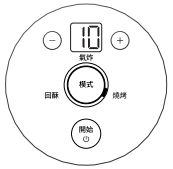

5 使用時間 – 和 + 按鈕選擇所需的烹調時間。

6 按下「開始/電源」按鈕開始烹調。烹調行程開始時，裝置會發出提示音。

7 如需在烹調期間翻動或翻面食材，請從玻璃容器上取下 PowerPod（取下後烹調會自動停止），或按下「開始」按鈕暫停烹調。抓住易抓握手把搖晃玻璃容器或使用矽膠餐具將食物翻面。將 PowerPod 放回玻璃容器上並按下
「開始/電源」按鈕以繼續烹調。

8 烹調完成時，PowerPod 會發出提示音，且螢幕會顯示「END（結束）」。PowerPod 將開始冷卻，可從玻璃容器上取下，並直接放置於任何檯面上。

9 直接使用玻璃容器進食，或使用矽膠料理夾/餐具取出食物，或抓住易抓握手把倒出食物。

清潔與維護

清潔 NINJA® CRISPI™

每次使用 PowerPod™ 後都應徹底清潔。務必**讓設備完全冷卻後再清潔。**

零件/配件	清潔方法	可使用洗碗機清洗嗎？
PowerPod	若要清潔 PowerPod 和操作面板，請用濕布擦拭。 **注意：切勿**將 PowerPod 浸泡在水中或其他液體中。**切勿**使用洗碗機清潔 PowerPod。	**不可以**
Ninja 玻璃容器	玻璃容器可使用洗碗機清洗或用熱肥皂水手洗。如果手洗，請勿使用磨蝕性清潔工具，並在清潔後徹底風乾或用毛巾擦乾所有零件。請務必讓玻璃逐漸冷卻至室溫，再放入水、水槽或洗碗機之中。	**可以**
酥脆盤	酥脆盤可使用洗碗機清洗或手洗。如果手洗，請在清潔後徹底風乾或用毛巾擦乾所有零件。	**可以**
蓋子	蓋子可使用洗碗機清洗（僅限放於上層）或手洗。如果手洗，請在清潔後徹底風乾或用毛巾擦乾所有零件。	**可以**
轉接環	轉接環可使用洗碗機清洗或手洗。如果手洗，請在清潔後徹底風乾或用毛巾擦乾。	**可以**

實用提示

1 Ninja 玻璃容器上的隔熱底座可方便您在任何檯面上安全地烹調，而不會因高溫造成損壞。

2 Ninja 玻璃容器上的易抓握手把可方便您在烹調後安全地抓握玻璃容器。

3 為讓食物均勻上色，請確保食材在玻璃容器底部均勻鋪開，沒有互相重疊。如果食材重疊，請在設定的烹調時間過半時搖晃食材。

4 烹調過程中可隨時調整烹調時間和功能。按下時間 - 和 + 按鈕或「模式」按鈕即可調整時間和功能。

5 請時常查看食物狀態，以免烹調過度。

6 PowerPod™ 從 Ninja 玻璃容器上取下就會自動暫停烹調。若要恢復烹調，請將 PowerPod 放回 Ninja 玻璃容器上，並按下「開始/電源」按鈕。

7 PowerPod 支腳可方便您在使用後將 PowerPod 直接放在任何檯面上。

注意：如果任何支腳出現破損或損壞，請完全停止使用 PowerPod™。

8 如需更快速烹調，請將蛋白質食材切成 2.5 公分大小。

9 酥脆盤能將玻璃容器中的食材抬高，讓空氣在食材下方和周圍流動，烹調出均勻的酥脆效果。

10 為獲得最佳口感，烹調時間結束後，請立即取出食物，以免烹調過度。

11 為將新鮮蔬菜和馬鈴薯烹調至最佳口感，請拌上至少 1 湯匙油，並可視需要增加油量，以達到理想的酥脆程度。

12 為獲得最佳口感，請在烹調期間檢查進度，當達到理想褐色效果時即可取出食物。建議使用即時讀取溫度計監測蛋白質食材的內部溫度。烹調時間結束後，請立即取出食物，以免烹調過度。

替換零件

如需訂購其他零件和配件，請造訪 **sharkninja.tw** 或致電客服專線：0800-000-605.

購買配件

我們為 Ninja® CRISPi™ 提供了一系列客製化配件。請造訪 **sharkninja.tw** 拓展廚藝潛能，提升料理水平。

故障排除指南

- **設備是否需要預熱？**
  不需要，本設備無需預熱。
- **螢幕上為什麼顯示著「LID（加蓋）」？**
  PowerPod™ 未穩妥固定在Ninja 玻璃容器上。請確保 PowerPod 與玻璃容器對齊並保持水平。如果使用轉接環，請確保 PowerPod 已完全插入轉接環。
- **如何暫停倒數計時？**
  在烹飪過程中，按下「開始/電源」按鈕或將 PowerPod 從玻璃容器上提起，即可暫停烹調功能。
- **PowerPod 可以安全放置於檯面上嗎？**
  可以，無論是否安裝了轉接環，在烹飪過程中或結束後，PowerPod 都可以安全地放置在任何檯面上。
- **玻璃容器可以安全放置於檯面上嗎？**
  可以，Ninja 玻璃容器附有隔熱底座，可在烹飪過程中或結束後將玻璃容器放置於任何檯面上。
- **什麼時候應該使用酥脆盤？**
  當您想要食物呈現酥脆效果時，就需要使用酥脆盤。酥脆盤能將玻璃容器中的食材抬高，讓空氣在食材下方流動，達到均勻烹調食材的效果。
- **食物沒有煮熟。**
  請確保 PowerPod 在烹調過程中保持穩妥固定在 Ninja 玻璃容器上。為讓食物均勻上色，請確保食材在玻璃容器底部均勻鋪開，沒有互相重疊。使用玻璃容器上的易抓握手把搖晃玻璃容器以翻動鬆散的食材，以達到一致的酥脆程度。烹調過程中可隨時調整烹調時間和功能。只需按下時間 - 和 + 按鈕或「模式」按鈕即可。
- **食物燒焦了。**
  為獲得最佳口感，請在烹調期間檢查進度，當達到理想褐色效果時即可取出食物。烹調時間完成後，請即取出食物，以免烹調過度。
- **為什麼有些食材在氣炸過程中會飛來飛去？**
  有時候，氣炸鍋的風扇會吹動重量較輕的食物。請使用牙籤固定鬆散的輕質食材，例如三明治頂部的吐司。
- **可以用氣炸功能烹調新鮮的裹粉食材嗎？**
  可以，但需要適當的裹粉技巧。請務必先將食材裹上麵粉，再裹蛋液，然後再裹麵包粉。另外，務必按壓麵包粉使其黏著在食物上，否則鬆散的麵包粉可能會被設備的強力風扇吹落。
- **裝置為何發出提示音？**
  烹調功能啟動時，裝置會發出提示音，烹調功能完成後，設備會再次發出提示音。
- **螢幕變黑。**
  裝置處於待機模式。按下「開始/電源」按鈕即可重新啟動。
- **螢幕顯示「E（錯誤）」訊息。**
  裝置未正常運作，請致電客服專線：**0800-000-605。**

Shark | NINJA

一（1）年有限保固

NJA_1_YR_IB_LMTD_WRNTY_TW_TC

此一 (1) 年有限保固適用於從**新加坡商維諾瓦股份有限公司臺灣分公司**授權零售商購買的產品。保固範圍僅適用於原購買人及原產品，且不得轉讓。

SharkNinja 保證在正常家庭使用條件下，並依照《使用者指南》中所示的要求進行維護的情況下，本產品自購買日起一 (1) 年內不會出現材料或做工上的瑕疵，惟需遵守以下條件與排除項目：

保固涵蓋哪些項目？

1. 原裝置及/或 SharkNinja 自行判定為有瑕疵的非耗損零件，可在原購買日期起一 (1) 年內進行維修或更換。
2. 若為提供更換產品的情況，保固期限將於收到更換產品後六 (6) 個月或原保固期剩餘時間內 (取較長者) 結束。SharkNinja 保留以等值或更高價值產品進行更換的權利。

保固不涵蓋哪些項目？

1. 正常磨損的零件 (如攪拌容器、蓋子、杯子、刀片、調理機底座、可拆式內鍋、料理架、烤盤等)，這些零件需定期維護及/或更換以確保裝置正常運作，並不在保固涵蓋範圍內。替換零件可於 **sharkninja.tw** 購買。
2. 任何遭到竄改或用於商業用途的裝置。
3. 因誤用、濫用、疏忽操作、未執行必要保養 (如未保持馬達座凹槽清潔，避免食物殘渣或其他異物堆積)，或因運送過程中搬運不當所造成的損壞。
4. 衍生性和附帶性損害。
5. 由非 SharkNinja 授權維修人員所造成的瑕疵。此類瑕疵包括由非 SharkNinja 授權人員在進行運送、修改或修理的過程中，所導致的 SharkNinja 產品 (或其零件) 損壞。

如何獲得維修服務

若您的設備在正常家庭使用條件下於保固期內無法正常運作，請造訪 **sharkninja.tw** 查詢產品保養與維護的自助服務。

產品保固註冊

請至 **sharkninja.tw** 上傳有效購買憑證 (須包含購買日期與商品明細，如發票、出貨單或其他相關證明)，並登錄產品序號，即可完成線上保固註冊。

限用物質含有情況標示聲明書

Declaration of the Presence Condition of the Restricted Substances Marking

設備名稱： Ninja Crispi 便攜式氣炸鍋 **型號(型式)：** FN090TWWH
Equipment name ***Type designation (Type)***

單元Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr^{+6})	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
PCB	O	O	O	O	O	O
轉動馬達	O	O	O	O	O	O
塑膠外殼	O	O	O	O	O	O
內部配線	O	O	O	O	O	O
金屬刀頭	O	O	O	O	O	O

備考1.〝超出0.1 wt %〞及〝超出0.01 wt %〞係指限用物質之百分比含量超出百分比含量基準值。
Note 1: "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.
備考2.〝O〞係指該項限用物質之百分比含量未超出百分比含量基準值。
Note 2: "O" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.
備考3.〝—〞係指該項限用物質為排除項目。
Note 3: The "–" indicates that the restricted substance corresponds to the exemption.

掃描以註冊：
sharkninja.tw
型號：
FN090TWWH
製造編號：
X17ZQ603Z0J1

製造編號中前四位為製造日期編號。

In Manufacture Code, the first 4 letters are Manufacture Date Code.

以上圖中"X17Z"為例，X代表製造月份(參考表A)，17代表製造日期，Z代表製造年份(參考表B)。

Take "X17Z" on the above picture as example, "X" means Month (refer to Table A), "17" means Date, "Z" means Year (refer to Table B).

參考表A / Table A	
月份 Month	編號 Code
1月 January	A
2月 Febuary	F
3月 March	H
4月 April	J
5月 May	K
6月 June	Q
7月 July	R
8月 August	S
9月 September	U
10月 October	Z
11月 November	X
12月 December	Y

參考表B / Table B	
年份 Year	編號 Code
2016	A
2017	F
2018	H
2019	J
2020	K
2021	Q
2022	R
2023	S
2024	U
2025	Z
2026	X
2027	Y
接下來 Next	從A座新開始 Start over with "A"

NINJA

CRISPI™

FN090TW Series | Owner's Guide



IMPORTANT SAFETY INSTRUCTIONS

INDOOR HOUSEHOLD USE ONLY• READ ALL INSTRUCTIONS BEFORE USE

	Read and review instructions to understand operation and use of product.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.

⚠WARNING

Failure to follow these instructions could result in electric shock, fire, or burn hazard that could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

DO NOT touch hot surfaces or exhaust vent.

1 The PowerPod™, adapter, Ninja CleanCrisp™ containers, and crisper plates become extremely hot during use. To prevent burns or serious injuries:
- Always grasp glass containers by handles using oven mitts. DO NOT touch the glassware container.
- Grasp PowerPod™ at the top.
- DO NOT touch any other components without protective hot pads or insulated oven mitts.

2 During use, hot air and steam is released. Keep hands and face at a safe distance from the air outlet socket vent.

USER QUALIFICATIONS

3 DO NOT allow children use, clean, maintain, or play with the appliance . Close supervision is necessary when used near children.

4 Close supervision is needed when used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

INTENDED USE

5 Use this appliance for air frying ONLY. DO NOT use for deep-frying. DO NOT use this appliance for anything other than its intended use.

SELECT A SAFE LOCATION

6 Be sure the appliance is in an appropriate location before you start using it. DO NOT move or relocate when in use. Extreme caution must be used when the glassware containers contain hot food, oil, or liquids. Improper use may result in spilled food that can cause serious burns or personal injury.

INDOOR COUNTERTOP USE ONLY

7 This appliance is for indoor household use only. DO NOT use outdoors or in moving vehicles or boats.

8 For countertop use only. Ensure the surface is level, clean, and dry. DO NOT place near the edge of the worktop.

KEEP AWAY FROM HEAT

9 To prevent the risk of fire or property damage, DO NOT place appliance or power cord on a stovetop. Never place on hot surfaces, near a hot gas or electric burner, or in an oven.

ALLOW SPACE FOR VENTILATOIN

10 DO NOT cover the air intake vent or air socket vent while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat. Keep all objects 15 cm away from vent while unit is in use.

IMPORTANT SAFETY INSTRUCTIONS

INDOOR HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

Failure to follow these instructions could result in electric shock, fire, or burn hazard that could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

AVOID NINJA CLEANCRISP™ GLASS CONTAINERS BREAKING:

11 Sudden temperature changes can break glassware.
- DO NOT add cool or cold liquid or food to hot glassware. Do not add hot liquids or food to cold glassware.
- DO NOT allow hot glass to directly contact cool or wet surfaces or items. Allow glassware to cool before putting in a sink, washing, refrigerating, or freezing.

12 The containers are not oven, broiler, or stovetop safe. DO NOT use with any heating appliances or heat sources except for the Crispi PowerPod™ or a microwave. Do not place empty containers in the microwave.

13 Physical damage or impacts can break glassware, or make it more likely to break from temperature changes.
- Use care to not scratch glass when using metal utensils and knives.
- DO NOT use abrasive cleaning tools.
- DO NOT drop or hit glassware against a hard object or strike utensils against it.
- DO NOT use or repair any glassware that has been dropped, chipped, cracked or severely scratched.
- If a glass container chips or breaks, use thick gloves and caution while cleaning up the glass. Pieces may be sharp and difficult to locate.
- Throw away the broken glass; DO NOT recycle.

14 Ninja CleanCrisp™ Glass containers are dishwasher safe. They may also be washed by hand using hot, soapy water and non-abrasive cleaners and plastic or nylon cleaning pads if scouring is necessary.
- Plastic lids are for microwave and storage use only and are BPA free.

PLUG DIRECTLY INTO AN APPROPRIATE SOCKET

15 Keep the appliance and its cord out of reach of children.

16 Select a socket above the countertop that allows the cord to be routed out of reach of children and away from hot surfaces and appliance vents.

17 This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to modify the plug in any way.

18 To reduce the risk of the appliance being pulled down, potentially resulting in serious burns or impact injury:
- DO NOT let cord hang over edge of table or counters.
- DO NOT use an extension cord.
- A short power-supply cord is used to reduce the risk of cord being grabbed or becoming entangled and to reduce the risk of people tripping over a longer cord.

DO NOT USE IF DAMAGED

19 Regularly inspect the appliance and power cord. If the appliance is damaged in any way (including the power cord or plug), DO NOT use. During operation, if the appliance malfunctions, immediately stop use and call Customer Service.

20 If a Ninja glass container is dropped OR becomes chipped, cracked or deeply scratched, DO NOT use as container strength may be compromised and the container could break or shatter, discard immediately.

PREPARING FOR OPERATION

21 ALWAYS ensure the PowerPod™ is properly secured on a Ninja CleanCrisp™ container before operating.

FILL TO APPROPRIATE LEVELS

22 To prevent food contact with heating element that may cause injury or affect the safe use of the appliance, DO NOT overfill the CleanCrisp™ container with food past the lip of the container.

CHECK FOOD TEMPERATURE

23 Socket voltages can vary, affecting the performance of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.

CLEANING

24 ALWAYS turn unit off and unplug from socket when not in use and before cleaning.

25 To protect against electric shock, DO NOT immerse cord, plugs, or main unit housing in water or other liquid.

26 DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.

27 See Cleaning section.


NO MODIFICATIONS OR UNAPPROVED ACCESSORIES

28 Modifications or the use of accessories or parts not recommended by SharkNinja may result in fire, electric shock, or injuries. Use only cooking containers, accessories, attachments, or replacement parts that are recommended or sold by SharkNinja.

29 To avoid damage to heating element, NEVER remove finger guard from the PowerPod™.

SAVE THESE INSTRUCTIONS

PARTS & ACCESSORIES

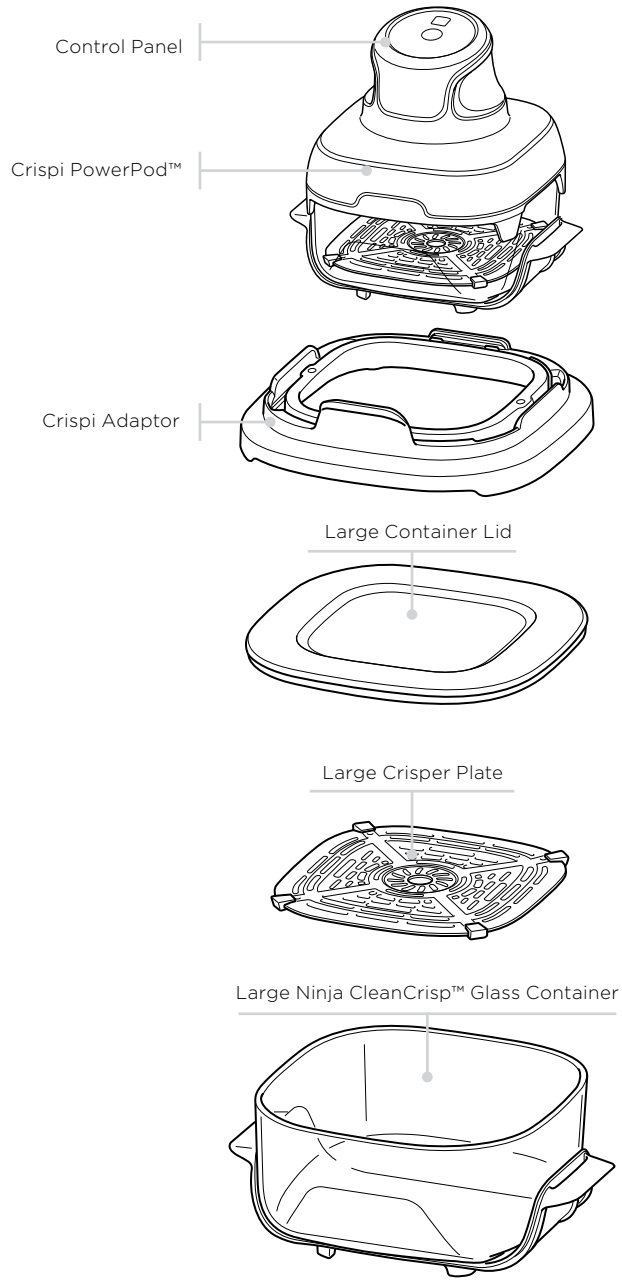

GETTING TO KNOW YOUR NINJA CRISPI™



To resume cooking, place the PowerPod™ back on the Ninja glass container and press the 開始 (START/POWER) button.

FUNCTION BUTTONS

回酥 (RECRISP): Revive leftovers by gently warming them, leaving you with crispy results.

氣炸 (AIR FRY): Use to give food crispiness and crunch with little to no oil.

燒烤 (ROAST): Blast your food with high heat for the ultimate crisp. Best for prepackaged frozen foods.

OPERATING BUTTONS

開始 (START/POWER) button: Press to turn the PowerPod on. When the PowerPod is attached to a container, press to start or stop cooking. Press and hold for 2 seconds to turn off the PowerPod.

模式 (MODE) button: Press to cycle through to desired function.

TIME - and + buttons: Use to adjust the cook time in any function before or during cooking.

BEFORE FIRST USE

1. Remove and discard any packaging material, stickers, and tape from the unit.
2. Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
3. Wash the containers, adapter, crisper plates, and lids in hot, soapy water, then rinse and dry thoroughly. **NEVER** clean the PowerPod in the dishwasher.

USE & CARE GUIDE

POWERPOD™

1. The PowerPod should **NEVER** be used on any container or vessel other than the Ninja glass container.
2. The PowerPod should **NEVER** be used when not on a Ninja glass container.
3. When placing PowerPod on the Ninja glass container, **ALWAYS** ensure easy-grip handles are aligned with the sides of the pod, **NOT** the front and back.
4. PowerPod will pause automatically when removed from the Ninja glass container. To resume cooking, place the PowerPod back on the Ninja glass container and press the START/POWER button.
5. **NEVER** remove the finger guard from the PowerPod.
6. All items should be kept 15 cm away from the PowerPod vent when the unit is in use.
7. PowerPod feet allow you to place the PowerPod directly on any countertop after use.

NOTE: Cease all use of PowerPod if any feet are broken or damaged.

NINJA GLASS CONTAINERS

1. Heat-protectant base and easy-grip handles are fixed permanently to the Ninja glass containers and should **NEVER** be removed.
2. Cease using Ninja glass container if easy-grip handles or heat protectant base are broken or damaged.
3. Ninja glass containers are freezer safe, microwave safe, and dishwasher safe.
4. Ninja glass containers are **NOT** oven/stovetop/broiler safe.
5. Handle glass containers with care. They can break if dropped, hit hard against a surface, or struck with a hard utensils. Discard immediately if any damage occurs.
6. If a Ninja glass container becomes chipped, cracked, or deeply scratched, **DO NOT** use, as container strength may be compromised and the container could break or shatter.

NOTE If a piece of a Ninja glass container chips or breaks off, use thick gloves and caution while cleaning up the glass, as pieces may be sharp. Dispose of glass in a standard waste bin; **DO NOT** recycle.

CONTAINER LIDS

1. Lids are freezer safe, microwave safe (ensure lid is **NOT** sealed on Ninja glass container when in the microwave), and dishwasher safe (top rack only).
2. **DO NOT** seal lid on Ninja glass container directly after cooking.
3. **NEVER** place PowerPod, Ninja glass container, or crisper plate directly on lid after cooking.

CRISPER PLATES

1. Crisper plates are dishwasher safe, but they are **NOT** microwave or oven safe.

ADAPTER

1. Adapter should be used with the PowerPod **ONLY** when cooking in the 3.8L Ninja glass container.
2. Adapter is dishwasher safe, but it is **NOT** microwave or oven safe.

NOTE Adapter should **NEVER** be used when cooking with the 1.4L Ninja glass containers.

3. Adapter will be hot after use; allow it to cool for 10 minutes before handling it.

HOW TO USE YOUR ADAPTER ASSEMBLY

1. Place PowerPod into adapter, ensuring the 4 feet on the PowerPod are aligned with the four corners of the adapter.
2. Push PowerPod down until you feel the adapter click onto the PowerPod.
3. Place now assembled PowerPod and adapter onto large Ninja glass container.

REMOVAL

1. PowerPod and adapter will be hot after cooking, allow both to cool for 10 minutes before interacting.
2. Grip the top of the PowerPod with one hand and use the other hand to grasp the front tab of the adapter.
3. Push down on the tab while lifting the PowerPod. PowerPod should easily lift off of the adapter.

NOTE Push PowerPod slightly back while pulling up for seamless removal.

USING YOUR NINJA® CRISPI™

USING THE COOKING FUNCTIONS

To turn on the PowerPod™, first plug the power cord into a wall outlet. Press the START/POWER button.

NOTE: For best results, **DO NOT** combine raw, frozen, and/or pre-cooked ingredients. Cook **ONLY** one type of food at a time.

氣炸 (AIR FRY)

1. Install a crisper plate in a Ninja glass container. Handle with care to avoid bending the crisper plate.
2. Add ingredients to the Ninja glass container.

NOTE: For best results, **DO NOT** use the Air Fry function for frozen foods.

3. Place the PowerPod on top of the Ninja glass container, ensuring easy-grip handles are aligned with the sides of the PowerPod, **NOT** the front and back. "LID" will display on the control panel if not properly secured.

NOTE: The adapter must be used when cooking with the large Ninja glass container. Insert the PowerPod into the adapter until it clicks into place, then place the adapter on top of the glass container.

4. Press the 模式 (MODE) button to cycle through the functions and select AIR FRY. Default time will display.



5. Use the TIME – and + buttons to select desired cooking time.
6. Press the START/POWER button to begin cooking. Unit will beep when cooking cycle starts.
7. To toss or flip ingredients during cooking, take PowerPod off container (it will stop automatically when removed) or press the START/POWER button to pause cooking. Shake container using easy-grip handles or flip foods with a silicone-tipped utensil. Place PowerPod back on container and press the START/POWER button to continue cooking.
8. When cooking is complete, the PowerPod will beep and "END" will appear on the display. The PowerPod will start cooling down and is safe to be removed from the container and placed directly on any countertop surface.
9. Eat right out of the container or remove ingredients using silicone-tipped tongs/utensil or dump out using easy-grip handles.

回酥 (RECRISP)

1. Install a crisper plate in a Ninja glass container. Handle with care to avoid bending the crisper plate.
2. Add ingredients to the Ninja glass container.


NOTE: For best results, **DO NOT** use the Recrisp function for frozen foods.

NOTE: If recrisping multiple food types at once, place a layer of ingredients in the bottom of the container. Then install the crisper plate and set a second layer of ingredients on the crisper plate.

3. Place the PowerPod on top of the Ninja glass container, ensuring easy-grip handles are aligned with the sides of the PowerPod, **NOT** the front and back. "LID" will display on the control panel if not properly secured.

NOTE: The adapter must be used when cooking with the large Ninja glass container. Insert the PowerPod into the adapter until it clicks into place, then place the adapter on top of the glass container.

4. Press the 模式 (MODE) button to cycle through the functions and select RECRISP. Default cook time will display.

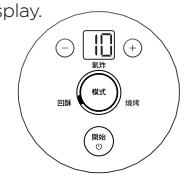

5. Use the TIME – and + buttons to select desired cooking time.
6. Press the START/POWER button to begin cooking. Unit will beep when cooking cycle starts.
7. To toss or flip ingredients during cooking, take PowerPod off container (it will stop automatically when removed) or press the START/POWER button to pause cooking. Shake container using easy-grip handles or flip foods with a silicone-tipped utensil. Place PowerPod back on container and press the START/POWER button to continue cooking.
8. When cooking is complete, the PowerPod will beep and "END" will appear on the display. The PowerPod will start cooling down and is safe to be removed from the container and placed directly on any countertop surface.
9. Eat right out of the container or remove ingredients using silicone-tipped tongs/utensil or dump out using easy-grip handles.

燒烤 (ROAST)

NOTE: For best results with frozen foods, use **ONLY** the ROAST function.

1. Install a crisper plate in a Ninja glass container. Handle with care to avoid bending the crisper plate.
2. Add ingredients to the Ninja glass container
3. Place the PowerPod™ on top of the Ninja glass container, ensuring easy-grip handles are aligned with the sides of the PowerPod, **NOT** the front and back. "LID" will display on the control panel if not properly secured.

NOTE: The adapter must be used when cooking with the large Ninja glass container. Insert the PowerPod into the adapter until it clicks into place, then place the adapter on top of the glass container.

4. Press the 模式 (MODE) button to cycle through the functions and select ROAST. Default time will display.



5. Use the TIME – and + buttons to select desired cooking time.
6. Press the START/POWER button to begin cooking. Unit will beep when cooking cycle starts.
7. To toss or flip ingredients during cooking, take PowerPod off container (it will stop automatically when removed) or press the START button to pause cooking. Shake container using easy-grip handles or flip foods with a silicone-tipped utensil. Place PowerPod back on container and press the START/POWER button to continue cooking.
8. When cooking is complete, the PowerPod will beep and "END" will appear on the display. The PowerPod will start cooling down and is safe to be removed from the container and placed directly on any countertop surface.
9. Eat right out of the container or remove ingredients using silicone-tipped tongs/utensil or dump out using easy-grip handles.

CLEANING & MAINTENANCE

CLEANING YOUR NINJA® CRISPI™

The PowerPod™ should be cleaned thoroughly after each use. **ALWAYS** let the appliance cool completely before cleaning.

Part/ Accessory	Cleaning Method	Dishwasher Safe?
PowerPod	To clean the PowerPod and the control panel, wipe them clean with a damp cloth. **NOTE: NEVER** immerse the PowerPod in water or any other liquid. **NEVER** clean the PowerPod in a dishwasher.	**No**
Ninja Glass Containers	The containers can be washed in the dishwasher or by hand with hot soapy water. If hand-washing, do not use abrasive cleaning tools and thoroughly air dry or towel-dry all parts after use. Be sure to allow glass to cool gradually to room temperature before placing it in water, sink, or dishwasher.	**Yes**
Crisper Plates	The crisper plates can be washed in the dishwasher or by hand. If hand-washing, thoroughly air-dry or towel-dry all parts after use.	**Yes**
Lids	The lids can be washed in the dishwasher (top rack only) or by hand. If hand-washing, thoroughly air-dry or towel-dry all parts after use.	**Yes**
Adapter	The adapter can be washed in the dishwasher or by hand. If hand-washing, thoroughly air-dry or towel-dry after use.	**Yes**

HELPFUL TIPS

1. Heat-protectant base on Ninja glass containers allows you to safely cook on any countertop surface with no heat damage.
2. Easy-grip handles on Ninja glass containers allow you to safely handle containers after cooking.
3. For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the glass container with no overlapping. If ingredients are overlapping, make sure to shake them halfway through the set cook time.
4. Cook time and function can be adjusted at any time during cooking. Press the TIME - and + buttons or 模式 (MODE) button to adjust the time and function.
5. Check food frequently to avoid overcooking.
6. PowerPod™ will pause automatically when removed from the Ninja glass container. To resume cooking, place the PowerPod back on the Ninja glass container and press the START/POWER button.
7. PowerPod feet allow you to place the PowerPod directly on any countertop after use.

NOTE Cease all use of PowerPod™ if any feet are broken or damaged.

8. For quicker cooking, cut protein in 2.5 cm pieces.
9. The crisper plate elevates ingredients in the basket so air can circulate under and around them for consistent, crisp results.
10. For best results, remove food immediately after the cook time is complete to avoid overcooking.
11. For best results with fresh vegetables and potatoes, use at least 1 tablespoon of oil. Add more oil as desired to achieve the preferred level of crispiness.
12. For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. We recommend using an instant-read thermometer to monitor internal temperature of proteins. After the cook time is complete, remove food immediately to avoid overcooking.

REPLACEMENT PARTS

To order additional parts and accessories, visit **sharkninja.tw** or contact Customer Service at 0800-000-605.

ACCESSORIES FOR PURCHASE

We offer a suite of custom-made accessories for your Ninja® CRISPi™.
Visit **sharkninja.tw** to expand your capabilities and take your cooking to the next level.

TROUBLESHOOTING GUIDE

- **Does my unit need to preheat?**
  No, the unit does not need to be preheated.
- **Why is LID appearing on the display screen?**
  PowerPod™ is not secured properly on Ninja glass container. Make sure PowerPod is aligned and leveled on the container. If using the adapter, ensure PowerPod is fully inserted into the adapter.
- **How do I pause the countdown?**
  Pressing START/POWER button or lifting the PowerPod off the container during cooking will pause the cooking function.
- **Is the PowerPod safe to put on my countertop?**
  Yes, the PowerPod with or without the adapter on can safely be placed on any countertop during or after cooking.
- **Are the glass containers safe to put on my countertop?**
  Yes, the heat protectant base on the Ninja glass containers allows them to be placed on any countertop during or after cooking.
- **How do I know when to use the crisper plate?**
  Use the crisper plate when you want food to come out crispy. The plate elevates the food in the basket so that air can flow under it to cook ingredients evenly.
- **My food didn't cook.**
  Make sure the PowerPod is properly secured on Ninja glass container during cooking. For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the basket with no overlapping. Use easy-grip handles on glass containers to shake to toss loose ingredients for consistent crispiness. Cook time and function can be adjusted at any time during cooking. Simply press the TIME - and + or 模式 (MODE) buttons.
- **My food is burned.**
  For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. Remove food immediately after the cook time is complete to avoid overcooking.
- **Why do some ingredients blow around when air frying?**
  Occasionally, the fan from the air fryer will blow lightweight foods around. Use toothpicks to secure loose lightweight food, like the top slice on a sandwich.
- **Can I air fry fresh battered ingredients?**
  Yes, but use the proper breading technique. It is important to coat foods first with flour, then with egg, and then with breadcrumbs. Be sure to press the breadcrumbs onto the food so they stick in place. Loose breading may be blown off by the unit's powerful fan.
- **Why is the unit beeping?**
  The unit beeps when the cooking function starts and again when the cooking function is complete.
- **The screen went black.**
  The unit is in standby mode. Press the START/POWER button to turn it back on.
- **An "E" message appears on display screen.**
  The unit is not functioning properly. Please contact Customer Service at **0800-000-605.**

Shark | NINJA

ONE (1) YEAR LIMITED WARRANTY

NJA_1_YR_IB_LMTD_WRNTY_TW_EN

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of **OSONOVA PRIVATE LIMITED TAIWAN BRANCH**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at **sharkninja.tw**.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit **sharkninja.tw** for product care and maintenance self-help. Our Customer Service Specialists are also available at **0800-000-605** to assist with product support and warranty service options. So we may better assist you, please register your product online at **sharkninja.tw** and have the product on hand when you call.

How to initiate a warranty claim

You must call **0800-000-605** to initiate a warranty claim. You will need the receipt as proof of purchase. We also ask that you register your product online at **sharkninja.tw** and have the product on hand when you call, so we may better assist you. A Customer Service Specialist will provide you with return and packing instruction information.

感謝您購買 Ninja® CRISPi™ 便攜式氣炸鍋

THANK YOU for purchasing the Ninja® CRISPi™ Air Fryer

註冊您購買的產品
REGISTER YOUR PURCHASE

sharkninja.tw/service

使用行動裝置掃描 QR 碼
Scan QR code using mobile device

請記錄此資訊

型號：_____

序號：_____

購買日期：_____
(請保留收據)

購買商店：_____

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

技術規格

電壓：	AC110V~ 60Hz
電源：	1526 Watts

提示：型號和序號位於設備背面靠近電源線的 QR 碼標籤上。

TECHNICAL SPECIFICATIONS

Voltage:	AC110V~ 60Hz
Power:	1526 Watts

TIP: You can find the model and serial numbers on the QR code label on the back of the unit by the power cord.

經銷商：
新加坡商維諾瓦股份有限公司臺灣分公司
104105臺北市中山區南京東路3段168號2樓之1

Distributed by:
OSONOVA PRIVATE LIMITED TAIWAN BRANCH
2F.-1, No. 168, Sec. 3, Nanjing E. Rd., Zhongshan Dist., Taipei City

sharkninja.tw

圖例可能與實際產品有所不同。我們將持續努力改善我們的產品，因此本文中的規格可能會有所變更，恕不另行通知。

NINJA 是 SharkNinja Operating LLC 的註冊商標。
CLEANCRISP、NINJA CRISPI 和 POWERPOD 是 SharkNinja Operating LLC 的商標。

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark of SharkNinja Operating LLC.
CLEANCRISP, NINJA CRISPI, and POWERPOD are trademarks of SharkNinja Operating LLC.

© 2025 SharkNinja Operating LLC

FN090TWSeries_IB_TC_E_Mv16