成品尺寸：90×120mm
顏色：黑色 C0M0Y0K100

材質：雙膠紙
工藝：20p，騎馬釘裝，單色雙面印刷

請告訴下載此說明書中文翻譯檔
www.philips.com

本手冊內容版權實體印刷或數位版本，歸飛利浦家用電器有限公司所有。
©2020 Koninklijke
All rights reserved.
Philips and the Philips Shield Emblem are registered trademarks of Koninklijke
Philips N.V. and are used under license.
This product has been manufactured by and is sold under the responsibility of
Guangdong Deerma Health Technology Company Limited and Guangdong Deerma
Technology Co., Ltd. and Philips is not liable relating to this product in any way.
此產品是經廣東德爾瑪科技有限公司及廣東德爾瑪家電技術股份有限公司授權使用，飛利浦不對與此產品有關的任何事務負責。
Made in China

Rev A DEC 21

PHILIPS
易潔機
簡單版
PFM7231



使用說明書

目錄

1 用戶必讀 1
符號描述 1
適用人群 2
使用注意事項 3
保養的注意事項 3
2 產品功能 4
3 部件名稱 4
4 使用方法 6
使用前的準備事項 6
使用操作 7
充電說明 7
指示燈說明 8
5 保養維護 9
清潔方法 9
維護方式 9
6 故障診斷 10
7 主要技術參數 10
8 環保說明 10
9 產品保修服務指南 10
10 裝箱清單 10

Readme 15
Symbol Description 15
People Suitable to Use 15
Precautions for Use 17
Precautions for Maintenance 18
Product Features 19
Product Overview 20
How to Use 21
Preparations Before Use 21
Operation 21
Charging 22
Indicator Description 23
Maintenance 23
Cleaning 24
Disposal 24
Troubleshooting 25
Technical Parameters 27
Environment Protection 28
Service Guide for Product Warranty 29
Warranty and Service 29
Warranty Card 30
Packing List 30

1 用戶必讀 1
符號描述 1
適用人群 2
使用注意事項 3
保養的注意事項 3
2 產品功能 4
3 部件名稱 4
4 使用方法 6
使用前的準備事項 6
使用操作 7
充電說明 7
指示燈說明 8
5 保養維護 9
清潔方法 9
維護方式 9
6 故障診斷 10
7 主要技術參數 10
8 環保說明 10
9 產品保修服務指南 10
10 裝箱清單 10

1

1 用戶必讀

產品使用前請仔細閱讀並妥善保管本說明書。

符號描述

為避免造成人身危害或財產損失，請務必遵守以下內容：

- 用以下圖示來示例說明有關使用中的內容：

⃠ 表示禁止　　❗ 表示需要根據指示去做

適用人群

❗ 以下人群應謹慎使用

在醫療機關如使用中的或者下列一些狀況的人，使用之前請務必經醫生或者理療醫師作答：

- 心臟病的人群
- 高血壓症的人群
- 感性腫瘤的人群
- 有傷未癒者的人群
- 有出血傾向的人群
- 接受放療使用人群
- 皮膚感覺障礙的人群
- 血管障礙相關的人群
- 靜脈曲張血栓的人群
- 有造成高燒傷的人群

- 糖尿病(可以上的人群
- 有慢性病，容易大的人群
- 其他可能影響機能自律的的人群
- 腰椎間盤突出 有椎出現的人群
- 因交通事故等而引發過度的的人群
- 髮的性關節炎：關節炎：痛風的人群
- 患有血液疾病以外的有如慢性腎臟的的人群
- 正處於懷孕期間或者期待孕育子人的的人群
- 體內有放置人為醫療相關裝置器具或產品的人群
- 內臟疾病（胃炎、肝炎、腸胃炎）等急性症狀的人群
- 有急性炎症、感染期、創傷、血液循環障碍症狀的的人群
- 同意前述醫院手術而在體內含入金屬、矽或塑膠材質的的人群

❗ 以下人群小情況況禁止使用

醫生建議禁止接觸或者使用高壓的的人群

出現：血管症、重度的動脈硬、急性腦梗塞、急性腦病變、急種或者感染症、因為有嚴重的的症狀：所以禁止使用：

- 無自我感知力障碍的人士者患者的人者患者精神障碍的人群
- 本產品禁止兒童以下兒童使用，6-14歲青少年請在成年監護人的指導下使用，下列特殊狀況下使使用
- 創傷癒合期間
- 發燒、發炎中再之內
- 新患之後



使用注意事項

❗ 不要潛入使用的衣服使用。

❗ 請勿在潮濕、油膩、有水的環境使用。

❗ 充電完成後，請及時斷開電源。

❗ 產品無法正常運行，或者感覺異常的時候請立即停止使用。

❗ 每次使用前請檢查確保充分並仔細檢查產品是否保證正常使用。

❗ 請勿避免燃燒本品，保持充電口沒有灰塵，充電中產品無法使用。

❗ 使用過程中，感覺頭痛、頭暈、噁心、呼吸急促感覺異常立即停止使用，請立即停止。

❗ 本產品單次定時15分鐘，每次使用清不要超過10分鐘，使用後請讓機器休息30分鐘以確保機器最佳的狀態。

❗ 禁止擅自修改！

❗ 禁止置入非下或毛巨使用。

❗ 禁止由產品非原廠方式的維護和負責。

❗ 請勿在沒有完成其他部件的產品。

❗ 嚴格不要下雨，防盜或者自己修理產品。

❗ 不要用力拉扯產品，也不要用力或者反向的物品去拆產品。

❗ 產品出現異常現象，異常現象，異常異品或故障時（請立即停止使用，關閉開關，斷開電源。

❗ 本產品不要在易燃易爆物品的近或類似環境中使用。

❗ 使用者不得自行拆卸更換電池，不要擅更換內部設備，部件和保護裝置；

❗ 本電器不得與防生物，例如：心智能力，感覺或知識不足之使用者（包括兒童）使用，除非這些人員有安全責任的人員之監護或指導下安全使用。

❗ 注意使用安全，以確保設置不被玩電器。

保養的注意事項

❗ 進行清潔時，請務必關閉機器。

❗ 請妥善處理本產品的包裝袋，使其遠離嬰幼兒。

❗ 長期沒有使用，再次使用的時候，務必事先確認開機是否正常。

❗ 保養時，請不要使用帶油、磨蝕劑、溶劑、強酸性及鹽類，氯的物質清潔。

❗ 經常檢查設備上是否有破損或損壞的現象，如果有這種現象，或如果此設備在功能或狀況，則應立即立使用前聯繫供應商或進行修理。

❗ 本產品內含電電池，請勿自行拆卸，改裝，本設備品內含電池可能對人或財產造成傷害。

❗ 請勿將本包含在設備或電池暴露於熱源，例如陽光直接照射、明火或類似裝置。

❗ 請勿將電池或設備，或內含電池的設備棄置於火中。此外，請勿讓他們接觸或操作本產品，否則，可能會引起燃燒、觸電或人身傷害。

❗ 請勿使用或改裝，或內含電池，切勿電池，否則，請勿在電源線上施放重量物或擠壓重線。

2 產品功能

新款7字型的造型，手柄長條，產品高度與掌握貼點，可以幫助放鬆緊張肌肉，緩解不同的放鬆部位，可用於身體各處肌肉按摩。

3 部件名稱

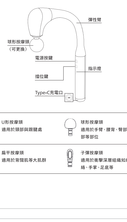







4 使用方法

使用前的準備事項

1 - 請依照圖標及操作完整。

2 - 使用時請選擇合適的按摩頭，以避免影響按摩效果。

3 - 請將按摩頭安裝到位。

4 - 根據按摩部位，選擇按摩到個人舒適程度力道先力。

產品安裝

❗ 從/前按摩頭的同時，輕推旋轉按摩頭並出/取入，請勿直接從/取。



使用操作

1 - 長按電源按鍵2秒開機，開啟一檔按摩，模式指示燈亮青色；

2 - 短按電源按鍵進行變速調整（按照順序1 檔（1個指示燈亮起）、2檔（2個指示燈亮起）、3檔（3個指示燈亮起）和4檔（4個指示燈亮起）如5檔 5個指示燈亮起）；

3 - 長按機台待機下，長按電源鍵2秒關機，指示燈熄滅；

4 - 產品連續設定為15分鐘定時機器，若在按壓過程中需要中途停止，請長按電源鍵停止。

充電方式

1 - 首次使用時，請將電量充滿，電池充滿電約3小時。

2 - 本產品僅能使用電腦端口供應之安全設備充電。

3 - 充電時，電位燈常亮亮起，電池位置變為亮亮，表示電量充滿。

4 - 充電時不可以同時使用本產品。

指示燈說明

電池指示燈	狀態	描述
1 個指示燈	常亮	一檔
2 個指示燈	常亮	二檔
3 個指示燈	常亮	三檔
4 個指示燈	常亮	四檔
5 個指示燈	常亮	五檔
單片電量指示燈	狀態	描述
5 個指示燈	快閃 1.5 秒	當前電量 < 10%
充電指示燈（電池燈）	狀態	描述
5 個指示燈	跑馬燈亮	產品正在充電
5 個指示燈	全部常亮	產品電量充滿

5 保養維護

清潔方式

❗ 產品外表無法取下。

1 - 可用清潔劑布或清潔設備清潔，然後用乾布擦拭。

2 - 不要讓水進入到產品內部，請勿直接浸泡使用。

❗ 本產品具有不使用時，請勿每1個月對產品進行充電一次。

❗ 保養時機，一定要把以設置請關掉，但是不要再清水全部除電源。

❗ 清洗之後不要在陽光直射的地方或者溫度高的地方。

❗ 本產品請勿打開 ，久事，輸出，用機器拆開，或，請勿作保養之外產品品，防止部件損壞，破壞，觸電和危害，並向上，相信和防患。

維護方式

本產品內用的鋰離子電池有可回收再次利用重要資源，請在使用完畢後棄之時，將廢棄不再使用，交給可進行恰當地回收再次重新利用重要機構進行處理，電池恰當的原則下：

- 將廢棄之產品將與其他廢物分開並交給官方指定的回收點或零售商。
- 按照當地法律或指令將廢棄物處理。
- 將電池從產品中移除前切斷電源插頭。
- 將電池移除前必須排空。
- 用剪刀將電池分離開來。
- 將分開來。

❗ 用戶不能自行更換電池，
廢棄器具前，必須將電池從器具中取出。
在取出電池時請由合格電工
電池廢棄後處理，

6 故障診斷

本智利以了解於本產品最常見的問題，如果您無法在其中找到您所遇問題的答案，請聯繫飛利浦或您所在地區的授權服務中心。

故障現象	可能原因	故障方法
主機無法開機	內部充電電池電量不足	對主機進行充電
	主機沒正在充電	充電後使用
主機不能充電	充電座或者設備連接好	重新使用
	內部充電電池電量不足	對主機進行充電
在工作中突然停止	電池被無法設定按壓保持機	重新開機並調整使用力度
	充電座或者設備連接好	重新連接

長時間未使用後，開此先電話功能正常，才能再次使用：	
定期檢查	每月1次檢查
	電源線或者插頭損壞
	電源線有沒有因為彎曲或者變形，包裹絕緣層開裂，不正常工作
	有其他異常或者現象

注意：
如果無法排除故障或產品遇到故障請全仍無法操作 請與售後服務人員聯繫 切勿自行拆卸或嘗試維修

7 主要技術參數

產品名稱	飛利浦按摩器
產品型號	PFM7231
工作電壓	7.4V
工作功率	10W
充電電壓	5V/4h
充電電流	2A
電池容量	2500mAh
產品尺寸	345.5x211x59.3mm

8 環保說明

1.本產品滿足《電磁電子產品有害物質限制使用管理方法》的要求。

2.在智慧使用期內，請務必注意使用過程中不要出現有害物質洩漏，對自身影響消費者健康的問題，可以放心使用。

3.此台產品是根據有關無線電法令，符有在本說明書所述的正常情況下不使用本產品時，"環保使用期限"才有效。



設備名稱：按柄振動器　型號（型式）：PFM7231

單元	危害物質名稱及標示說明					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr6+)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
外殼	○	○	○	○	○	○
電路板組合	○	○	○	○	○	○
金屬件	○	○	○	○	○	○
橡膠件	○	○	○	○	○	○
充電器	○	○	○	○	○	○

備考1. "超出 0.1 wt %" 及 "超出 0.01 wt %" 係指個用物質之百分比含量超出百分比含量基準值。

備考2. "○" 係指該項個用物質之百分比含量未超出百分比含量基準值。

備考3. "－" 係指該項個用物質為排除項目。

9 產品保修服務指南

保修及服務

此產品一件設計精良，經高質量元件製造之使用電器，百正常使用及保養下應能提供其滿意性能。在購買日期後二年內，若發生任何因原由工藝或原材料造成之故障，飛利浦或其授權的服務中心將為您提供維修服務，或您正更換零件或整個產品。

無論在保修期內或保修期外，請聯絡當地飛利浦經銷商，或造訪飛利浦網站取得服務。

若有任何產品安裝無線電話通訊，或任何通訊經過非飛利浦授權的服務中心，或向其他無線電話通訊。

台灣地區：0800-232-999
地址：台灣新北市神口區陸軍路二段2號
服務熱線：0800-663-600
服務郵箱：philips.mauager@sander.com.tw

保修條例

在購買日期後二年內，凡經本公司核准的維修站人員確認為正常使用情況下出現故障之製造原因和產品之損壞，您都將獲得免費保修服務。

- 此免費服務不包括電池更換的有效期內有損（此類電池更換費用由顧客負擔）
- 在飛利浦服務站以外的地方進行的維修或調整，但是不更換零件全部除電源。
- 因使用不當，意外事故，疏忽，濫用，改動或未遵守操作說明書而引起的損壞。
- 因使用非飛利浦認可的配件而引起的損壞。
- 因電壓和/或使用與本說明書所述不符的任何特定電源類型而引起的損壞。
- 產品的正常維護、調整和清潔，用戶手冊中已經說明的部分。
- 產品已經過改裝或修改，以適應與最初購買的國家/地區以外的國家/地區的技術或安全標準，這不是本產品設計的國家/地區。
- 產品的正常磨損，包括但不限於：電池或可更換的電弧燈、刀頭、刀網、刀網框架或任何其他可更換的部件。
- 產品的外觀損壞，包括但不限於：塑料表面的劃痕、凹痕和破裂。

9 產品保修服務指南

保修及服務

此產品一件設計精良，經高質量元件製造之使用電器，自正常使用及保養下應能提供其滿意性能。在購買日期後二年內，若發生任何因原由工藝或原材料造成之故障，飛利浦或其授權的服務中心將為您提供維修服務，或您正更換零件或整個產品。

無論在保修期內或保修期外，請聯絡當地飛利浦經銷商，或造訪飛利浦網站取得服務。

若有任何產品安裝無線電話通訊，或任何通訊經過非飛利浦授權的服務中心，或向其他無線電話通訊。

台灣地區：0800-232-999
地址：台灣新北市神口區陸軍路二段2號
服務熱線：0800-663-600
服務郵箱：philips.mauager@sander.com.tw

保修條例

在購買日期後二年內，凡經本公司核准的維修站人員確認為正常使用情況下出現故障之製造原因和產品之損壞，您都將獲得免費保修服務。

- 此免費服務不包括電池更換的有效期內有損（此類電池更換費用由顧客負擔）
- 在飛利浦服務站以外的地方進行的維修或調整，但是不更換零件全部除電源。
- 因使用不當，意外事故，疏忽，濫用，改動或未遵守操作說明書而引起的損壞。
- 因使用非飛利浦認可的配件而引起的損壞。
- 因電壓和/或使用與本說明書所述不符的任何特定電源類型而引起的損壞。
- 產品的正常維護、調整和清潔，用戶手冊中已經說明的部分。
- 產品已經過改裝或修改，以適應與最初購買的國家/地區以外的國家/地區的技術或安全標準，這不是本產品設計的國家/地區。
- 產品的正常磨損，包括但不限於：電池或可更換的電弧燈、刀頭、刀網、刀網框架或任何其他可更換的部件。
- 產品的外觀損壞，包括但不限於：塑料表面的劃痕、凹痕和破裂。

10 裝箱清單

主機	1x	按摩頭	4x
充電線	1x	說明書	1x
		保固卡	1x

- People who cannot express their will or people who cannot operate machines by themselves.
- Children under the age of 6 are not allowed to use. Adolescents aged 6–14 should use it under the guidance of an adult guardian.
- Do not use the product under the following circumstances:
  - When you are severely tired
  - When you are before and after meals
  - When you are drunk



Readme

Please read this manual carefully before using the product and keep it properly. The manual is available at www.philips.com

Symbol Description

To avoid personal injury or property damage, be sure to observe the contents below.

- The following symbols are used to illustrate what should be observed.

⃠ Indicates prohibition

❗ Indicates the actions that need to be subject to instructions

People Suitable to Use

❗ The product should be used with caution for the following persons

People who are being treated in medical institutions, or have the following conditions, please be sure to consult a doctor or physiotherapist before use.

- People with heart disease.
- People with hypertension.
- People with malignant tumors.
- People with an injury that has not yet healed.
- People with vascular disorders.
- People with a bleeding tendency.
- People with thrombosis.
- People who are prone to numbness.
- People with burns.
- People with body temperature exceeding 38℃.
- People with spinal fractures and bone hypertrophy.
- People who are receiving medical treatments.
- People with lumbar disc herniation, spondylitis, etc.
- People with skin sensory disorders, gout, etc.
- People with dermatitis arthritis, arthritis and gout.
- People with perceptual impairment due to diabetes.
- People who are pregnant or shortly after giving birth.
- People who are implanted with pacemakers or other medical electronic devices in their bodies.
- People with acute symptoms such as visceral diseases (gastritis, hepatitis, enteritis).
- People with symptoms such as acute inflammation, fatigue, aversion, and changes in blood pressure.
- People who are implanted with metal, silicon or plastic materials in body due to a fracture or plastic surgery.

⃠ The product is not allowed to be used by the following groups under the following circumstances

People who are prohibited from exercising or stretching activities as advised by doctor.
For example, people with thromboembolism, severe aneurysm, acute venous aneurysm, various skin inflammations, or various skin infections are prohibited because they can easily cause deterioration.

- People who cannot express their will or people who cannot operate machines by themselves.
- Children under the age of 6 are not allowed to use. Adolescents aged 6–14 should use it under the guidance of an adult guardian.
- Do not use the product under the following circumstances:
  - When you are severely tired
  - Within one hour before and after meals
  - When you are drunk

Precautions For Use

❗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

❗ Children should be supervised to ensure that they do not play with the appliance.

❗ If the power cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

❗ This appliance contains batteries that are only replaceable by skilled persons.

❗ Do not wear excessive clothes during use.

❗ It is recommended not to overuse the massage function.

❗ After charging, disconnect the power supply in time.

❗ The product cannot be used while charging.

❗ Stop using immediately if the product does not work properly or you feel abnormal.

❗ Before each use, carefully check whether the product can be used normally according to the operation instructions in this manual.

Keep away from liquids or heat sources, and keep the charging port from dust.

❗ Stop using immediately if you experience dizziness, headache, nausea, shortness, vomiting, and other abnormal body reactions during use.

❗ The device is set to automatically shut down after 15 minutes. Do not use it for more than 10 minutes each time. Keep the device rest for 30 minutes after each use to ensure the extension of its service life.

❗ Do not modify the device while devoicing.

❗ Do not cover with a quilt or blanket when using the device.

❗ Do not use the product in a bathtub or shower.

❗ Do not use the device in a bathroom or a shower.

❗ Do not disassemble, modify or repair the device by yourself.

❗ Do not pull the product with force, nor stab it with a knife or a sharp object.

❗ If the product emits abnormal noise, odor, high temperature, or malfunctions, stop using it immediately and turn off the power switch and unplug the plug.

❗ This product must not be used near flammable or explosive items or in similar environments.

❗ Users must not disassemble the appliance or alter its internal wiring, components, or protective devices.

❗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

❗ Children should be supervised to ensure that they do not play with the appliance.

Precautions for Maintenance

❗ Be sure to disconnect the power supply when cleaning.

❗ Please handle the packaging bag of this product properly, and keep it out of reach of infants and children.

❗ Be sure to confirm whether the switch is normal in advance before it is used again if the device has been stored for a long time.

❗ Do not use alcohol, thinner, alcohol, strong alkaline detergent, bleach, etc. for cleaning and maintenance.

❗ Regularly inspect the device for wear or damage. In case of such signs, or if the device has been misused, contact the supplier for maintenance before reuse.

❗ The product has built-in lithium batteries. Do not disassemble or modify the product by yourself, immerse the product (controller) in water or toss it into the fire. Keep away from children and do not let them touch or operate the product, otherwise it is likely to lead to burns, electric shocks or personal injuries.

❗ Do not damage, modify, bend or pull the charging cable with force. Do not place heavy objects on the charging cable or squeeze the charging cable.

Product Features

Newly created arched shape with long and slender handle. Through high-frequency impact vibration, it can help relax tense muscles; With different massage heads, it can be used for muscle massage in various parts of the body.

Product Overview

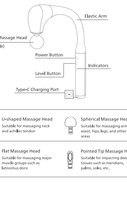





How to Use

Preparation Before Use

1.Check whether the parts and its accessories are complete.
2. Remove the pendants and accessories during use so as to avoid affecting the massage parts.
3. Install the massage head in place.
- According to the massage need, insert the massage head into the hole in the front of the massage gun.

Installation

❗ Rotate the massage head slightly to remove/install. Do not pull out/insert straight.



Operation

1.Press and hold the power button for 2 seconds to turn on the massage gun in vibration 4 level by default, and the indicator lights on.
2. Press the level button to adjust vibration speed levels in sequence: level1 (1 indicator on), level2 (2 indicators on), level3 (3 indicators on), level4 (4 indicators on), and level5 (5 indicators on).
3.Press and hold the power button for 2 seconds to turn off the device when it is working. And the indicators on go.
4. The device is set to automatically shut down after 15 minutes. If you need to stop midway during use, press and hold the power button to stop it.

Charging

1. It is recommended to fully charge the product before using it for the first time. It takes about 3 hours to fully charge the battery.
2. Must be only supplied at safety extra-low voltage corresponding to the marking on the product.
3. When charging, the indicators will be on. When the indicators remain on, it indicates that the battery is fully charged.
4. Do not turn on the device to use during charging.

Indicator Description

Indicator	Status	Description
1 indicator	Remains on	Level 1
2 indicators	Remain on	Level 2
3 indicators	Remain on	Level 3
4 indicators	Remain on	Level 4
5 indicators	Remain on	Level 5
5 indicators	Flashing for 10 seconds	Current battery level ≤10%

Charging Indicator	Status	Description
5 indicators	Running lights	Charging
5 indicators	All remain on	Fully charged

5 Maintenance

Cleaning

The product cover cannot be removed.
1. Clean the surface of device with a dlightly damp towel, and then dry it with a soft dcloth.
2. Do not allow water to enter the interior of product. Place and dry it naturally.

❗ If the device will not used for a long time, charge it once every 1 months.

❗ Be sure to turn off the charging cable during maintenance, but do not unplug it by wet hands.

❗ After use, do not place the product in direct sunlight or in areas with high humidity.

❗ The product can be transported by truck, train, ship and aircraft. During transportation,

❗ The product can be transported by truck, train, ship and aircraft, During transportation, the product should be fixed to prevent violent vibration, collision, rolling and falling, and it should be placed upward, handled lightly, and protected against rain.

Disposal

The lithiumion battery used in this product is a valuable resource that can be recycled. Please dispose of it properly when it is used up, and then hand it over to a professional institution that can recycle the rechargeable batteries for disposal.
Steps for removing battery:
• Cut off the connection between the handle and the silicone sleeve with professional tools.
• Loosen the screws of the fixed handle with a screwdriver;
• Loosen the screws at the circuit board;
•Cut the battery leads with scissors;
• Remove the battery.

❗ Users are not allowed to replace batteries on their own. Be sure to remove the battery from the device before disposal. The device must be powered off before removing the battery. The battery should be disposed of in a safe manner.

6 Troubleshooting

This chapter lists the most common problems to the product. If the problems you encounter are not included in the following tables, please call our service hotline or contact the authorized service center in your region.

Fault Description	Possible Cause	Solution
Start-up failure	The internal battery is insufficient	Charge the device
	The device is charging	Use after charging
Charging failure	The charging cable or adapter is not properly connected	Reconnect properly
Sudden stop during operation	The internal battery is insufficient	Charge the device
	The internal motor is blocked due to the massage head is activated, causing the device to stop operating.	Restart the device and adjust using strength
	The charging cable or adapter is not properly connected	Reconnect properly

After not having used for a long time, please do check the product is working properly before use.	
Regular product check	Is there any of the following condition:
	• The charging cable or plug is overheating
	• The charging cable is severely damaged, deformed or cracked
	• There is an abnormal sound or vibration
	• The device does not work properly after turn on
	• There are other abnormalities or faults
	If those problems keep occurring, please stop to use it immediately. Please send it to the local service center for repairing.

Note:
If the fault cannot be eliminated or the product still cannot be operated satisfactorily, contact the aftersales service personnel, and do not disassemble or attempt to repair by yourself.

7 Technical Parameters

Product Name	Philips Massage Gun
Model	PFM7231
Operating Voltage	7.4Vdc
Operating Power	11W
Charging Voltage	5Vdc
Charging Current	2A
Battery Capacity	2500mAh
Product Dimension	345.5x211x59.3mm

8 Environment Protection

Equipment name: Philips Massage Gun, type designation (type): PFM7231

Unit	Restricted substances and its chemical symbols					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (Cr) +6	Polybrominated biphenyls (PBB)	Polybrominated diphenylethers (PBDE)
Outer shell	○	○	○	○	○	○
Circuit board assembly	○	○	○	○	○	○
Metal parts	○	○	○	○	○	○
Rubber parts	○	○	○	○	○	○
Charging cable	○	○	○	○	○	○

Note 1. "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.
Note 2. "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.
Note 3. The "－" indicates that the restricted substance corresponds to the exemption.

9 Service Guideline for Warranty

Warranty and Service

The product is a household appliance with exquisite design and high-quality component. Within two years from the date of purchase, you will receive free warranty service for any damage caused by the manufacturing process or components under normal condition confirmed by our maintenance service.
The warranty service does not include consumable components, transportation fee and door-to-door service. Please show the proof of purchase to the service personnel during maintenance.
You cannot receive free warranty service under the following conditions:
Damage by improper operation, such as improper components connection, improper installation, deprived of manual use, mis-operation.
Negligence and damage because of transportation or other accident.
Maintenance and modification without approval.
Other damage caused by force majeure (such as a natural disaster, abnormal voltage, etc.).
Damage caused by general use outside home (e.g. industrial and commercial use).
Aging, wearing and tearing caused by normal operation of the product without affecting normal operation of the product.
This statement serves as a liability for free maintenance within the specified time limit and conditions, and does not limit the legal rights of consumers.
Please contact our local maintenance service center for any information or difficulties or you can consult through the hotline.

Hong Kong Importer: Century Field International Ltd.
Address: Room 505, 5/F, Nam Wo Hong Building, 148 Wing Lok Street, Sheung Wan, Hong Kong.
Hotline: 852-2188-4987
Service Email: philips.mauage.hk@centuryfield.com
Taiwan Importer: Xander International Corp.
Address: No. 5-2, Section 2, Fenliao Road, Linkou District, New Taipei City, Taiwan
Hotline: 0800-663-600
Service Email: philips.mauager@xander.com.tw

Warranty Card

Product Model		Customer Name	
Seller		Contact Number	
Date of Purchase		Serial Number	
Service Center		Customer Address	
Maintenance Content		Date	Service Personnel

10 Packing List

Main Unit	1x	Massage Head	4x
Charging Cable	1x	User Manual	1x
		Certification	1x