


# WHIRLPOOL 乾衣機快速入門指南

## 操作面板與功能

### 操作說明


**警告**



**火災危險**

沒有任何洗衣機能夠完全清除油污。請勿嘗試烘乾沾染任何類型油污的衣物(包括烹飪油/精油)。內含泡棉、橡膠或塑膠的衣物,必須以曬衣架或使用冷風乾衣行程風乾。未遵守指示可能會導致傷亡或火災。


**警告**



**爆炸危險**

請勿在乾衣機附近放置易燃物或揮發性物質(如汽油)。不可烘乾曾經沾有可燃性物質之物品(即使是已洗滌過)。如不遵照上述指示,可能導致死亡、爆炸或火災。

**警告:** 為了降低火災、觸電或人員受傷的風險,在操作本電器之前,請先閱讀電器使用手冊中的重要安全指示。

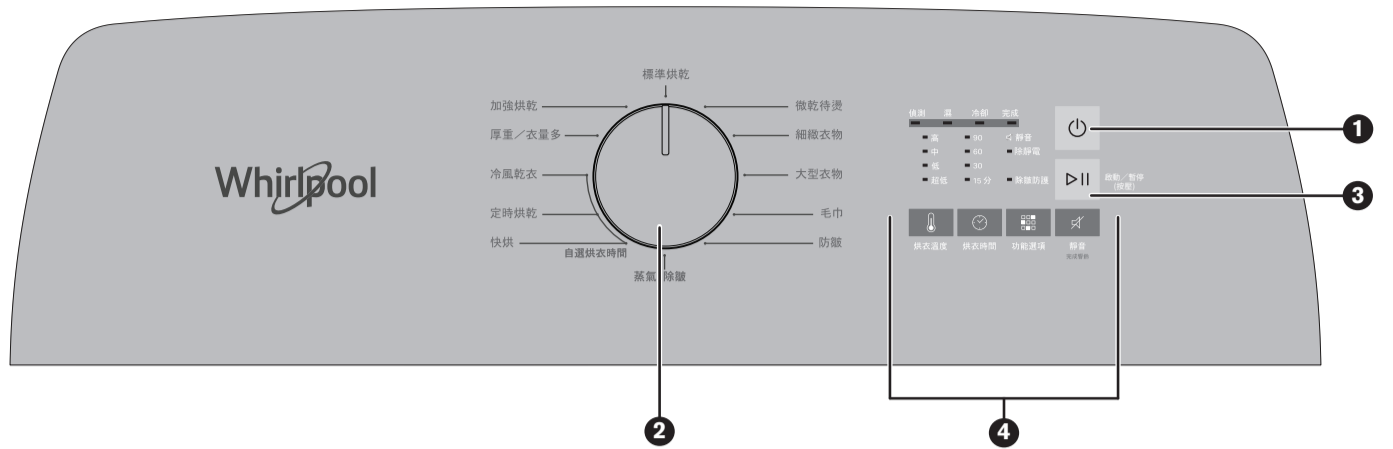

\*不是所有型號都具備所有的功能、行程和選項。不同型號的外觀可能有所不同。

#### 1 電源

按下可開啟/關閉乾衣機或停止/取消行程。

#### 2 行程旋鈕

轉動旋鈕,選擇所需的行程。

**附註:** 乾衣機具有兩種行程:自動感測烘乾行程、定時烘乾行程。

##### 自動感測乾衣行程:

使用偵測行程可使衣料獲得最佳的保護並節省能源。乾衣機會偵測衣物濕度或空氣溫度,並於衣物達到所選的烘乾程度時停止運作。請注意,這些行程的時間無法調整。

##### 定時烘衣行程:

在這些行程中,您可以自訂烘乾時間。時間選項範圍為15、30、60和90分鐘。如需要所有行程的完整清單,請參閱行程指南文件。

#### 3 啟動/暫停

按住啟動/暫停按鈕1秒,所有狀態指示燈都亮起時即可放開,以啟動行程。在行程期間按下,可暫停行程。

#### 4 行程設定調整 (並非所有行程都適用)

##### 烘衣溫度

按下可修改行程的可用溫度。(超低、低、中及高)

##### 烘衣時間 (僅限冷風乾衣、定時烘乾和快烘)

按下後可在15、30、60和90分鐘間選擇定時乾衣行程的時間。

##### 功能選項

按下可為各個行程新增或移除功能選項。按一下可啟用除皺防護,按兩下可啟用除靜電,按三下則啟用兩者。

##### 除皺防護

如果無法立即取出衣物,請啟用此選項,以增加150分鐘的間歇性翻滾,減少衣物在行程完成後產生皺折。

##### 除靜電

此選項有助於減少在烘乾過程中形成靜電吸附。在啟用後,此選項會在行程即將結束時進行蒸氣翻滾,以減少靜電。


##### 靜音完成響鈴

使用此選項可開啟或關閉烘乾行程的完成響鈴。

#### 步驟1.清潔棉絮濾網




#### 步驟2.放入衣物

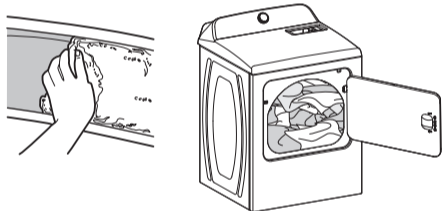

#### 步驟3.按下電源按鈕



#### 步驟4.選擇衣物所需的行程\*

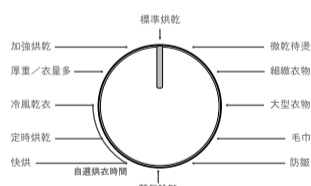

#### 步驟5.視需求調整行程的設定與選項

| 偵測   | 濕     | 冷卻     | 完成 |
|------|-------|--------|----|
| ■ 高  | ■ 90  | ■ 靜音   |    |
| ■ 中  | ■ 60  | ■ 除靜電  |    |
| ■ 低  | ■ 30  |        |    |
| ■ 超低 | ■ 15分 | ■ 除皺防護 |    |




#### 步驟6.長壓啟動按鈕後再放開



啟動/暫停 (按壓)

**附註:** 必須按住啟動按鈕1秒才能啟動行程。在狀態指示燈亮起後,即可放開啟動按鈕。

### 選擇適合的行程

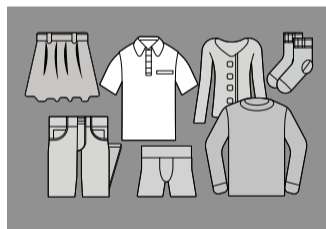

在[www.whirlpool.com.tw](http://www.whirlpool.com.tw)可找到線上的乾衣機行程指南。該文件可協助您了解各種衣物類型應選擇的行程及預設行程選項。例如,棉質、亞麻及混合衣物,建議使用溫度中等的標準行程。

詳細的安裝說明、維護資訊、冬季存放以及運輸提示,請參閱機器隨附的「使用手冊」。

### 特殊行程

#### 防皺:








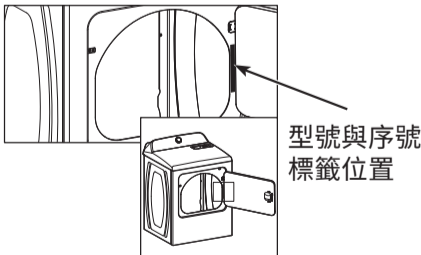
此行程有助於消除或減少皺褶,適合免燙衣物。此乾衣機行程使用低溫和冷卻期以防止衣物起皺。

#### 蒸氣除皺:

此行程可減少衣物的皺褶和異味。此行程可撫平衣物皺褶,適合當衣物會放在乾衣機中時間過長時使用。

### 協助或服務及其他資訊


有關以下資訊:行程指南、保固、詳細產品尺寸或完整使用和安裝指示,請造訪 [www.whirlpool.com.tw](http://www.whirlpool.com.tw) 這可節省上門維修費用。

| 註冊產品  | 安排維修   | 操作方式和常見問題   | 手冊和下載   | 加入維修計畫  | 零件  | 配件  |
|---|--|---|---|---|---|---|
|                    |  |  |    |  |  |  |
|  <p>型號與序號標籤位置</p> |  |   | <p>需要諮詢客服或有其他疑問時,請撥打免費付費電話 0800-258-558 若有任何疑問時,可以 e-mail 至: <a href="mailto:service_tw@whirlpool.com">service_tw@whirlpool.com</a></p> |   |   |   |

\*不是所有型號都具備所有的行程、設定或選項。

# QUICK START GUIDE WHIRLPOOL DRYER

## CONTROL PANEL AND FEATURES

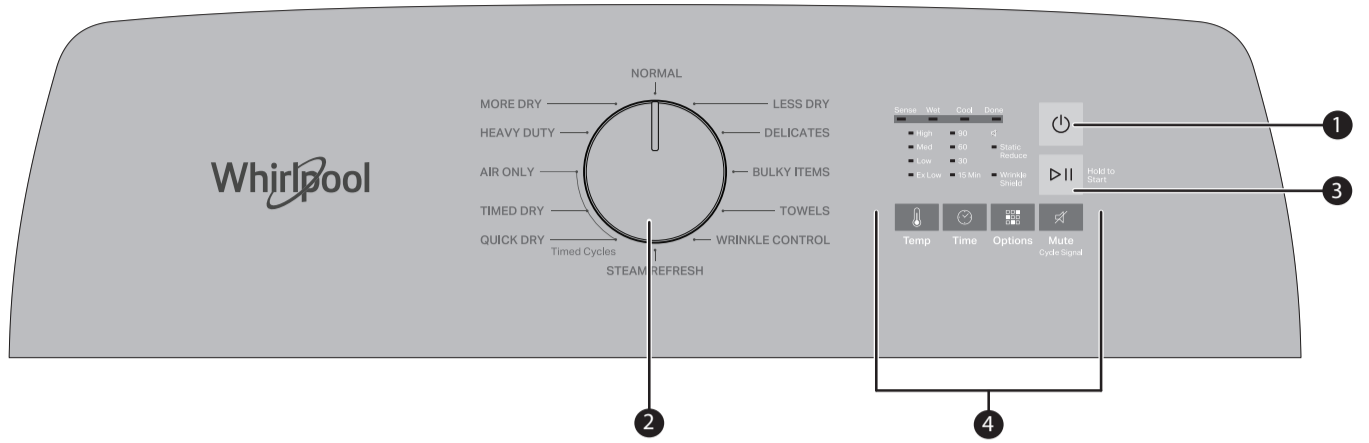

\*Not all features, cycles, and options are available on all models. Appearance may vary.

### 1 POWER

Press to turn on/off or to stop/cancel a cycle.

### 2 CYCLE KNOB

Turn knob to select desired cycle.

**NOTE:** Your dryer comes with two types of cycles - Sensor drying cycles and Timed drying cycles.

#### SENSOR DRYING CYCLES:

Use Sensor Cycles for better fabric care and energy savings. The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level. Note that you cannot adjust the time with these cycles.

#### TIMED DRYING CYCLES:

In these cycles, you can specify the drying time. Time options available are 15, 30, 60, and 90 minutes. For a complete list of all cycles, please refer to the cycle guide document.

### 3 START/PAUSE

Press and hold the Start/Pause button for 1 second until all status lights are illuminated, then release to start cycle. Press during a cycle to pause cycle.

### 4 CYCLE MODIFIERS (Not all modifiers are available on all cycles)

#### TEMP

Press to modify the cycle's available temperature. (Extra Low, Low, Medium, and High)

#### TIME (Air Only, Timed Dry, and Quick Dry Only)

Press to modify the time for the timed cycle between 15, 30, 60, and 90 minutes.

#### OPTIONS

Press to add or remove options for each cycle. Press once to activate Wrinkle Shield, twice to activate Static Reduce and three times for both.

#### WRINKLE SHIELD

If you will be unable to remove a load immediately, activate this option to add 150 minutes of periodic tumbling to help reduce wrinkles from forming after the cycle completes.

#### STATIC REDUCE

This option can help reduce the build up of static cling formed during the drying process. When activated, this option will tumble with steam towards the end of the cycle to reduce static.

#### MUTE CYCLE SIGNAL

Use this option to turn the end of drying cycle signal on or off.

## OPERATING INSTRUCTIONS

### ⚠ WARNING



#### Fire Hazard

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.

Failure to follow these instructions can result in death or fire.

### ⚠ WARNING



#### Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from dryer.


Do not dry anything that has ever had anything flammable on it (even after washing).

Failure to follow these instructions can result in death, explosion, or fire.

**WARNING:** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

#### STEP 1. CLEAN LINT SCREEN


#### STEP 2. LOAD CLOTHES

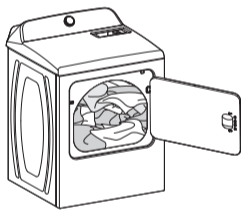

#### STEP 3. PRESS POWER BUTTON



#### STEP 4. SELECT THE DESIRED CYCLE FOR YOUR LOAD\*

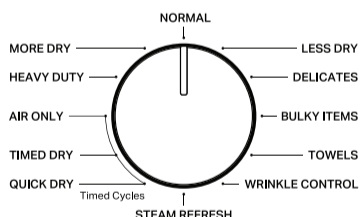

#### STEP 5. ADJUST CYCLE SETTINGS AND OPTIONS, IF DESIRED

| Sense  | Wet    | Cool | Done           |
|--------|--------|------|----------------|
| High   | 90     |      | Static Reduce  |
| Med    | 60     |      | Wrinkle Shield |
| Low    | 30     |      |                |
| Ex Low | 15 Min |      |                |




#### STEP 6. PRESS, HOLD, AND RELEASE START BUTTON



Hold to Start

**NOTE:** Start button must be held for 1 second to start cycle. Once the status lights are illuminated, release the start button.

## CHOOSING THE RIGHT CYCLE

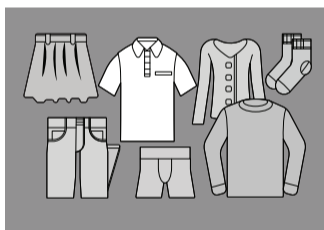

A cycle guide for your dryer can be found online at [www.whirlpool.com.tw](http://www.whirlpool.com.tw). The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the NORMAL cycle with Medium temperature for cottons, linens and mixed-garment loads.

## SPECIALITY CYCLE

#### WRINKLE CONTROL:

This cycle is designed to help remove or reduce wrinkles, this cycle is great for permanent press clothing. The dryer cycle uses low heat and a cool down period to keep clothes from wrinkling or creasing.

#### STEAM REFRESH:

This cycle is best for reducing wrinkles and odors from dry items. This cycle is great to refresh a wrinkled garment or when a load was left in the dryer too long.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the "Owner's Manual" included with your machine.


## ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

For information on any of the following items, a full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit [www.whirlpool.com.tw](http://www.whirlpool.com.tw). This may save you the cost of a service call.

| Register Product                              | Schedule Service | How To's & FAQ | Manuals & Downloads   | Add Service Plan | Parts | Accessories |
|---|------------------|----------------|---|------------------|-------|-------------|
|   |                  |                |   |                  |       |             |
| <p>Model &amp; Serial Number Tag Location</p> |                  |                | <p>To speak with a customer service representative or if you have additional questions, call us toll free at <b>0800-258-558</b> or email us at <a href="mailto:service_tw@whirlpool.com">service_tw@whirlpool.com</a>.</p> |                  |       |             |

\*Not all cycles, settings or options are available with all models.

Whirlpool

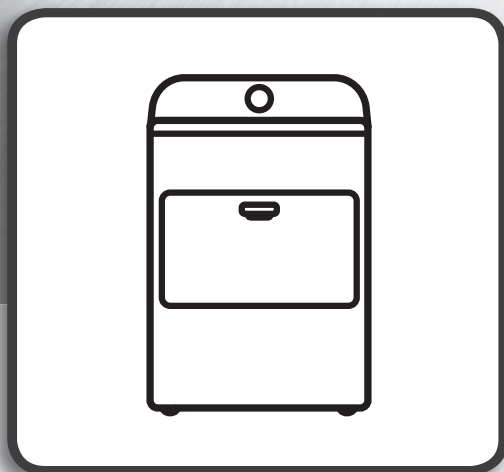

產品安全指引、使用說明及安裝指南  
Health & Safety, Use & Care and Installation guide

系列名稱 Series Name: **Essential** Dry

產品型號 Model: 8TWGD5010PW  
8TWGD5050PW



[www.whirlpool.com.tw](http://www.whirlpool.com.tw)

# 瓦斯型乾衣機使用手冊

## GAS DRYER OWNER'S MANUAL

### 目錄 / Table of Contents

|                        |    |   |    |
|------------------------|----|---|----|
| 乾衣機安全須知.....           | 3  | DRYER SAFETY.....                               | 23 |
| 乾衣機安全須知.....           | 3  | Dryer Safety.....                               | 23 |
| 乾衣機維護和保養.....          | 6  | DRYER MAINTENANCE AND CARE.....                 | 26 |
| 清潔乾衣機擺放場所.....         | 6  | Cleaning the Dryer Location.....                | 26 |
| 乾衣機內部清潔.....           | 6  | Cleaning the Dryer Interior.....                | 26 |
| 清潔累積的棉絮.....           | 6  | Removing Accumulated Lint.....                  | 26 |
| 清潔棉絮濾網.....            | 6  | Cleaning the Lint Screen.....                   | 26 |
| 更改滾筒燈(特定機型).....       | 7  | Changing the Drum Light (on some models).....   | 27 |
| 檢查排風系統以確保良好氣流.....     | 7  | Check Your Vent System for Good Airflow.....    | 27 |
| 維護良好之排風.....           | 7  | Maintain Good Airflow.....                      | 27 |
| 不使用、存放與移動保養.....       | 8  | Nonuse, Storage, and Moving Care.....           | 27 |
| 蒸氣機型的特殊說明.....         | 8  | Special Instructions for Steam Models.....      | 28 |
| 安裝需求.....              | 8  | INSTALLATION REQUIREMENTS.....                  | 28 |
| 工具與零件.....             | 8  | Tools and Parts.....                            | 28 |
| 位置需求.....              | 10 | Location Requirements.....                      | 29 |
| 連接瓦斯型乾衣機電源—美國和加拿大..... | 11 | Gas Dryer Power Hookup – U.S.A. and Canada..... | 30 |
| 瓦斯供應要求.....            | 12 | Gas Supply Requirements.....                    | 31 |
| 安裝說明.....              | 13 | INSTALLATION INSTRUCTIONS.....                  | 32 |
| 安裝水平調整腳.....           | 13 | Install Leveling Legs.....                      | 32 |
| 瓦斯連接—美國和加拿大.....       | 14 | Make Gas Connection – U.S.A. and Canada.....    | 33 |
| 排風要求.....              | 15 | Venting Requirements.....                       | 34 |
| 規劃排風系統.....            | 16 | Plan Vent System.....                           | 34 |
| 安裝排風系統.....            | 17 | Install Vent System.....                        | 36 |
| 連接進水軟管.....            | 17 | Connect Inlet Hoses.....                        | 36 |
| 連接排風管.....             | 19 | Connect Vent.....                               | 37 |
| 調整水平.....              | 19 | Level Dryer.....                                | 37 |
| 完成安裝檢核表.....           | 20 | Complete Installation Checklist.....            | 38 |
| 乾衣機行程指南.....           | 21 | Dryer Cycle Guide.....                          | 39 |

# 乾衣機安全須知

## 您與他人的安全都非常重要。

本手冊及產品外部都會提供多項重要安全資訊，請務必詳閱並遵守所有的安全資訊。



這是安全警告標誌。

此標誌提醒您，本產品可能有導致人員傷亡的潛在危險。

所有安全警告標誌及「危險」或「警告」字樣後都會隨附相關安全資訊，這些字樣代表：

 **危險**

若未立即遵守指示，可能會導致死亡或重傷。

 **警告**

若未遵守指示，可能會導致死亡或重傷。

安全資訊將會指出潛在危險、告知降低受傷機率的方法，以及提醒您不遵守指示的後果。

## 重要安全指示

**警告：**請遵守以下基本注意事項，以減低使用電器時發生火災、觸電或人員受傷的風險，包括：

- 在使用電器前，請務必先詳細閱讀所有指示。
- 不可烘乾曾經使用汽油、乾洗溶劑或其他易燃或易爆炸的清潔劑清洗、浸過或受其他污染的物品，因為這些物質可能會揮發出引起火災或爆炸的氣體。
- 請勿讓兒童在電器上或電器內玩耍。若在兒童週遭使用電器時，請務必密切監督兒童。
- 在停用或棄置電器前，請先拆除乾衣機門。
- 滾筒在運轉時，請勿將手伸入電器內。
- 請勿將本電器安裝或存放在露天位置。
- 請勿擅自改動控制鈕。
- 除本文或已發行之使用者維修說明已具體指明維修方法，且您已熟悉該方法，並具備執行維修之技能外，請勿自行修理、更換電器的任何零件，或嘗試進行任何維修。
- 除非製造商建議，否則請勿使用衣物柔軟精或產品來消除靜電。
- 請勿使用高溫烘乾含有泡棉橡膠或類似的橡膠材質衣物。
- 每次使用之前或之後要清潔棉絮濾網。
- 請防止在排風口的周圍區域堆積棉絮、灰塵和污垢。
- 應由合格的維修人員定期清潔電器內部和排風管道。
- 不得將沾有烹飪用油的東西放入乾衣機內。沾有烹飪油的東西可能促成化學反應而引起火災。乾衣機行程最後一個階段不作加熱(冷卻階段)，以降低受污染衣物的火災風險。除非迅速取出所有衣物及攤開散熱，否則請避免在烘乾行程結束前停止乾衣機運作。
- 請勿使用非製造商建議的替換零件(例如在家使用3D列印機製作的零件)。
- 接地之要求與安裝，請參閱安裝說明。

請妥善保存說明書



## 警告一 « 火災風險 »

- 乾衣機安裝作業必須由合格的安裝人員執行。
- 請遵照製造商指示及當地法規(CNS)安裝乾衣機。
- 請勿在乾衣機上安裝彈性塑膠通風材料或彈性金屬(箔型)排風管道。  
如果安裝彈性金屬排風管,則必須使用經電器製造商確認適合與乾衣機搭配使用的特定類型。  
彈性排風材料會塌陷、容易壓壞,且會累積棉絮。  
上述情況會阻礙乾衣機的氣流及提高火災風險。
- 為降低人員重傷或死亡之風險,請遵循所有安裝指示。
- 請務必妥善保存此指示。

### 警告

#### 火災危險

- 未確實遵守安全警告,可能會導致重傷、死亡或財產損失。
- 請勿在排風管中安裝加強風扇。
- 請依據乾衣機製造商之安裝說明安裝所有的乾衣機。

### 警告

#### 火災或爆炸危險

- 未確實遵守安全警告,可能會導致重傷、死亡或財產損失。
- 請勿在本電器或任何其他電器的附近存放或使用汽油,或其他易燃蒸氣和液體。
  - 聞到瓦斯的味道時怎麼辦:
    - 請勿試圖點亮任何電器。
    - 請勿觸摸任何電氣開關、請勿在建築物中使用電話(手機)。
    - 請疏散房間、建築物或區域中的所有人員。
    - 立即向鄰居借用電話聯絡瓦斯供應商。並遵循瓦斯供應商的指示。
    - 如果無法立即聯繫瓦斯供應商,請馬上致電當地消防部門。
  - 必須由合格的安裝人員、服務機構或瓦斯供應商進行安裝和維修。

**警告：**瓦斯洩漏不一定能透過氣味察覺。

瓦斯供應商建議使用經 UL、CSA 或當地政府 (CNS) 認可的瓦斯偵測器。

如需要更多資訊，請聯絡瓦斯供應商。

如果察覺瓦斯洩漏時，請遵循「聞到瓦斯的味時怎麼辦」的指示。

**重要事項：**瓦斯安裝必須符合當地規範 (CNS)，若無當地規範時，則需符合國家燃料氣規範

ANSI Z223.1/NFPA 54 或國家天然氣和桶裝瓦斯安裝規範 CSA B149.1。

乾衣機必須依據當地規範進行接地，若無當地規範時，則需依據國家電氣規範

ANSI/NFPA 70 或加拿大電氣規範第 1 部分 CSA C22.1 接地。

下列安裝說明適用於麻薩諸塞州：

- 必須由麻薩諸塞州認證或核發執照的合格或有執照承包商、管工或天然氣安裝業者執行安裝和維修。
- 可使用的關斷裝置：應列出安裝使用的瓦斯活栓和球閥。
- 當使用彈性瓦斯接頭時，不得超過 4 英尺 (121.9 cm)。


### **重要安全指示**


若要棄置或收存舊的乾衣機，請拆下機門。

**請妥善保存說明書**

# 乾衣機維護和保養

## 清潔乾衣機擺放場所

**警告**



**爆炸危險**

請勿在乾衣機附近放置易燃物或揮發性物質(如汽油)。  
不可烘乾曾經沾有可燃性物質之物品(即使是已洗滌過)。  
安裝在車庫時,乾衣機至少應高於地面 18 in (460 mm)。  
未遵守指示可能會導致死亡、爆炸或火災。

保持乾衣機周遭清潔,並清除可能阻礙乾衣機正常運轉時氣流通過的物品。包含乾衣機前方堆積的衣物。

## 乾衣機內部清潔

### 清潔乾衣機的內桶:

- 1.使用低濃度混合的中性洗碗精或非易燃清潔劑和溫水,以軟布擦拭。
  - 以濕海棉或毛巾沖洗乾淨。
  - 放入乾淨的衣物或毛巾,啟動乾衣機烘乾內桶。
- 2.使用超細纖維布和裝有溫水的噴灑瓶清潔滾筒,再以另一條超細纖維的毛巾擦乾。

**附註:**含有不穩定染料的衣物(例如藍色牛仔褲或顏色鮮豔的棉質衣物),可能會導致乾衣機內部的後方變色。這些汙漬對乾衣機無害,且不會弄髒其他衣物。請將含有不穩定染料的衣物反面烘乾,以避免染料轉移。

## 清除累積的棉絮

### 乾衣機機體內側:

每2年(或更頻繁)清潔一次,視乾衣機使用頻率而定。清潔作業應交由合格的設備維修人員或通風系統清潔人員執行。

### 排風管:

每2年(或更頻繁)清潔一次,視乾衣機使用頻率而定。


## 清潔棉絮濾網

### 每一次烘衣後進行清潔:

棉絮濾網位於機門開口或乾衣機頂部,視型號而定。濾網阻塞時將會增加烘衣的時間。

### 清潔:

- 1.拆下棉絮濾網。若有必要時,請按壓卡榫,以鬆開並打開棉絮濾網。用手指將濾網上的棉絮捲起。請勿以沖洗或清洗濾網的方式去除棉絮,潮濕的棉絮將很難去除。

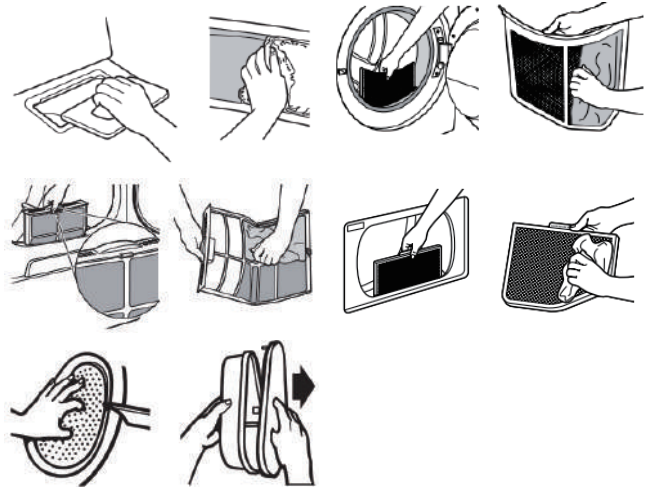

- 2.將濾網重新裝回定位。

### 重要事項:

- 棉絮濾網鬆動、破損、堵塞或遺失時,請勿使用乾衣機。否則會導致過熱、損壞乾衣機及衣物。
- 如果在清除過程中,棉絮從濾網掉入乾衣機時,請檢查排風管以清除棉絮。請參閱安裝說明中的「通風要求」。
- 視需求清潔安裝棉絮濾網的位置。使用吸塵器,小心清除堆積在棉絮濾網外的棉絮。


### 必要之清潔:

洗衣精或衣物柔軟精殘留物會堆積在棉絮濾網上,進而導致烘衣時間增長,或造成衣物未完全烘乾時乾衣機就停止。若濾網還在乾衣機中卻出現棉絮掉落的情形時,表示濾網可能已經堵塞。每6個月應使用尼龍刷清潔濾網,如被殘留洗衣精堵塞,則應更頻繁清洗。

### 清洗:

- 1.用手指將濾網上的棉絮捲起。
- 2.用熱水將濾網兩面弄濕。


- 3.用熱水和清潔劑將尼龍刷弄濕，再用刷子將濾網殘存的棉絮清除。

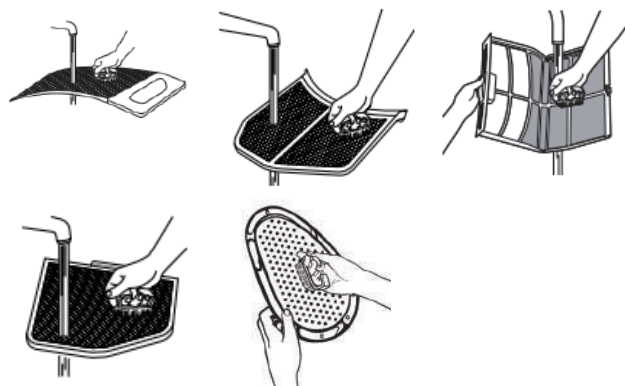

- 4.用熱水沖洗濾網。
- 5.用乾淨的毛巾將棉絮濾網徹底擦乾。再將濾網裝回乾衣機上。

## 更改滾筒燈（特定機型）

- 1.拔下乾衣機插頭或切斷電源。
- 2.打開乾衣機門。找到乾衣機後壁的燈泡蓋。使用 1/4" (6.5 mm) 螺絲起子或套筒扳手，卸下蓋子右下角的螺絲。拆下蓋子。

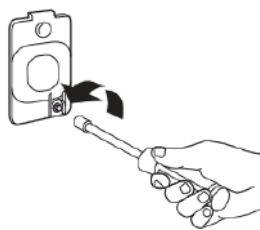

- 3.逆時針轉動燈泡。更換燈泡（僅限使用 10W 電器燈泡）。裝回蓋子，使用螺絲固定。
- 4.將乾衣機的插頭插上或接回電源。

## 檢查排風系統以確保良好氣流

**警告**



**火災危險**

- 請使用重金屬排風管。
- 請勿使用塑膠排風管。
- 請勿使用金屬箔排風管。
- 未遵守指示可能會導致傷亡或火災。

### 良好的排風


除熱之外，乾衣機需要良好的排風才能有效率地烘乾衣物。適度的排風，將能縮短烘乾時間及改善節能效果。請參閱「安裝指示」。

連接至乾衣機之排風系統是提供良好氣流的重要角色。排風管堵塞、受到擠壓或排風管安裝不當，將會降低氣流和排衣機的性能。

不論如何安裝乾衣機，因排風不當而造成的故障不在保固範圍內，都將由客戶支付費用。需要清潔或修理排風管時，請聯絡排風管專業人士。

### 維護良好之排風

- 每次放入衣物烘乾之前，應先清潔棉絮濾網。
- 以直徑 4" (102mm) 的重型堅固排風管材料取代塑膠或鋁箔排風管。
- 應盡可能縮短排風管之長度。
- 請勿在排風系統中使用超過四個 90° 彎管，因為每一個彎管和弧度都會阻礙氣流。

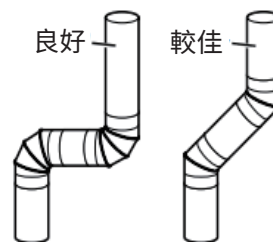

- 清除排氣罩上的棉絮和碎屑。
- 至少每 2 年清除一次整個排風系統內的棉絮。在完成清潔後，務必依據安裝說明進行最終的產品檢查。
- 清空乾衣機前方堆放的物品。

## 不使用、存放與移動保養

### 不使用或存放之保養

如果即將出門渡假或長時間不使用乾衣機，您應該：


1. 拔下乾衣機插頭或切斷電源。
2. 清潔棉絮濾網。參閱「清潔棉絮濾網」章節。
3. 關閉供應瓦斯管線中的關斷閥。
4. 僅限蒸氣機型：關閉乾衣機的水源。可避免您不在時（由於水壓驟升）淹水。

### 移動保養—瓦斯型

1. 拔除電源線插頭。
2. 關閉供應瓦斯管線中的關斷閥。
3. 將供應瓦斯管線中斷連接，並拆下連接至乾衣機管的配件。
4. 封住供應瓦斯管線。
5. 僅限蒸氣機型：關閉水龍頭。將進水軟管與水龍頭中斷連接，再排空軟管。個別運輸軟管。
6. 確認乾衣機水平調整腳仍然裝在乾衣機上。
7. 使用膠布將乾衣機門確實貼住。
8. 如為有底座飾條的機型，請在移動乾衣機前，先拆下底座飾條。如需詳細資訊，請參閱「安裝和拆卸底座飾條（特定機型）」。

## 再次使用乾衣機時：

**警告**



**觸電危險**

插入接地型 3 孔插座。  
請勿移除接地端子。  
請勿使用轉接頭。  
請勿使用延長線。  
未遵守指示可能會導致死亡、火災或觸電危險。

1. 沖洗水管。將進水軟管連接至水龍頭。打開水龍頭。
2. 按照安裝說明，將乾衣機插頭插入或接回電源。

## 重新安裝乾衣機

按照安裝指示放置、調整水平及連接乾衣機。

## 蒸氣機型的特殊說明

請將乾衣機安裝與存放在不會結冰的位置。因為有些許的水可能會留存在水管內，結冰會損害乾衣機。在寒冷的天候下收納或搬動乾衣機，請先做好防凍措施。

### 進水軟管

請在使用 5 年後更換進水軟管和軟管濾網，以降低軟管損壞的風險。應定期檢查水管，如發現有脹起、扭結、割傷、磨損或漏水情況時請予以更換。

在更換進水軟管時，請記錄更換的日期。

### 針對乾衣機採取防凍措施：

1. 拔下乾衣機插頭或切斷電源。
2. 關閉水龍頭。
3. 將進水軟管與水龍頭中斷連接，再排水。


## 安裝需求

### 工具與零件


**附註：**請遵照製造商指示及當地法規安裝乾衣機。

安裝前請備齊所需工具及零件。請閱讀及按照此處列載之工具隨附的說明。


## 安裝時所需的所有工具：

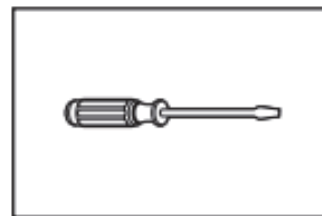


一字螺絲起子

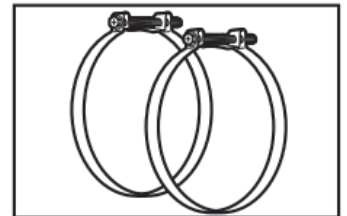


排風管夾

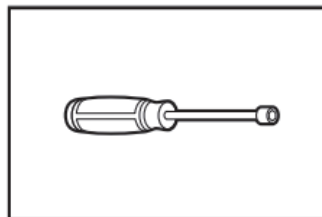


1/4" 螺帽起子

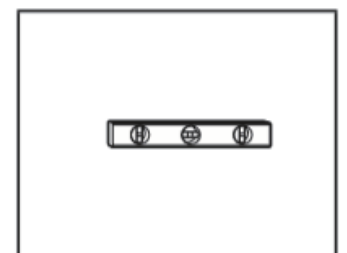


水平儀

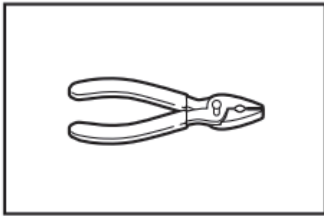


鉗子或鯉魚鉗

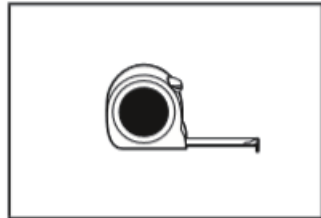


捲尺

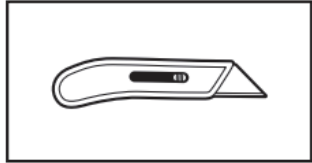


多功能小刀

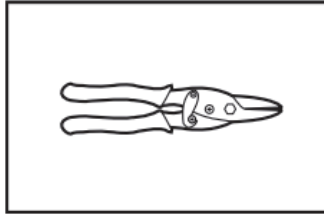


鐵皮剪刀(新排風管安裝)

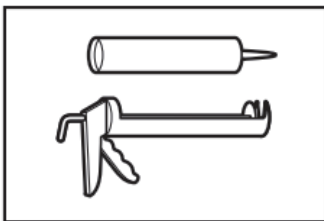

填縫槍及填縫劑  
(新通風管安裝)

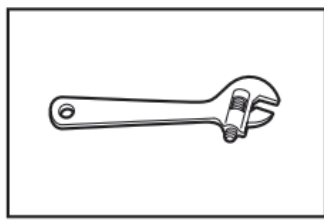

開口達 1"(25 mm) 的活動扳手  
或六角套筒扳手

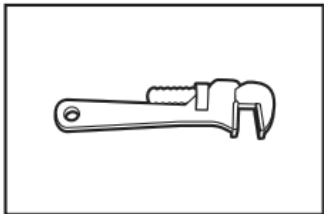


8"(203 mm) 或 10"(254 mm)  
管鉗




對液化石油氣有抵抗力的管  
接頭填料

### 所需的其他工具 (特定機型) :

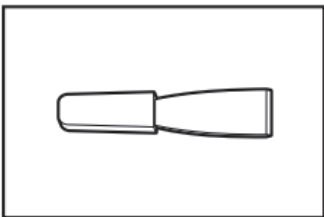

油漆刮刀

### 隨附零件 (所有機型) :

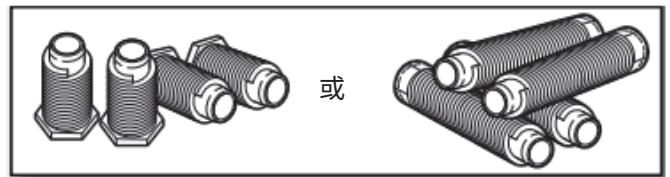


水平調整腳(4) (腳的長度與外觀可能會因型號而異)  
零件包位於乾衣機的滾筒中。請檢查是否包含所有零件。  
**附註:** 如果使用底座或堆疊套件進行安裝時, 請勿使用乾衣  
機隨附的水平調整腳。


### 所需的零件 (蒸氣機型) :




Y型接頭

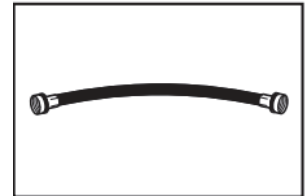

2'(0.6 m) 進水軟管

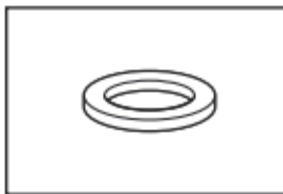

橡膠墊圈

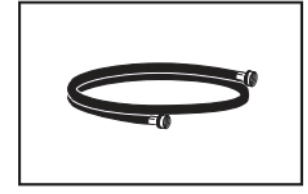

5'(1.52 m) 進水軟管


### 所需的零件 (乾衣機未隨附) :


可能需要其他零件, 視安裝方式而定。確認當地規範。檢查  
現有的電源和通風。在購買零件前, 請先參閱「電氣要求」和  
「通風要求」。  
活動房屋安裝所需的金屬排氣系統硬體, 請向乾衣機經銷商  
購買。如需更多資訊, 請參閱快速入門指南, 以取得客服聯絡  
資訊。

### 可用配件 :

我們提供該型號適用之配件和替換零件。  
如需訂購和聯絡資訊, 請參考快速入門指南。

## 位置需求

**警告**



**爆炸危險**

請勿在乾衣機附近放置易燃物或揮發性物質(如汽油)。  
不可烘乾曾經沾有可燃性物質之物品(即使是已洗滌過)。  
安裝在車庫時,乾衣機至少應高於地面 18 in (460 mm)。  
未遵守指示可能會導致死亡、爆炸或火災。

查閱法規需求。某些法規限制或不允許將乾衣機安裝於車庫、壁櫥、活動房屋或寢室內。請聯絡當地建築物稽查人員。

### 您會需要:


- 允許安裝適當排風的位置。請參閱「排風要求」。
- 瓦斯型乾衣機使用之 15 A 或 20 A 的獨立電路。
- 距離乾衣機任一側 2 ft (610 mm) 以內的接地電源插座。請參閱「連接瓦斯型乾衣機電源」一節中的「電源要求」。
- 可支撐乾衣機和總重量(乾衣機和衣物) 200 lbs (90.7 kg) 的堅固地板。同時應考量配套電器的合併重量。
- 整台乾衣機應置於水平地面,斜度不得大於 1" (25 mm)。如果斜度大於 1" (25 mm) 時,請安裝延伸乾衣機腳座的套件。若未保持水平,衣物可能無法妥善翻滾,且自動感應行程可能無法正確運作。不建議安裝在地毯上。
- 若安裝於車庫內,請將乾衣機放置在高於地面 18" (460 mm) 的位置。若使用底座,需要距離乾衣機底部 18" (460 mm)。
- **僅限蒸氣機型:** 距離進水閥 4 ft (1.2 m) 內的冷水水龍頭,水壓為 20–100 psi (137.9–689.6 kPa)。您可以使用「所需的零件」中的必要零件,使用洗衣機的供水。
- 請勿將乾衣機安裝或存放在會受到水或天氣影響的區域。

**重要事項:** 請勿在低於 45°F (7°C) 的溫度下操作乾衣機。低溫可能使乾衣機於自動感應行程結束後無法關閉,進而延長烘衣時間。

### 安裝間隙:

針對各項配置,請保留足夠的安裝和維修空間,預留搭配使用之設備的位置,並與牆壁、門板與地板模件之間留有間隙。必須預留可讓機門完全開啟的空間。在乾衣機之各側保留間距以減少噪音傳遞。如果使用櫃門,則需在上下方設置空氣開口。可以使用具有等同於通風口功能的百葉門。

### 嵌入區域或櫃體的間距

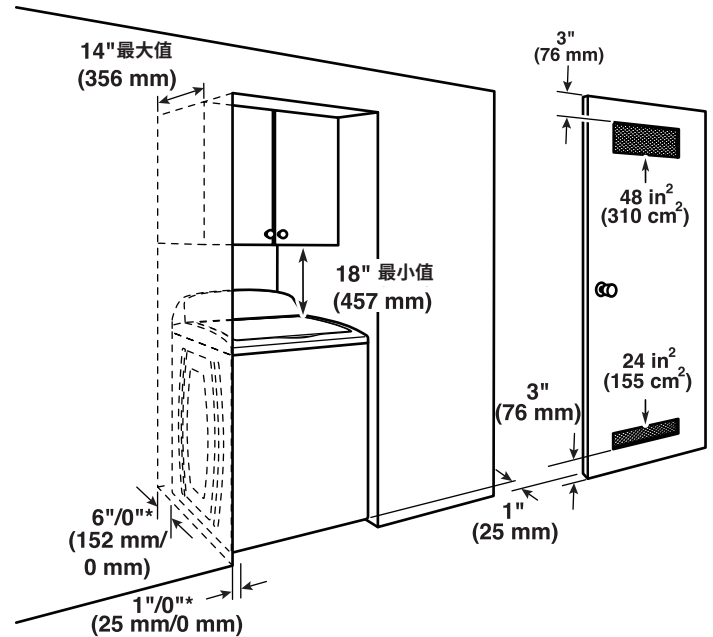


\*建議/最小間距

**附註:** 切勿將其他的燃油/燃氣式電器與乾衣機安裝在同一個櫃體中。

所有尺寸均顯示建議及最小間距。

- 請保留額外的間距,以利安裝與維修作業。
- 牆壁、門和地板模件可能需保留額外的間距。
- 建議在乾衣機各側額外保留 1" (25 mm) 間距,以減少噪音傳遞。
- 若是安裝於帶門的壁櫥,至少需於門的上方及下方保留通風口。可採用留有相同通風口的百葉門。
- 也請考量與鄰近設備的間距。

## 自訂台下安裝：

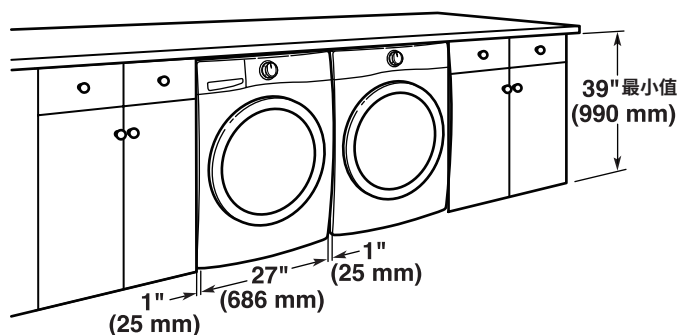

## 最小安裝間距(僅限乾衣機)：

|     | 前方               | 兩側            | 後方           |                        |
|-----|------------------|---------------|--------------|------------------------|
| 嵌入式 | NA               | 0"<br>(0 mm)  | 0"<br>(0 mm) | 距離櫃子/架子<br>18"(457 mm) |
| 櫃體  | 最小 1"<br>(25 mm) | 0"<br>(0 mm)  | 0"<br>(0 mm) | 距離櫃子/架子<br>18"(457 mm) |
| 台下  | NA               | 1"<br>(25 mm) | 0"<br>(0 mm) | 0"<br>(0 mm)           |

僅直背通風允許 0"(0 mm) 的後間距。  
如為蒸氣機型，則進水軟管不得扭結。

## 活動房屋—額外安裝需求

此乾衣機可安裝於活動房屋。安裝方式必須符合《預建房屋結構與安全標準》Title 24 CFR, Part 3280 (前身為《活動房屋結構與安全聯邦標準》Title 24, HUD, Part 280) 或活動房屋標準 CAN/CSAZ240 MH。

### 移動房屋安裝需求：

- 金屬排風系統硬體，可向經銷商購買。
- 活動房屋安裝固定套件。
- 活動房屋必須擁有將外部空氣導入乾衣機的特殊設備。開口(例如附近的窗戶)應至少為乾衣機排氣口的兩倍。

## 連接瓦斯型乾衣機電源—美國和加拿大

### 電源要求：

### 警告



### 觸電危險

- 插入接地型 3 孔插座。
- 請勿移除接地端子。
- 請勿使用轉接頭。
- 請勿使用延長線。
- 未遵守指示可能會導致死亡、火災或觸電危險。

需要 120 V、60 Hz、僅 AC、15 A 或 20 A，設有保險絲的電源。建議使用延時保險絲或斷路器。同時建議設置本乾衣機專用的獨立電路。請勿使用延長線。

### 接地指示

#### 接地與透過電線連接的電器：


本電器必須接地。出現故障或損壞時，接地可為電流提供阻力最小的路徑，減低觸電風險。本電器配備的電源線含設備接地導體和接地插頭。該插頭須插入符合當地所有法規及條例而安裝的接地插座。


#### 警告：

不當連接設備接地導體會導致觸電。若無法確定本乾衣機是否已正確接地，請諮詢合格的電氣技師或維修人員。請勿修改本設備隨附的插頭。如果插頭與插座不符，須請合格的電氣技師安裝合適的插座。

請妥善保存說明書

## 瓦斯供應要求:

 **警告**



**爆炸危險**

使用新的 CSA International 認可之瓦斯管線。  
安裝關斷閥。  
鎖緊所有瓦斯連接。  
如果連接至 LP, 請讓合格人員確保氣體壓力不超過 13" (33cm) 水柱。  
合格人員包括: 有執照的供暖人員、瓦斯公司授權人員、授權服務人員。  
未遵守指示可能會導致死亡、爆炸或火災。

### 瓦斯類型

#### 天然氣:

本乾衣機配備天然氣使用。其通過 UL 認證，經過妥當轉換後可使用液化石油氣。

- 乾衣機必須具有適合居家使用之瓦斯類型的正確燃燒器。燃燒器資訊列在位於乾衣機門井的銘牌上。如果此資訊與可用的瓦斯類型不一致時，請聯絡經銷商或參考快速入門指南中的聯絡資訊。

#### 液化石油氣轉換:

**重要事項:** 必須由合格的技術人員進行轉換。

在未諮詢瓦斯公司的情況下，不應讓電器搭配使用與型號/序號銘牌上指定之瓦斯不同的瓦斯。

## 瓦斯管線

### 選項 1 (建議方法)

彈性不鏽鋼瓦斯接頭:

- 如當地規範允許，請使用新的彈性不鏽鋼瓦斯接頭（經 American Gas Association 或 CSA International 設計認證），將乾衣機連接至剛性瓦斯管線。如有需要，可在不鏽鋼瓦斯接頭與乾衣機氣管間使用彎頭和 3/8" 擴口 x 3/8" NPT 轉接器配件，以防止扭結。

### 選項 2 (替代方法)

經認可的鋁管或銅管:

- 必須包含 1/8" NPT 最小插入式分接頭以連接測試錶，並緊鄰乾衣機瓦斯連接的上游。
- 建議使用 1/2" IPS 管。
- 如當地規範和瓦斯供應商允許，則可使用長度小於 20 ft (6.1 m) 之 3/8" 經認可的鋁管或銅管。
- 如果使用天然氣，請勿使用銅管。
- 超過 20 ft (6.1 m) 的長度，應使用較大的管路和不同尺寸的轉接器配件。
- 若您的乾衣機已換用液化石油氣，請使用與 L.P 相容的 3/8" 銅管。若供給管線的總長度超過 20 ft (6.1 m)，請使用更大的管道。  
**附註:** 必須使用對液化石油氣作用有抵抗力的管接頭填料。請勿使用 PTFE 管道工的膠帶。
- 必須包含關斷閥。

## 瓦斯連接要求

- 從乾衣機後方伸出的氣管需有 3/8" 外螺紋。
- 如有需要，可在彈性瓦斯接頭與乾衣機氣管間使用彎頭和 3/8" 擴口 x 3/8" NPT 轉接器配件，以避免扭結。
- 僅限使用管接頭化合物。請勿使用 PTFE 管工膠帶。本乾衣機必須使用符合燃氣設備接頭標準 ANSI Z21.24 或 CSA 6.10 之列載的彈性。
- 瓦斯接頭，連接至瓦斯管線。

## 燃燒器輸入要求

### 標高超過 2,000 ft (610 m)

- 若安裝在 2,000 ft (610 m) 以上之高度時，標高每增加 1,000 ft (305 m)，必須將型號／序號銘牌上的燃燒器 B.T.U. 額定值降低 4%。

## 瓦斯供應壓力測試

- 以 1/2 psi (3.45 kPa) 以上之壓力進行壓力測試時，必須將乾衣機與瓦斯供應管路系統中斷連接。

# 安裝說明

## 安裝水平調整腳




**警告**

**過重危險**


本電器應由兩位以上之人員移動及安裝或拆卸。  
未遵守指示可能會造成背部受傷或其他傷害。

### 1. 準備安裝乾衣機水平調整腳

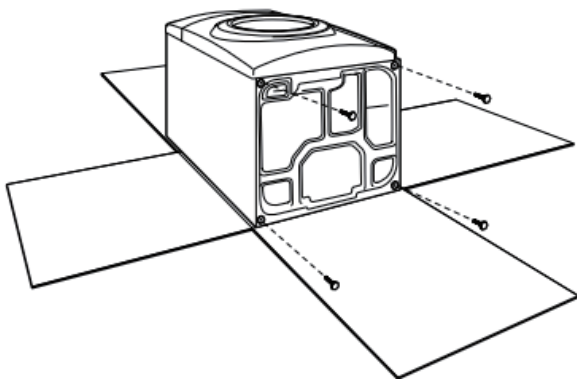

請從乾衣機紙箱中取出大片扁平紙板，放置在乾衣機的整個後緣下方，以避免損壞地板。緊緊托住乾衣機的機身（請勿只是抓著控制面板），並輕輕地將乾衣機放置在紙板上。

### 2. 旋入水平調整腳

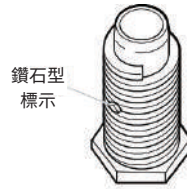

有鑽石型標示的水平調整腳



無鑽石型標示的水平調整腳

使用扳手和捲尺，將水平調整腳旋入腳孔，直至腳座底部距離乾衣機底部大約 1/2" (13 mm) 至 1 1/2" (38 mm)。

#### 有鑽石型標示的水平調整腳：


使用手將水平調整腳旋入腳孔。使用扳手將水平調整腳轉緊，直到看不見鑽石型標示為止。

從乾衣機包裝中取出紙箱角柱，放置在乾衣機的兩個後角下方。將乾衣機立起。在角柱上滑動乾衣機，直到接近最終位置。保留連接排氣通風管的適當空間。


#### 活動房屋使用：

必須將瓦斯型乾衣機穩固放置在地面上。

安裝在活動房屋時需要活動房屋安裝固定套件 (PN 346764A)。如需訂購資訊，請參考快速入門指南。

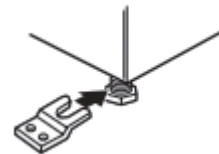


**警告**



**爆炸危險**


使用新的 CSA International 認可之瓦斯管線。  
安裝關斷閥。  
鎖緊所有瓦斯連接。  
如果連接至 LP，請讓合格人員確保氣體壓力不超過13" (33cm) 水柱。  
合格人員包括：有執照的供暖人員、瓦斯公司授權人員、授權服務人員。  
未遵守指示可能會導致死亡、爆炸或火災。

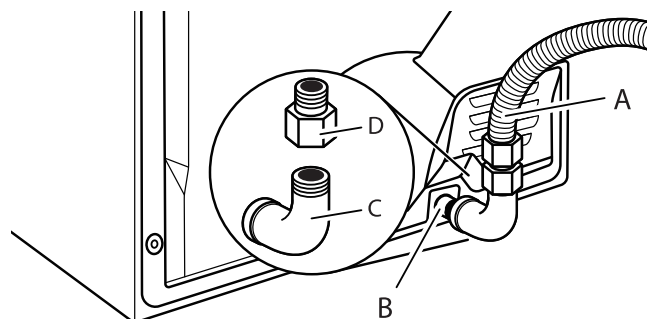

- A. 3/8" (9.5 mm) 彈性瓦斯接頭
- B. 3/8" (9.5 mm) 乾衣機管
- C. 3/8" 至 3/8" 管彎頭
- D. 3/8" 管至擴口轉接器配件

乾衣機必須使用管配件組合連接現有的瓦斯管線。連接之建議如圖所示。您的連接可能會因供應管線類型、尺寸和位置而不同。


### 3. 開啟關斷閥

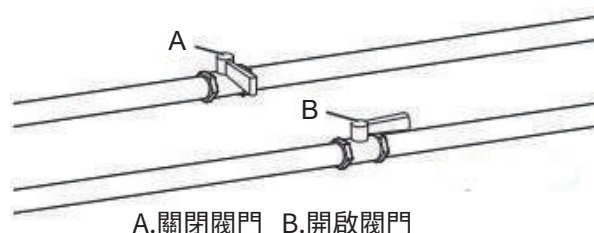

A. 關閉閥門 B. 開啟閥門

開啟供應管線中的關斷閥，在把手與氣管平行時開啟閥門。之後，刷上經認可的非腐蝕性洩漏偵測溶液，以測試所有的連接。有氣泡表示洩漏。修正發現的洩漏問題。

### 1. 將瓦斯連接至乾衣機

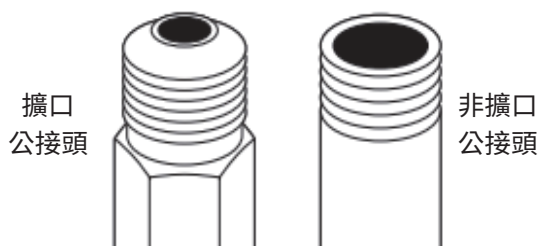

取下氣管上的紅色蓋子。使用扳手鎖緊，將瓦斯連接至乾衣機。在所有非擴口公接頭的螺紋上使用管接頭化合物。如果使用彈性金屬管，則需確保無扭結。

**附註：**對於液化石油氣接頭，必須使用對液化石油氣作用有抵抗力的管接頭填料。請勿使用 PTFE 管道工的膠帶。

## 排風要求

### 警告




#### 火災危險

- 請使用硬質金屬排風管。
- 請勿使用塑膠排風管。
- 請勿使用金屬箔排風管。
- 未遵守指示可能會導致傷亡或火災。

警告：為了降低火災風險，本乾衣機必須排氣至室外。

**重要事項：**請遵守所有的管理規範和條例。乾衣機的排氣不得連接至任何通氣孔、煙囪、牆壁、天花板、閣樓、爬行空間或建築物的封閉空間。僅可使用金屬排風管進行排氣。

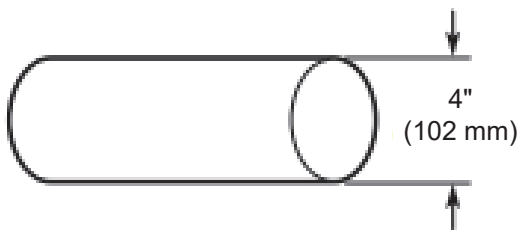

- 僅可使用 4" (102 mm) 的硬質金屬排氣通風管和管夾。
- 請勿使用塑膠或金屬箔排風管。

#### 剛性金屬排風管：

- 建議使用，以發揮最佳的烘乾性能並避免擠壓和扭結。

#### 彈性金屬排風管 (僅在容易清潔的情況下可接受)：

- 在乾衣機的最終位置必須完全延伸和支撐。
- 去除多餘的部分，以避免下垂和扭結，否則可能會導致氣流減少和性能不佳。
- 請勿安裝在封閉的牆壁、天花板或地板上。
- 總長度不應超過 7 3/4 ft (2.4 m)。
- 使用的彈性金屬排風管長度必須包含在整體排風系統設計中，如「排風系統表」所示。


#### 家用排風系統：

- 如果是使用現有的家用排風系統時，請在安裝乾衣機前，先清除整個系統內的棉絮。
- 確保屋外的外部排氣罩未被棉絮或其他外部碎屑堵塞。
- 將金屬箔排風管的塑膠更換為剛性金屬或彈性金屬排風管。檢閱「排風系統表」，若有必要，請修改現有的家用排風系統，以發揮最佳的烘乾性能。

#### 排氣罩：

- 應使用排氣罩封住排風口，以防止鼠類和昆蟲進入屋內。
- 距離地面或任何可能會阻礙排氣的物體 (例如花、岩石、樹叢或雪) 必須至少達 12" (305 mm)。
- 請勿使用具有磁性門鎖的排氣罩。

#### 建議款式：

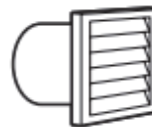

百葉窗



箱罩型




斜角罩

#### 可接受的款式：



#### 彎頭：

- 45° 彎頭提供的氣流優於 90° 彎頭。

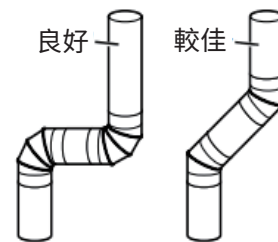

#### 管夾：

- 使用管夾密封所有的接頭。
- 請勿使用螺絲或其他延伸至管道內部，並附著棉絮的固定裝置連接或固定排氣通風管。請勿使用電工膠帶。

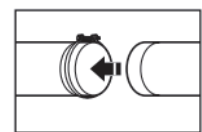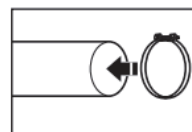


通風產品可向當地經銷商購買。如需聯絡和訂購資訊，請參閱快速入門指南。

## 規劃排風系統

### 建議的排氣安裝方式：


典型安裝方式是從乾衣機後方排氣。可以選擇其他安裝方式。

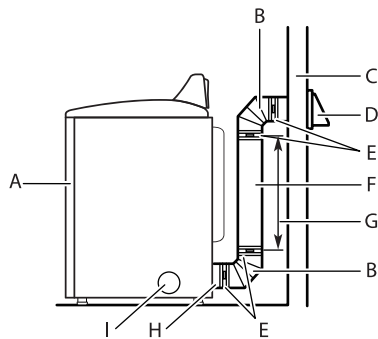

- A. 乾衣機
- B. 彎頭
- C. 牆壁
- D. 排氣罩
- E. 管夾
- F. 剛性金屬或彈性金屬排風管
- G. 連接彎頭所需的排風管長度
- H. 排氣口
- I. 選用的側面排氣口

### 選用的排氣安裝方式：


**警告**



**火災危險**

請使用製造商的排氣蓋套件蓋住未使用的排氣孔。  
請聯絡當地經銷商。  
未遵守指示可能會導致死亡、火災、觸電或重傷。

某些機型可以改為從右側、左側或底部排氣。  
您可以聯絡當地經銷商改造乾衣機。

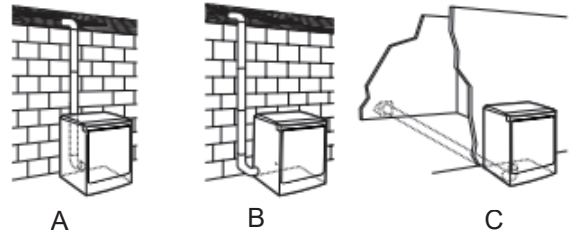


- A. 標準後偏置排氣安裝
- B. 左側或右側排氣安裝 (僅適用於特定的 27" 寬機型)
- C. 底部排氣安裝 (僅適用於特定的 27" 寬機型)

### 適用於狹窄間隙的替代安裝方式

排風系統的類型很多。請選擇最適合您的安裝方式。下圖為兩種狹窄間隙的安裝方式。

**附註：**可以購買以下進行狹窄間隙替代安裝的套件。如需聯絡資訊，請參閱快速入門指南。

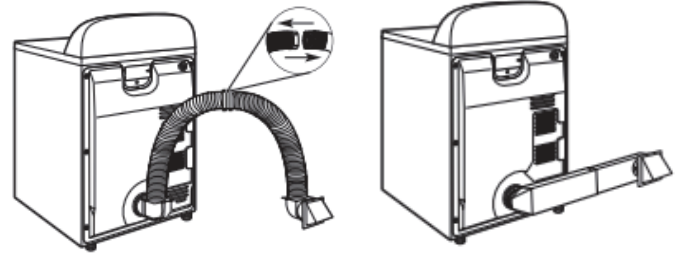


翻越式安裝 (也可以  
搭配一個偏置彎頭)

潛望鏡式安裝

### 活動房屋安裝的特殊規定：

排氣通風管必須固定至活動房屋的不可燃部分，且尾端不得置於活動房屋的下方。排氣通風管尾端應置於外部。

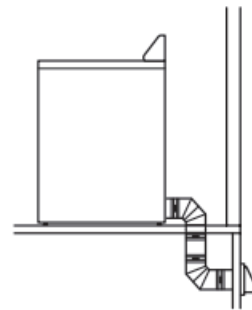

### 確定排風路徑：

- 選擇最直與最直接通往室外的路徑。
- 規劃安裝以使用數量最少的彎頭和彎曲。
- 當使用彎頭或需彎曲時，請盡可能保留空間。
- 逐漸彎曲排風管以避免扭結。

- 盡可能減少 90° 彎曲。

發揮最佳烘乾性能所需的排風管長度和彎頭：

- 使用以下「排風系統表」，確定可使用的通風管材料類型與排氣罩組合。

**附註：**請勿使用長度超過「排風系統表」列載之規格的排風管。使用長度超過規格的排氣系統，將會：

- 縮短乾衣機的使用壽命。
- 降低性能，導致烘乾時間變長和用電量增加。

符合「排風系統表」之通風要求，有助於發揮最佳的烘乾性能。

| 排風系統表    |       |                |
|----------|-------|----------------|
| 90° 彎頭數量 | 排風管類型 | 箱型／百葉窗或斜角罩     |
| 0        | 剛性金屬  | 64 ft (20 m)   |
| 1        | 剛性金屬  | 54 ft (16.5 m) |
| 2        | 剛性金屬  | 44 ft (13.4 m) |
| 3        | 剛性金屬  | 35 ft (10.7 m) |
| 4        | 剛性金屬  | 27 ft (8.2 m)  |

**附註：**如為側面和底部排氣安裝，則在乾衣機內部會有 90° 轉彎。在確定最大排氣長度時，請增加一個 90° 轉彎。


| 排風系統表 (長排風管機型) |       |                 |
|----------------|-------|-----------------|
| 90° 彎頭數量       | 排風管類型 | 箱型／百葉窗或斜角罩      |
| 0              | 剛性金屬  | 160 ft (48.8 m) |
| 1              | 剛性金屬  | 150 ft (45.7 m) |
| 2              | 剛性金屬  | 140 ft (42.7 m) |
| 3              | 剛性金屬  | 130 ft (39.6 m) |
| 4              | 剛性金屬  | 120 ft (36.6 m) |
| 5              | 剛性金屬  | 110 ft (33.5 m) |

如需確認您的型號是否為長排風管系統，請參閱位於內門井之序號銘牌上的類型代碼。例如：長排風管型號為 BJA V-NATXXXXXX-XXX 或 BWFB-NAT-XXXXXX-XXX。

**附註：**在採用長排風管系統時，無論長度為何，使用箱型／百葉窗罩將可改善排風。


## 安裝排風系統

### 1. 安裝排氣罩

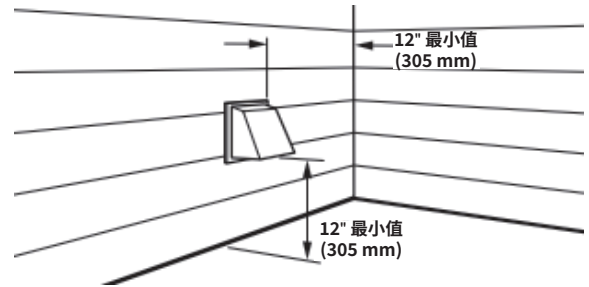

安裝排氣罩及使用填隙化合物密封排氣罩周圍的外牆開口。

### 2. 將排風管連接至排氣罩

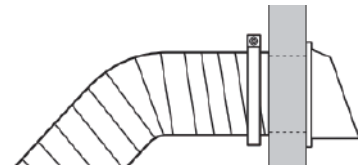


排風管必須安裝在排氣罩上。使用 4" (102 mm) 管夾，將通風管固定至排氣罩。盡可能採用最直的路徑，將通風管引導至乾衣機的位置。避免 90° 轉彎。使用管夾密封所有的接頭。請勿使用電工膠帶、螺絲或其他延伸至通風管內部的固定裝置固定排風管，因為可能會附著棉絮。

## 連接進水軟管

採用排風式非蒸氣機型時，請跳至「連接排風管」。必須使用新的進水軟管，將乾衣機連接至冷水水龍頭。請勿使用舊的軟管。


**附註：**請在使用 5 年後更換進水軟管，以降低軟管故障的風險。請將安裝或更換軟管的日期記錄在軟管上，以供日後參照。定期檢查，如發現有脹起、扭結、割傷、磨損或漏水情況時請予以更換。

### 1. 關閉冷水，拆下與更換橡膠墊圈

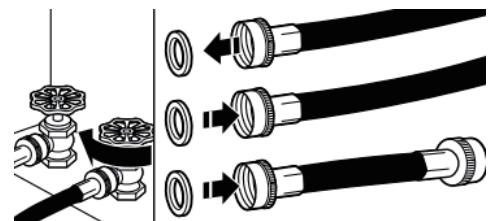


關閉冷水水龍頭，並拆下洗衣機進水軟管。從進水軟管上拆下舊的橡膠墊圈，並更換新的橡膠墊圈。

## 2. 連接短軟管和「Y」形接頭

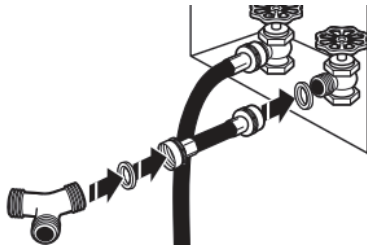


將 2 ft (0.6 m) 進水軟管連接至冷水水龍頭。用手旋緊轉接器，直至固定在水龍頭上。然後將「Y」形接頭連接至 2 ft (0.6 m) 進水軟管的公端。用手旋緊轉接器，直至固定在接頭上。

## 3. 鎖緊轉接器

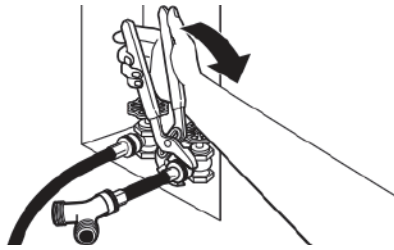


使用鉗子，將轉接器鎖緊三分之二圈。  
附註：請勿過度鎖緊。可能導致轉接器損壞。

## 4. 將長軟管連接至「Y」形接頭，並鎖緊轉接器

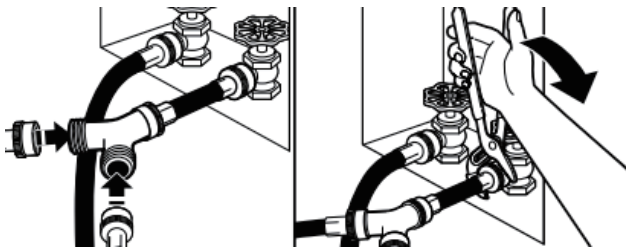


將 5 ft (1.5 m) 進水軟管的一端連接至「Y」形接頭。將洗衣機冷水進水軟管連接至「Y」形接頭的另一側。用手旋緊轉接器，直至固定在接頭上。使用鉗子，將轉接器鎖緊三分之二圈。  
附註：請勿過度鎖緊。可能導致轉接器損壞。

## 5. 將長軟管連接至乾衣機注水閥，並鎖緊轉接器

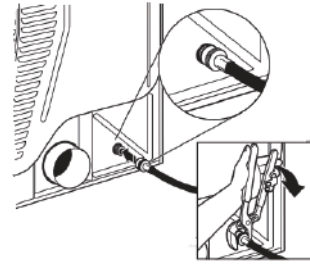


取下進水閥上的保護蓋(若有)。  
將長軟管的另一端連接至乾衣機後面板上的注水閥。用手旋緊轉接器，直至固定在注水閥接頭上。使用鉗子，將轉接器鎖緊三分之二圈。  
附註：請勿過度鎖緊。可能導致轉接器損壞。  
附註：蒸氣乾衣機的水連接可能是位於不同的位置。

## 6. 開啟冷水水龍頭

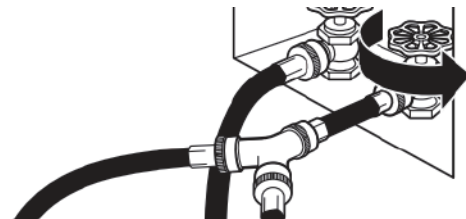

檢查水龍頭是否開啟。


## 7. 檢查有無滲漏

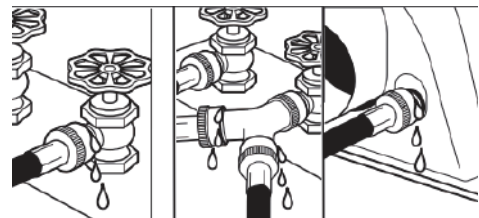

檢查「Y」形接頭、水龍頭和軟管周圍是否洩漏。


## 連接排風管

### 1. 將排風管連接至排氣口

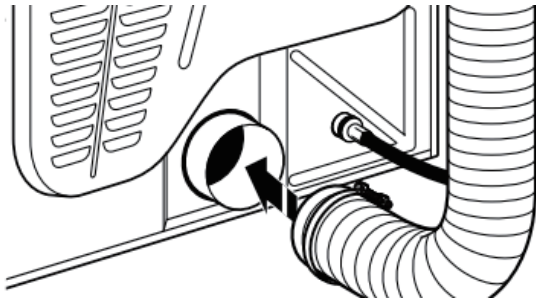

使用 4" (102 mm) 管夾，將排風管連接至乾衣機排氣口。如果連接至現有的排風管，請確保排風管乾淨。乾衣機排風管必須安裝在乾衣機排氣口上和排氣罩內。檢查排風管是否透過 4" (102 mm) 管夾固定在排氣罩上。

### 2. 將乾衣機移至最終位置

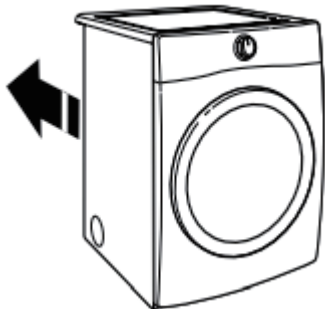


將乾衣機移至最終位置。避免排風管擠壓或扭結。在乾衣機定位後，移除乾衣機下方的角柱和紙板。


## 調整水平

### 1. 調整水平

將水平儀置於此處

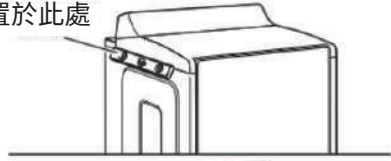


將水平儀置於此處

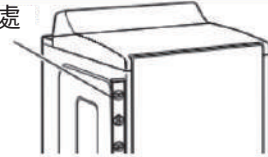

檢查乾衣機各側的水平度。從正面到背面重複檢查。

**附註：**為使濕度感應系統能正常運作，乾衣機必須保持水平。

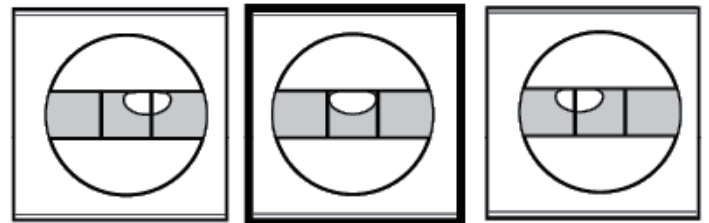


沒有水平

水平


沒有水平

### 2. 鎖緊與調整水平調整腳

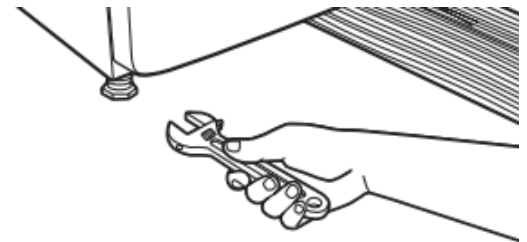

如果乾衣機未呈水平狀態，請使用木塊支撐。使用扳手上、下調整腳座，並再次檢查水平度。在乾衣機呈現水平狀態後，請確定四個腳皆緊貼於地板且乾衣機不會搖晃。

### 3. 安裝和拆卸底座飾條 (特定機型)

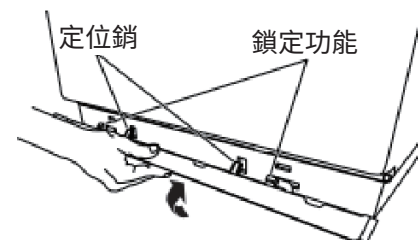

在安裝時：

將裙板置於乾衣機底部，並將定位銷對準孔位。用力向上按壓裙板，直至卡入定位。

取出：

在每一個角，按壓住底座飾條的頂部。

轉離乾衣機後拆下。

## 完成安裝檢核表

- 確認已安裝所有零件。若有多餘零件，請查閱本文前述步驟以確認是否有所遺漏。
- 確認已備齊所有工具。
- 丟棄／回收所有包裝材料。
- 檢查乾衣機最終位置。確定排風管未受到擠壓或扭結。
- 檢查乾衣機是否達水平。請參閱「調整水平」。
- 撕下控制面板上的保護膜和殘留在乾衣機上的膠帶。
- 以濕布徹底擦拭乾衣機滾筒內部，去除灰塵。
- 請參閱快速入門指南中的使用說明。

### 警告



#### 觸電危險

- 插入接地型 3 孔插座。
- 請勿移除接地端子。
- 請勿使用轉接頭。
- 請勿使用延長線。
- 未遵守指示可能會導致死亡、火災或觸電危險。

- 插入接地型 3 孔插座。
- 檢查瓦斯是否已開啟。
- 檢查有無滲漏。
- 確定彈性瓦斯管線未受到擠壓或扭結。

#### 僅限蒸氣機型：

- 確定水龍頭已開啟。
- 檢查「Y」形接頭、水龍頭和軟管周圍是否洩漏。
- 如果您是住在硬水地區，則建議使用軟水機以減少乾衣機內水系統累積的水垢。隨著時間過去，水垢堆積可能會造成水系統中不同部分堵塞，將會降低產品的性能。水垢堆積過度可能會導致需要更換或維修某些零件。

#### 所有機型：

- 將熱風行程設為 20 分鐘，並啟動乾衣機。請勿選擇冷風乾衣設定。

#### 如果乾衣機未啟動，請檢查以下項目：

- 控制鍵是否位於運轉中或「ON」位置。
- 是否已確實按下啟動按鈕。
- 是否已將乾衣機的插頭插入插座或是否已連接電源。
- 家中保險絲完好或無熔絲開關未跳開。
- 乾衣機機門已關閉。
- 在乾衣機運作 5 分鐘後打開乾衣機機門，感受熱度。如果感覺到熱，請取消行程，並關上機門。如果感覺不到熱，請關閉乾衣機，並檢查瓦斯關斷閥是否已開啟。
- 若瓦斯關斷閥為關閉時，請開啟，然後重複上述的 5 分鐘測試。
- 若瓦斯管線關斷閥已開啟，則聯絡合格的技術人員。
- 想將機門由右側開啟改為左側開啟時，請參閱線上「乾衣機改門說明」以取得詳細資訊。

如果螢幕畫面顯示出「檢查通風管」時，表示乾衣機通風管可能受到擠壓或阻塞。

**附註：**乾衣機首次加熱時，可能會發出異味。在初次使用加熱元件時出現此異味為常見現象。異味會消散。

# 乾衣機行程指南

## 警告



### 火災危險

任何洗衣機皆無法完全清除油汙。  
請勿嘗試烘乾沾染任何類型的油汙的衣物(包括烹飪油)內含泡棉、橡膠或塑膠的衣物,必須以曬衣架或使用冷風乾衣行程風乾。  
未遵守指示可能會導致傷亡或火災。

## 警告



### 爆炸危險

請勿在乾衣機附近放置易燃物或揮發性物質(如汽油)。  
不可烘乾曾經沾有可燃性物質之物品(即使是已洗滌過)。  
未遵照上述指示,可能導致死亡、爆炸或火災。

警告:為了降低火災、觸電或人員受傷的風險,在操作本電器之前,請先閱讀電器使用手冊中的重要安全指示。

## 自動感測乾衣行程

使用自動感測乾衣行程可使衣料獲得最佳的保護並節省能源。乾衣機會偵測衣物濕度或空氣溫度,並於衣物達到所選的烘乾程度時停止運作。

變更設定後,乾衣機將會記下新的設定。若電力中斷,設定將會還原成預設值。非所有型號都具備所有的功能及行程。非所有設定及選項都適用於各個行程。

附註:以粗體顯示的溫度為該行程的預設值。請注意,這些行程的時間無法調整。

| 烘乾之物品:                        | 行程:    | 溫度:                      | 可用功能:                 | 說明:   |
|-------------------------------|--------|--------------------------|-----------------------|---|
| 厚重物品,例如牛仔褲<br>毛巾或厚重的工作服       | 厚重/衣量多 | 高<br><b>中</b><br>低<br>超低 | 除皺防護<br>靜音完成響鈴<br>除靜電 | 預設使用中溫及較長的行程時間以烘乾大量厚重、難烘乾的衣物。               |
| 工作服、休閒服、混紡<br>棉類、床單、燈芯絨<br>布料 | 標準烘乾   | 高<br><b>中</b><br>低<br>超低 | 除皺防護<br>靜音完成響鈴<br>除靜電 | 預設使用中溫以烘乾大量混合衣物。                            |
| 襯衫、女襯衫、免燙衣物<br>、合成纖維、輕量衣物     | 防皺     | 高<br><b>中</b><br>低<br>超低 | 除皺防護<br>靜音完成響鈴<br>除靜電 | 預設使用低溫以除濕和加強衣物保護。                           |
| 內衣、女襯衫、貼身內衣<br>褲、表演服裝         | 細緻衣物   | 高<br><b>中</b><br>低<br>超低 | 除皺防護<br>靜音完成響鈴        | 預設使用極低溫以慢速烘乾細緻衣物。                           |
| 工作服、休閒服、混紡<br>棉類、床單、燈芯絨<br>布料 | 加強烘乾   | 高<br><b>中</b><br>低<br>超低 | 除皺防護<br>靜音完成響鈴<br>除靜電 | 預設使用中溫來烘乾大量混合衣物,溫度略高於標準行程並經過調整,以達到「加強烘乾」效果。 |

| 烘乾之物品：                | 行程：  | 溫度：                      | 可用功能：                 | 說明：   |
|-----------------------|------|--------------------------|-----------------------|---|
| 夾克、被單、枕頭              | 大型衣物 | 高<br><b>中</b><br>低<br>超低 | 除皺防護<br>靜音完成響鈴        | 用於烘乾大量、大件衣物等；請勿將內桶超量裝填。在行程途中，會發出鈴響指示將桶內的衣物重新擺放以達最佳烘乾效果。 |
| 工作服、休閒服、混紡棉類、床單、燈芯絨布料 | 微乾待燙 | 高<br><b>中</b><br>低<br>超低 | 除皺防護<br>靜音完成響鈴<br>除靜電 | 預設使用中溫來烘乾混合衣物，溫度略低於標準行程並經過調整，以達到「微乾待燙」效果。               |
| 大量的牛仔褲、毛巾或厚重衣物        | 毛巾   | 高<br><b>中</b><br>低<br>超低 | 除皺防護<br>靜音完成響鈴<br>除靜電 | 這是預設使用高溫的長行程。不建議將此行程用於所有衣物。請用於大量的厚重衣物。                  |

如為蒸氣機型，可選擇「除靜電」設定。乾衣機將自動翻滾、暫停，並將導入微量濕氣以消除靜電。此選項會使總行程時間增加約 3 分鐘。

### 蒸氣除皺行程 (特定機型)

蒸氣行程的設計係用於將已烘乾的衣物進行整平、消除異味，並修護衣料。

非所有型號都具備有所有的行程及設定。以**粗體**顯示的設定和選項功能為該行程的預設定。

| 待修復之物品：    | 行程：  | 溫度：           | 可用功能：          | 說明：                                   |
|------------|------|---------------|----------------|---------------------------------------|
| 襯衫、女襯衫和休閒褲 | 蒸氣除皺 | 高<br><b>中</b> | 除皺防護<br>靜音完成響鈴 | 用來整平衣物皺褶並消除因長時間放置在乾衣機中而產生的異味。請勿加入烘衣紙。 |

### 定時乾衣行程

在這些行程中，您可以自訂烘乾時間。可用的時間選項為 15、30、60 和 90 分鐘。變更設定後，乾衣機將會記下新的設定 (快烘除外)。若電力中斷，設定將會還原成預設值。非所有型號都具備所有的功能及行程。非所有設定及選項都適用於各個行程。

| 烘乾之物品：         | 行程：  | 溫度：                      | 可用功能：          | 說明：   |
|----------------|------|--------------------------|----------------|---|
| 任何衣物           | 定時烘乾 | 高<br><b>中</b><br>低<br>超低 | 除皺防護<br>靜音完成響鈴 | 適用於需烘乾至微濕程度，不需要進行整個烘衣行程時。請根據布料類型選擇烘乾溫度。如不確定要選擇何種溫度，則請選擇較低的溫度。 |
| 少量衣物和運動服       | 快烘   | 高<br><b>中</b><br>低<br>超低 | 除皺防護<br>靜音完成響鈴 | 適用於 3~4 件的少量衣物。   |
| 泡棉、橡膠、塑膠或熱敏感織物 | 冷風烘乾 | <b>不適用</b>               | 除皺防護<br>靜音完成響鈴 | 使用未加熱的空氣烘乾對熱敏感的衣物   |

# DRYER SAFETY

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.”

These words mean:

**⚠ DANGER**

You can be killed or seriously injured if you don't **immediately** follow instructions.

**⚠ WARNING**

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Clean lint screen before or after each load.
- Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.
- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. To reduce the risk of fire due to contaminated loads, the final part of a tumble dryer cycle occurs without heat (cool down period). Avoid stopping a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).
- See the Installation Instructions for grounding requirements and installation.

**SAVE THESE INSTRUCTIONS**



## **WARNING - “Risk of Fire”**

- Clothes dryer installation must be performed by a qualified installer.
- Install the clothes dryer according to the manufacturer’s instructions and local codes.
- Do not install a clothes dryer with flexible plastic venting materials or flexible metal (foil type) duct. If flexible metal duct is installed, it must be of a specific type identified by the appliance manufacturer as suitable for use with clothes dryers. Flexible venting materials are known to collapse, be easily crushed, and trap lint. These conditions will obstruct clothes dryer airflow and increase the risk of fire.
- To reduce the risk of severe injury or death, follow all installation instructions.
- Save these instructions.

### **WARNING**

#### **Fire Hazard**

Failure to follow safety warnings exactly could result in serious injury, death, or property damage.

Do not install a booster fan in the exhaust duct.

Install all clothes dryers in accordance with the installation instructions of the manufacturer of the dryer.

### **WARNING:**

#### **FIRE OR EXPLOSION HAZARD**

Failure to follow safety warnings exactly could result in serious injury, death or property damage.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS:**
  - Do not try to light any appliance.
  - Do not touch any electrical switch; do not use any phone in your building.
  - Clear the room, building, or area of all occupants.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

**WARNING:** Gas leaks cannot always be detected by smell.

Gas suppliers recommend that you use a gas detector approved by UL or CSA.

For more information, contact your gas supplier.

If a gas leak is detected, follow the “What to do if you smell gas” instructions.

**IMPORTANT:** The gas installation must conform with local codes, or in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, or the National Gas and Propane Installation Code, CSA B149.1.

The dryer must be electrically grounded in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, Part 1, CSA C22.1.

In the State of Massachusetts, the following installation instructions apply:

- Installation and repairs must be performed by a qualified or licensed contractor, plumber, or gas fitter qualified or licensed by the State of Massachusetts.
- Acceptable Shut-off Devices: Gas Cocks and Ball Valves installed for use shall be listed.
- A flexible gas connector, when used, must not exceed 4 feet (121.9 cm).

## **IMPORTANT SAFETY INSTRUCTIONS**


WHEN DISCARDING OR STORING YOUR OLD CLOTHES DRYER, REMOVE THE DOOR.

**SAVE THESE INSTRUCTIONS**

# DRYER MAINTENANCE AND CARE

## Cleaning the Dryer Location

**⚠ WARNING**



**Explosion Hazard**

Keep flammable materials and vapors, such as gasoline, away from dryer.

Do not dry anything that has ever had anything flammable on it (even after washing).

Place dryer at least 18 inches (460 mm) above the floor for a garage installation.

Failure to do so can result in death, explosion, or fire.

Keep dryer area clear and free from items that would block the airflow for proper dryer operation. This includes clearing piles of laundry in front of the dryer.

## Cleaning the Dryer Interior

### To clean dryer drum:

1. Use either a mild dish detergent mixed at low concentration or a nonflammable cleaner and very warm water. Rub with a soft cloth.
  - Rinse well with a wet sponge or towel.
  - Tumble a load of clean clothes or towels to dry drum.
2. Use a microfiber cloth and very warm water in a spray bottle to clean the drum and a second microfiber towel to dry.

**NOTE:** Garments that contain unstable dyes, such as denim blue jeans or brightly colored cotton items, may discolor the rear of the dryer interior. These stains are not harmful to your dryer and will not stain future loads of clothes. Dry unstable dye items inside out to avoid transfer of dye.

## Removing Accumulated Lint

### From inside the dryer cabinet:

Lint should be removed every 2 years, or more often, depending on dryer usage. Cleaning should be done by a qualified appliance service or ventilation system cleaner.

### From the exhaust vent:

Lint should be removed every 2 years, or more often, depending on dryer usage.


## Cleaning the Lint Screen

### Every load cleaning:

The lint screen may be located either in the door opening or the top of the dryer depending on model. A screen blocked by lint can increase drying time.

### To clean:

1. Remove the lint screen. If necessary, press the tab to release and open the lint screen. Roll lint off the screen with your fingers. Do not rinse or wash screen to remove lint. Wet lint is hard to remove.

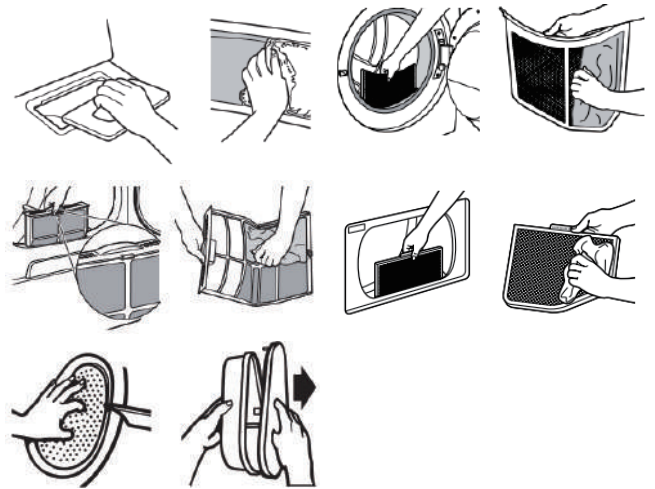

2. Push the lint screen firmly back into place.

### IMPORTANT:


- Do not run the dryer with the lint screen loose, damaged, blocked, or missing. Doing so can cause overheating and damage to both the dryer and fabrics.
- If lint falls off the screen into the dryer during removal, check the exhaust hood and remove the lint. See "Venting Requirements" in the Installation Instructions.
- Clean space where lint screen is located, as needed. Using a vacuum, gently remove any lint that has accumulated outside of the lint screen.

### As-needed cleaning:

Laundry detergent and fabric softener residue can build up on the lint screen. This buildup can cause longer drying times for your clothes, or cause the dryer to stop before your load is completely dry. The screen is probably clogged if lint falls off while the screen is in the dryer. Clean the lint screen with a nylon brush every 6 months, or more frequently, if it becomes clogged due to a residue buildup.

### To wash:


1. Roll lint off the screen with your fingers.
2. Wet both sides of lint screen with hot water.
3. Wet a nylon brush with hot water and liquid detergent. Scrub lint screen with the brush to remove residue buildup.

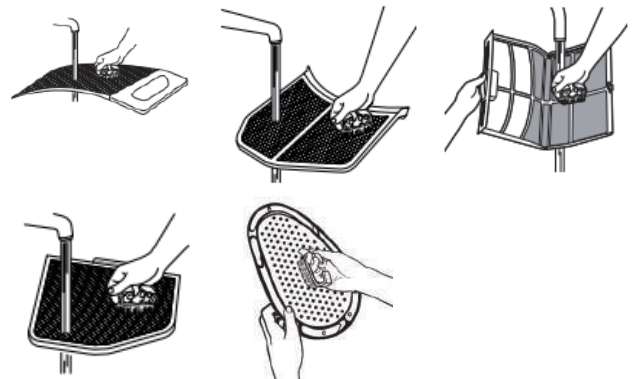

4. Rinse screen with hot water.
5. Thoroughly dry lint screen with a clean towel. Reinstall screen in dryer.

## Changing the Drum Light (on some models)

1. Unplug dryer or disconnect power.
2. Open the dryer door. Locate the light bulb cover on the back wall of the dryer. Using a 1/4" (6.5 mm) nut driver or socket wrench, remove the screw located in the lower right-hand corner of the cover. Remove the cover.

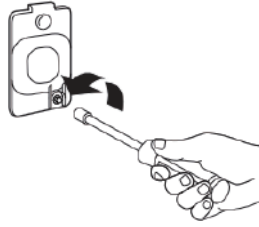

3. Turn bulb counterclockwise. Replace the bulb with a 10 W appliance bulb only. Replace the cover and secure with the screw.
4. Plug in dryer or reconnect power.

## Check Your Vent System for Good Airflow

### **WARNING**



#### **Fire Hazard**

**Use a heavy metal vent.**

**Do not use a plastic vent.**

**Do not use a metal foil vent.**

**Failure to follow these instructions can result in death or fire.**

### **Good Airflow**

Along with heat, dryers require good airflow to efficiently dry laundry. Proper venting will reduce your drying times and improve your energy savings. See Installation Instructions.


The venting system attached to the dryer plays a big role in good airflow. Blocked or crushed vents as well as improper venting installation will reduce air flow and dryer performance.

Service calls caused by improper venting are not covered by the warranty and will be paid by the customer, regardless of who installed the dryer. To clean or repair venting, contact a venting specialist.

## Maintain Good Airflow

- Cleaning your lint screen before each load.
- Replace plastic or foil vent material with 4" (102 mm) diameter heavy, rigid vent material.
- Use the shortest length of vent possible.

- Use no more than four 90° elbows in a vent system; each bend and curve reduces airflow.

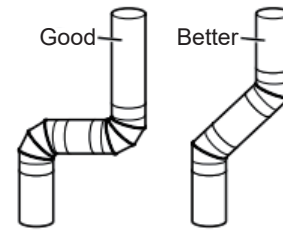

- Remove lint and debris from the exhaust hood.
- Remove lint from the entire length of the vent system at least every 2 years. When cleaning is complete, be sure to follow the Installation Instructions for final product check.
- Clear away items from the front of the dryer.

## Nonuse, Storage, and Moving Care

### **Nonuse or Storage Care**

If you will be on vacation or not using your dryer for an extended period of time, you should:

1. Unplug dryer or disconnect power.
2. Clean lint screen. See "Cleaning the Lint Screen."
3. Close shutoff valve in gas supply line.
4. Steam Models Only: Turn off the water supply to the dryer. This helps to avoid flooding (due to a water pressure surge) while you are away.

### **Moving Care — Gas Models**

1. Unplug the power supply cord.
2. Close shutoff valve in gas supply line.
3. Disconnect gas supply line pipe and remove fittings attached to dryer pipe.
4. Cap the open gas supply line.
5. Steam models only: Shut off water faucet. Disconnect the water inlet hose from faucet; then drain the hose. Transport hose separately.
6. Make sure leveling legs are secure in dryer base.
7. Use tape to secure dryer door.
8. On models with base trim, remove base trim before moving dryer. See "Install and remove base trim (on some models)" for details.

To use the dryer again:

## ⚠ WARNING



### Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

1. Flush water pipes. Reconnect water inlet hose to faucet. Turn on water faucet.
2. Plug in dryer or reconnect power as described in the Installation Instructions.

### Reinstalling the Dryer

Follow the Installation Instructions to locate, level, and connect the dryer.

### Special Instructions for Steam Models

Install and store your dryer where it will not freeze. Because some water may stay in the hose, freezing can damage your dryer. If storing or moving your dryer during freezing weather, winterize it.

### Water Inlet Hose

Replace inlet hose and hose screen after 5 years of use to reduce the risk of hose failure. Periodically inspect and replace inlet hose if bulges, kinks, cuts, wear, or leaks are found.

When replacing your inlet hose, record the date of replacement.

### To winterize the dryer:

1. Unplug dryer or disconnect power.
2. Shut off water faucet.
3. Disconnect water inlet hose from faucet and drain.


## INSTALLATION REQUIREMENTS

### Tools and Parts

**NOTE:** Install the clothes dryer according to the manufacturer's instructions and local codes.

Gather required tools and parts before starting installation. Read and follow the instructions provided with any tools listed here.


### Tools Needed for All Installations:

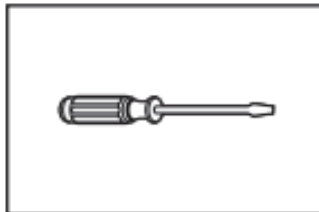


Flat-blade screwdriver




Vent clamps

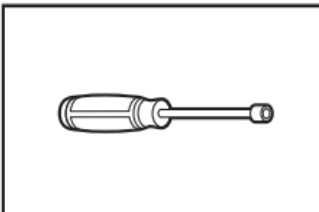


1/4" Nut driver

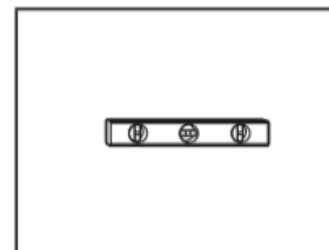


Level

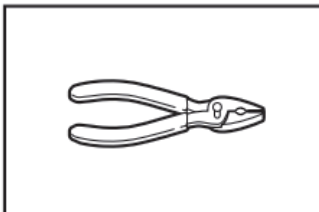


Pliers or slip-joint pliers

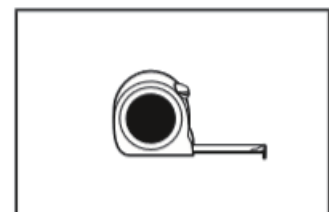


Tape measure

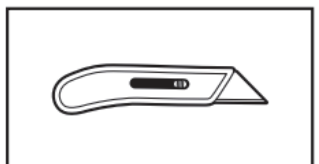


Utility knife

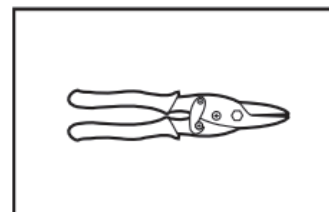


Tin snips (new vent installations)

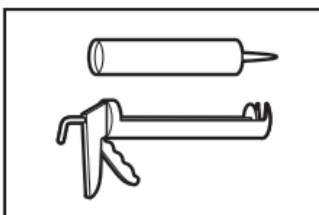

Caulking gun and compound (new vent installations)

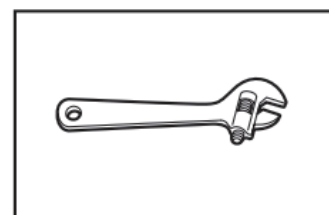

Adjustable wrench that opens to 1" (25 mm) or hex-head socket wrench

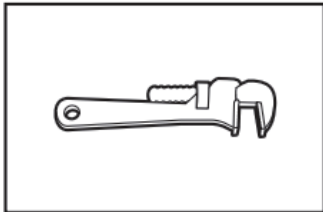


8" (203 mm) or 10" (254 mm) pipe wrench




Pipe-joint compound resistant to LP gas

### Additional Tools Needed (on some models):

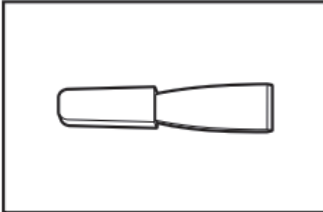

Putty knife

### Parts Supplied (all models):

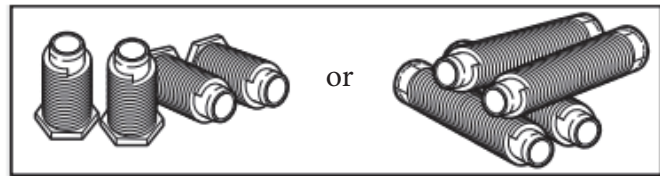

Leveling legs (4) (Length and appearance of legs may vary according to model)


Parts package is located in dryer drum. Check that all parts are included.

**NOTE:** Do not use leveling legs supplied with dryer if installing with a pedestal or a stack kit.


### Parts Needed (steam models):




"Y" connector

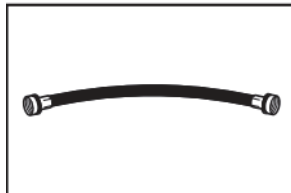

2' (0.6 m) inlet hose

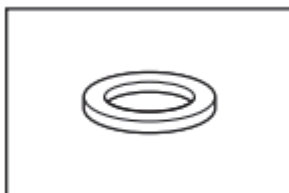

Rubber washer

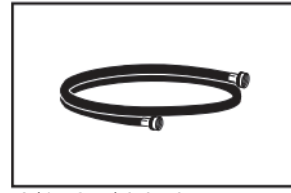

5' (1.52 m) inlet hose

### Parts Needed (not supplied with dryer):

Additional parts may be required, depending on your installation. Check local codes. Check existing electrical supply and venting. See "Electrical Requirements" and "Venting Requirements" before purchasing parts.

Mobile home installations require metal exhaust system hardware available for purchase from the dealer from whom you purchased your dryer. For further information, please refer to the Quick Start Guide for service contact information.

### Available Accessories:

Accessories and replacement parts are available for your model. For ordering and contact information, please reference your Quick Start Guide.

## Location Requirements

# ⚠ WARNING



### Explosion Hazard

**Keep flammable materials and vapors, such as gasoline, away from dryer.**

**Do not dry anything that has ever had anything flammable on it (even after washing).**

**Place dryer at least 18 inches (460 mm) above the floor for a garage installation.**

**Failure to do so can result in death, explosion, or fire.**

Check code requirements. Some codes limit, or do not permit, installation of the dryer in garages, closets, mobile homes, or sleeping quarters. Contact your local building inspector.

### You will need:


- A location allowing for proper exhaust installation. See "Venting Requirements."
- A separate 15 A or 20 A circuit for gas dryers.
- A grounded electrical outlet located within 2 ft (610 mm) of either side of the dryer. See "Electrical Requirements" in the "Gas Dryer Power Hookup" section.
- A sturdy floor to support dryer and a total weight (dryer and load) of 200 lbs (90.7 kg). The combined weight of a companion appliance should also be considered.
- Level floor with maximum slope of 1" (25 mm) under entire dryer. If slope is greater than 1" (25 mm), install Extended Dryer Feet Kit. If not level, clothes may not tumble properly and automatic sensor cycles may not operate correctly. Installing on carpet is not recommended.
- For garage installation, place dryer at least 18" (460 mm) above floor. If using a pedestal, you will need 18" (460 mm) to bottom of dryer.
- **Steam models only:** Cold water faucets located within 4 ft (1.2 m) of the water fill valves, and water pressure of 20–100 psi (137.9–689.6 kPa). You may use your washer's water supply by utilizing the necessary parts noted in "Parts needed".
- The dryer must not be installed or stored in an area where it will be exposed to water and/or weather.

**IMPORTANT:** Do not operate your dryer at temperatures below 45°F (7°C). Lower temperatures may cause dryer not to shut off at end of automatic sensor cycles, resulting in longer drying times.

### Installation clearances:

For each arrangement, consider allowing more space for ease of installation and servicing, spacing for companion appliances, and clearances for walls, doors, and floor moldings. Space must be large enough to allow the door to fully open. Add spacing on all sides of dryer to reduce noise transfer. If a closet door is used, top and bottom air openings are required. Louvered doors with equivalent ventilation openings can be used.

## Spacing for recessed area or closet

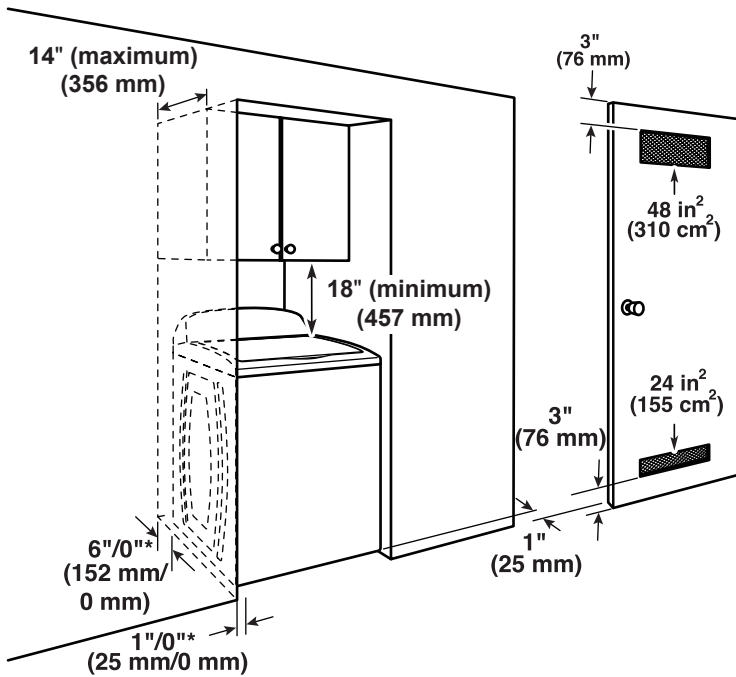


\*Recommended/Minimum spacing

**NOTE:** No other fuel-burning appliance can be installed in the same closet as a dryer.

All dimensions show recommended and minimum spacing allowed.

- Additional spacing should be considered for ease of installation and servicing.
- Additional clearances might be required for wall, door, and floor moldings.
- Additional spacing of 1" (25 mm) on all sides of the dryer is recommended to reduce noise transfer.
- For closet installation with a door, minimum ventilation openings in the top and bottom of the door are required. Louvered doors with equivalent ventilation openings are acceptable.
- Companion appliance spacing should also be considered.

### Custom under-counter installation:

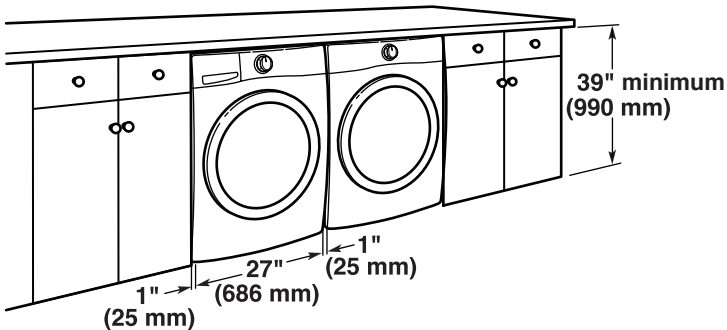

## Minimum installation clearances (dryer only):

|                      | Front              | Sides      | Rear      | Top                           |
|----------------------|--------------------|------------|-----------|-------------------------------|
| <b>Recessed</b>      | NA                 | 0" (0 mm)  | 0" (0 mm) | 18" (457 mm) to cabinet/shelf |
| <b>Closet</b>        | 1" (25 mm) Minimum | 0" (0 mm)  | 0" (0 mm) | 18" (457 mm) to cabinet/shelf |
| <b>Under Counter</b> | NA                 | 1" (25 mm) | 0" (0 mm) | 0" (0 mm)                     |

0" (0 mm) rear spacing is allowed for straight-back venting only.

For steam models only, inlet hose must not be kinked.

### Mobile Home – Additional installation requirements

This dryer is suitable for mobile home installations. The installation must conform to the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280 (formerly the Federal Standard for Mobile Home Construction and Safety, Title 24, HUD Part 280) or the Standard for Mobile Homes, CAN/CSAZ240 MH

#### Mobile home installations require:

- Metal exhaust system hardware, which is available for purchase from your dealer.
- Mobile Home Installation Hold-Down Kit.
- Special provisions must be made in mobile homes to introduce outside air into the dryer. The opening (such as a nearby window) should be at least twice as large as the dryer exhaust opening.

## Gas Dryer Power Hookup – U.S.A. and Canada

### Electrical Requirements

**⚠ WARNING**

**Electrical Shock Hazard**

**Plug into a grounded 3 prong outlet.**

**Do not remove ground prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

120 V, 60 Hz AC only, 15 A or 20 A fused electrical supply is required. A time-delay fuse or circuit breaker is recommended. It is also recommended that a separate circuit serving only this dryer be provided. Do not use an extension cord.

## GROUNDING INSTRUCTIONS

### For a grounded, cord-connected appliance:

This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**WARNING:** Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance: if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

**SAVE THESE INSTRUCTIONS**

## Gas Supply Requirements

### **⚠ WARNING**



#### Explosion Hazard

**Use a new CSA International approved gas supply line.**

**Install a shut-off valve.**

**Securely tighten all gas connections.**

**If connected to LP, have a qualified person make sure gas pressure does not exceed 13" (33 cm) water column.**

**Examples of a qualified person include:**

**licensed heating personnel,  
authorized gas company personnel, and  
authorized service personnel.**

**Failure to do so can result in death, explosion, or fire.**

### Gas Type

#### Natural Gas:

This dryer is equipped for use with natural gas. It is certified by UL for use with LP gas with appropriate conversion.

- Your dryer must have the correct burner for the type of gas in your home. Burner information is located on the rating plate in the door well of your dryer. If this information does not agree with the type of gas available, contact your dealer or reference the contact information listed on your Quick Start Guide.

#### LP Gas Conversion:

**IMPORTANT:** Conversion must be made by a qualified technician.

No attempt shall be made to convert the appliance from the gas specified on the model/serial rating plate for use with a different gas without consulting your gas company.

## Gas Supply Line

### Option 1 (Recommended Method)

Flexible stainless steel gas connector:

- If local codes permit, use a new flexible stainless steel gas connector (Design-Certified by the American Gas Association or CSA International) to connect your dryer to the rigid gas supply line. Use an elbow and a 3/8" flare x 3/8" NPT adapter fitting between the stainless steel gas connector and the dryer gas pipe, as needed, to prevent kinking.

### Option 2 (Alternate Method)

Approved aluminum or copper tubing:

- Must include 1/8" NPT minimum plugged tapping accessible for test gauge connection, immediately upstream of the gas connection to the dryer.
- 1/2" IPS pipe is recommended.
- 3/8" approved aluminum or copper tubing is acceptable for lengths under 20 ft (6.1 m) if local codes and gas supplier permit.
- If you are using natural gas, do not use copper tubing.
- Lengths over 20 ft (6.1 m) should use larger tubing and a different size adapter fitting.
- If your dryer has been converted to use LP gas, 3/8" LP-compatible copper tubing can be used. If the total length of the supply line is more than 20 ft (6.1 m), use larger pipe.

**NOTE:** Pipe-joint compounds that resist the action of LP gas must be used. Do not use PTFE plumber's tape.


- Must include shutoff valve.

#### In the U.S.A.:

An individual manual shutoff valve must be installed within six (6) ft (1.8 m) of the dryer in accordance with the National Fuel Gas Code, ANSI Z223.1. The location should be easy to reach for opening and closing.

#### In Canada:

An individual manual shutoff valve must be installed in accordance with the B149.1, Natural Gas and Propane Installation Code. It is recommended that an individual manual shutoff valve be installed within six (6) ft (1.8 m) of the dryer. The location should be easy to reach for opening and closing.

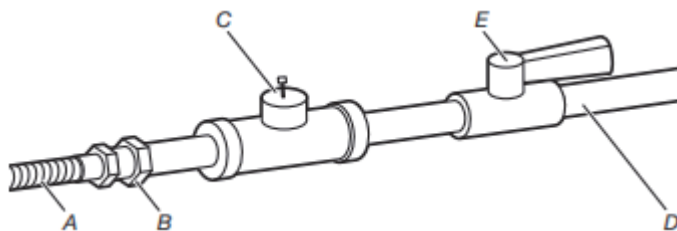

- A. 3/8" flexible gas connector
- B. 3/8" pipe-to-flare adapter fitting
- C. 1/8" NPT minimum plugged tapping
- D. 1/2" NPT gas supply line
- E. Gas shutoff valve

## Gas Supply Connection Requirements

- The gas pipe that comes out through the rear of your dryer has a 3/8" male pipe thread.
- Use an elbow and a 3/8" flare x 3/8" NPT adapter fitting between the flexible gas connector and the dryer gas pipe, as needed to avoid kinking.
- Use only pipe-joint compound. Do not use PTFE plumber's tape.
- This dryer must be connected to the gas supply line with a listed flexible gas connector that complies with the standard for connectors for gas appliances, ANSI Z21.24 or CSA 6.10.

## Burner Input Requirements

### Elevations above 2,000 ft (610 m)

- When installed above 2,000 ft (610 m), a 4% reduction of the burner B.T.U. rating shown on the model/serial number plate is required for each 1,000 ft (305 m) increase in elevation.

### Gas supply pressure testing

- The dryer must be disconnected from the gas supply piping system during pressure testing at pressures greater than 1/2 psi (3.45 kPa).

# INSTALLATION INSTRUCTIONS

## Install Leveling Legs


### **⚠WARNING**

#### Excessive Weight Hazard

Use two or more people to move and install or uninstall appliance.


Failure to do so can result in back or other injury.

### 1. Prepare dryer for leveling legs

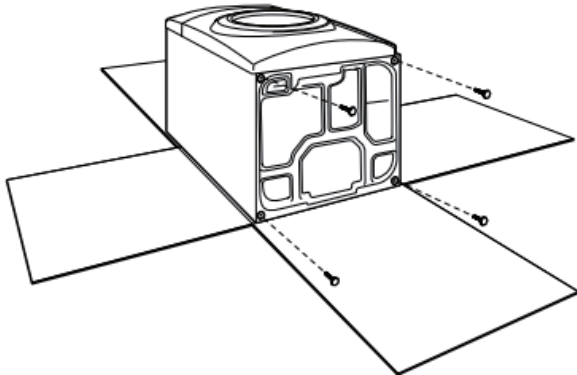


To avoid damaging floor, use a large flat piece of cardboard from dryer carton; place under entire back edge of dryer. Firmly grasp dryer body (not console panel) and gently lay dryer down on cardboard.

### 2. Screw in leveling legs

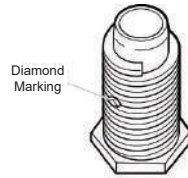

Leveling leg with diamond marking



Leveling leg without diamond marking

Using a wrench and tape measure, screw leveling leg into leg holes until bottom of foot is approximately 1/2" (13 mm) to 1 1/2" (38 mm) from bottom of the dryer.

#### For leveling legs with the diamond marking:


Screw legs into leg holes by hand. Use a wrench to finish turning legs until diamond marking is no longer visible.

Place a carton corner post from dryer packaging under each of the two dryer back corners. Stand the dryer up. Slide the dryer on the corner posts until it is close to its final location. Leave enough room to connect the exhaust vent.

#### For mobile home use:

Gas dryers must be securely fastened to the floor.

Mobile home installations require a Mobile Home Installation Hold-Down Kit (PN 346764A). For ordering information, please reference the Quick Start Guide.

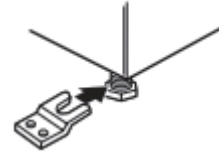

# Make Gas Connection – U.S.A. and Canada

## ⚠ WARNING



### Explosion Hazard

Use a new CSA International approved gas supply line.

Install a shut-off valve.


Securely tighten all gas connections.

If connected to LP, have a qualified person make sure gas pressure does not exceed 13" (33 cm) water column.


Examples of a qualified person include:  
licensed heating personnel,  
authorized gas company personnel, and  
authorized service personnel.

Failure to do so can result in death, explosion, or fire.

Flared  
male fitting

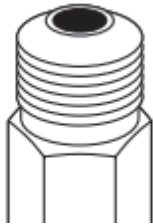


Non-flared  
male fitting

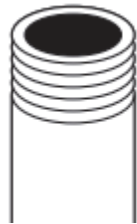

Remove red cap from gas pipe. Using a wrench to tighten, connect gas supply to dryer. Use pipe-joint compound on threads of all non-flared male fittings. If flexible metal tubing is used, be sure there are no kinks.

**NOTE:** For LP gas connections, you must use pipe-joint compound resistant to action of LP gas. Do not use PTFE plumber's tape.

## 2. Plan pipe fitting connection

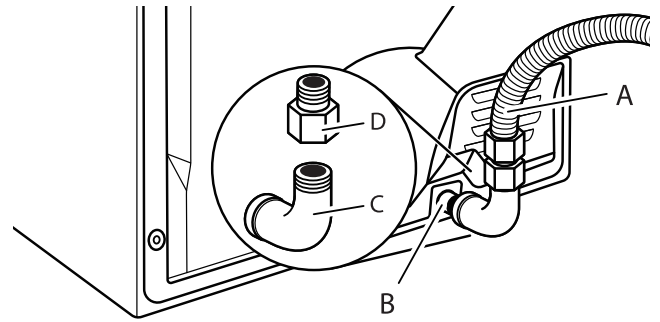

A. 3/8" (9.5 mm) flexible gas connector


B. 3/8" (9.5 mm) dryer pipe

C. 3/8" to 3/8" pipe elbow

D. 3/8" pipe-to-flare adapter fitting

A combination of pipe fittings must be used to connect dryer to existing gas line. Recommended connection is shown. Your connection may be different, according to supply line type, size, and location.

## 3. Open shutoff valve

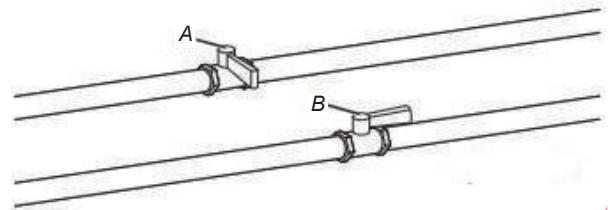

A. Closed valve

B. Open valve

Open shutoff valve in supply line; valve is open when handle is parallel to gas pipe. Then, test all connections by brushing on an approved noncorrosive leak-detection solution. Bubbles will show a leak. Correct any leaks found.

## Venting Requirements

### ⚠ WARNING



#### Fire Hazard

Use a heavy metal vent.


Do not use a plastic vent.

Do not use a metal foil vent.

Failure to follow these instructions can result in death or fire.

**WARNING:** To reduce the risk of fire, this dryer MUST BE EXHAUSTED OUTDOORS.

**IMPORTANT:** Observe all governing codes and ordinances. Dryer exhaust must not be connected into any gas vent, chimney, wall, ceiling, attic, crawlspace, or a concealed space of a building. Only rigid or flexible metal vent shall be used for exhausting.

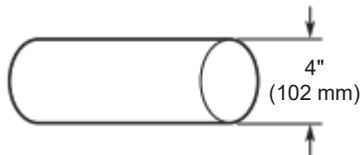

- Only a 4" (102 mm) heavy metal exhaust vent and clamps may be used.
- Do not use plastic or metal foil vent.

#### Rigid metal vent:

- Recommended for best drying performance and to avoid crushing and kinking.

#### Flexible metal vent (acceptable only if accessible to clean):

- Must be fully extended and supported in final dryer location.
- Remove excess to avoid sagging and kinking that may result in reduced airflow and poor performance.
- Do not install in enclosed walls, ceilings, or floors.
- The total length should not exceed 7<sup>3</sup>/<sub>4</sub> ft (2.4 m).
- The length of flexible metal vent used must be included in the overall vent system design as shown in the "Vent System Chart."


#### Home Venting System:

- If using an existing home vent system, clean lint from the entire length of the system before installing the dryer.
- Make sure external exhaust hoods outside of the home is not plugged with lint or other outside debris.
- Replace plastic or metal foil vents with rigid metal or flexible metal vents. Review "Vent System Chart" and, if necessary, modify existing home vent system to achieve best drying performance.

#### Exhaust hoods:

- An exhaust hood should cap the vent to keep rodents and insects from entering the home.
- Must be at least 12" (305 mm) from ground or any object that may obstruct exhaust (such as flowers, rocks, bushes, or snow).
- Do not use an exhaust hood with a magnetic latch.


#### Recommended Styles:

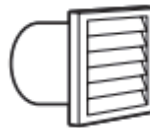

Louvered Hood




Box Hood

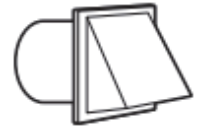

Angled Hood



#### Elbows:

- 45° elbows provide better airflow than 90° elbows.

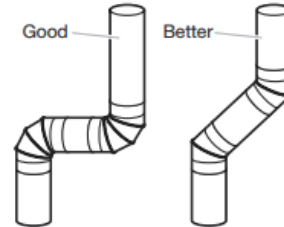

#### Clamps:

- Use clamps to seal all joints.
- Exhaust vent must not be connected or secured with screws or other fastening devices that extend into interior of duct and catch lint. Do not use duct tape.

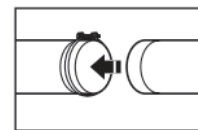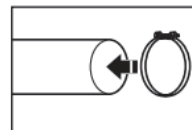


Vent products can be purchased from your dealer. For contact and ordering information, refer to your Quick Start Guide.

## Plan Vent System

### Recommended exhaust installations:


Typical installations vent the dryer from the rear of the dryer. Other installations are possible.

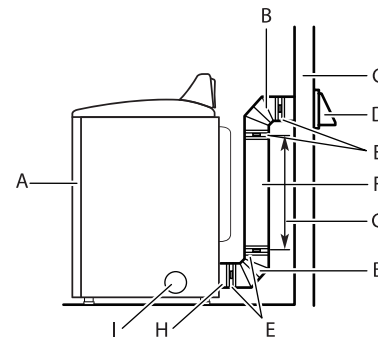

- |                 |  |
|-----------------|--|
| A. Dryer        | F. Rigid metal or flexible metal vent      |
| B. Elbow        | G. Vent length necessary to connect elbows |
| C. Wall         | H. Exhaust outlet                          |
| D. Exhaust hood | I. Optional side exhaust outlet            |
| E. Clamps       |  |

## Optional exhaust installations:

**⚠ WARNING**




**Fire Hazard**

**Cover unused exhaust holes with a manufacturer's exhaust cover kit.**

**Contact your local dealer.**

**Failure to follow these instructions can result in death, fire, electrical shock, or serious injury.**

Some models can be converted to exhaust out the right side, left side, or through the bottom. If you prefer, you may contact your local dealer to have the dryer converted.

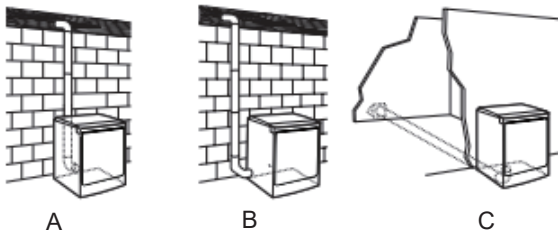


- A. Standard rear offset exhaust installation
- B. Left- or right-side exhaust installation (available only on select 27"-wide models).
- C. Bottom exhaust installation (available only on select 27"-wide models).

## Alternate installations for close clearances

Venting systems come in many varieties. Select the type best for your installation. Two close-clearance installations are shown.

**NOTE:** The following kits for close-clearance alternate installations are available for purchase. Refer to Quick Start Guide for contact information.

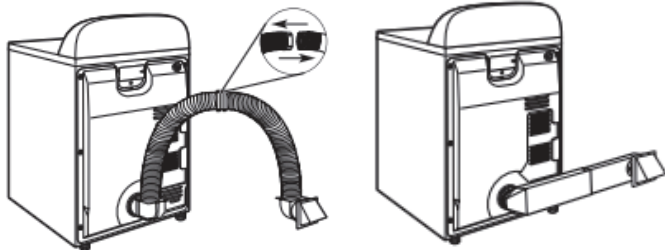


Over-The-Top installation (also available with one offset elbow)

Periscope installation

## Special provisions for mobile home installations:

Exhaust vent must be securely fastened to a noncombustible portion of the mobile home and must not terminate beneath the mobile home. Terminate exhaust vent outside.

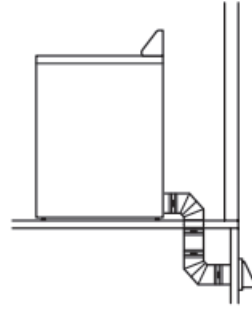

## Determine vent path:

- Select route that will provide straightest and most direct path outdoors.
- Plan installation to use fewest number of elbows and turns.
- When using elbows or making turns, allow as much room as possible.
- Bend vent gradually to avoid kinking.
- Use as few 90° turns as possible.

## Determine vent length and elbows needed for best drying performance:

- Use the following "Vent System Chart" to determine the type of vent material and hood combinations acceptable to use.

**NOTE:** Do not use vent that runs longer than those specified in the "Vent System Chart." Exhaust systems longer than those specified will:

- Shorten life of dryer.
- Reduce performance, resulting in longer drying times and increased energy usage.

The "Vent System Charts" provide venting requirements that will help achieve best drying performance.

| Vent System Chart    |              |                              |
|----------------------|--------------|------------------------------|
| Number of 90° elbows | Type of vent | Box/louvered or Angled hoods |
| 0                    | Rigid metal  | 64 ft (20 m)                 |
| 1                    | Rigid metal  | 54 ft (16.5 m)               |
| 2                    | Rigid metal  | 44 ft (13.4 m)               |
| 3                    | Rigid metal  | 35 ft (10.7 m)               |
| 4                    | Rigid metal  | 27 ft (8.2 m)                |

**NOTE:** Side and bottom exhaust installations have a 90° turn inside the dryer. To determine maximum exhaust length, add one 90° turn to the chart.


| Vent System Chart (Long Vent Models) |              |                              |
|--------------------------------------|--------------|------------------------------|
| Number of 90° elbows                 | Type of vent | Box/louvered or angled hoods |
| 0                                    | Rigid metal  | 160 ft (48.8 m)              |
| 1                                    | Rigid metal  | 150 ft (45.7 m)              |
| 2                                    | Rigid metal  | 140 ft (42.7 m)              |
| 3                                    | Rigid metal  | 130 ft (39.6 m)              |
| 4                                    | Rigid metal  | 120 ft (36.6 m)              |
| 5                                    | Rigid metal  | 110 ft (33.5 m)              |

To determine if your model has a long vent system, refer to the type code located on the serial number plate in the inner door well. Example: A Long Vent Model would be BJAV-NAT-XXXXXXX-XXX or BWFB-NAT-XXXXXXX-XXX.

**NOTE:** For long vent systems, use of box/louvered hoods will improve venting regardless of length.


## Install Vent System

### 1. Install exhaust hood

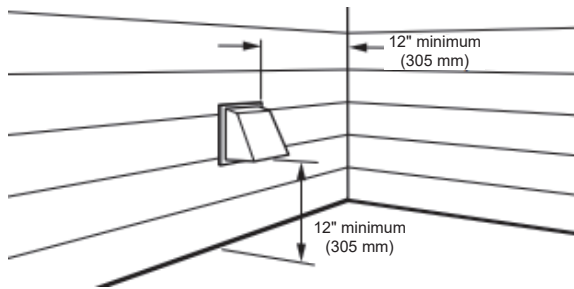

Install exhaust hood and use caulking compound to seal exterior wall opening around exhaust hood.

### 2. Connect vent to exhaust hood

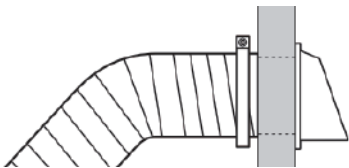

Vent must fit over the exhaust hood. Secure vent to exhaust hood with 4" (102 mm) clamp. Run vent to dryer location using straightest path possible. Avoid 90° turns. Use clamps to seal all joints. Do not use duct tape, screws, or other fastening devices that extend into interior of vent to secure vent, because they can catch lint.


## Connect Inlet Hoses

For vented, non-steam models, skip to "Connect Vent." The dryer must be connected to the cold water faucet using the new inlet hoses. Do not use old hoses.

**NOTE:** Replace inlet hoses after 5 years of use to reduce the risk of hose failure. Record hose installation or replacement dates on the hoses for future reference.


Periodically inspect and replace hoses if bulges, kinks, cuts, wear, or leaks are found.

### 1. Turn cold water off, remove and replace rubber washer

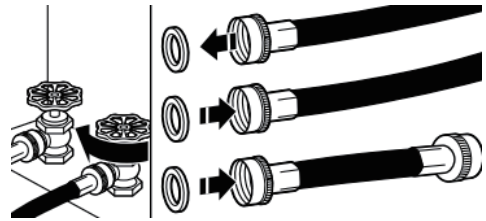


Turn cold water faucet off and remove washer inlet hose. Remove old rubber washer from inlet hose and replace with new rubber washer.

### 2. Attach short hose and "Y" connector

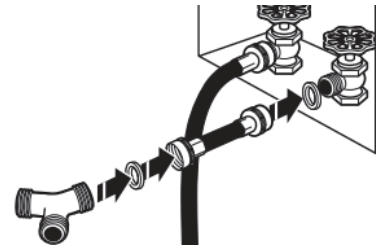

Attach 2 ft (0.6 m) inlet hose to cold water faucet. Screw on coupling by hand until it is seated on faucet. Then attach "Y" connector to male end of the 2 ft (0.6 m) inlet hose. Screw on coupling by hand until it is seated on connector.


### 3. Tighten couplings

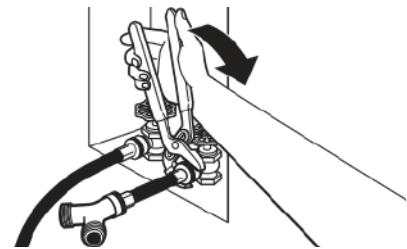

Using pliers, tighten the couplings with additional two-thirds turn.

**NOTE:** Do not overtighten. Damage to the coupling can result.


### 4. Attach long hose to "Y" connector and tighten couplings

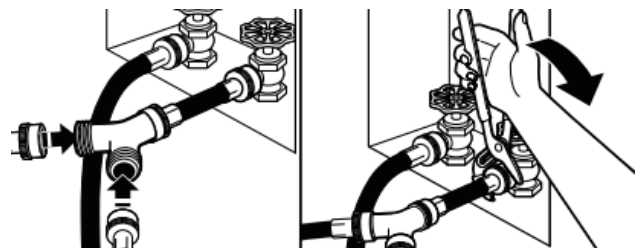

Attach one of the 5 ft (1.5 m) inlet hose ends to the "Y" connector. Attach washer cold inlet hose to other side of "Y" connector. Screw on coupling by hand until it is seated on connector. Using pliers, tighten the couplings an additional two-thirds turn.

**NOTE:** Do not overtighten. Damage to the coupling can result.

**5. Attach long hose to dryer fill valve and tighten coupling**

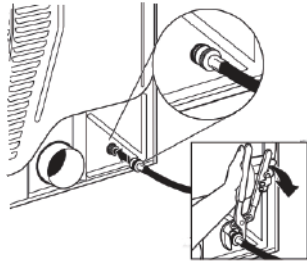


If applicable, remove protective cap from water inlet valve. Attach other end of long hose to fill valve on dryer back panel. Screw on coupling by hand until it is seated on fill valve connector. Using pliers, tighten the couplings an additional two-thirds turn.

**NOTE:** Do not overtighten. Damage to the coupling can result.


**NOTE:** The Steam Dryer water connection may be in a different location.

**6. Turn on cold water faucet**

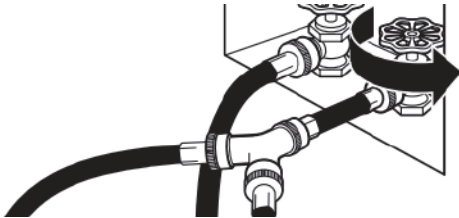

Check that the water faucet is turned on.


**7. Check for leaks**

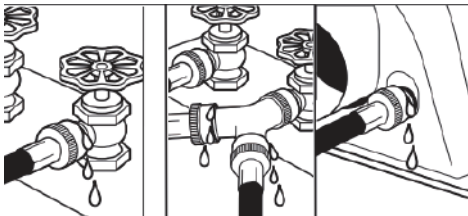

Check for leaks around "Y" connector, faucets, and hoses.


**Connect Vent**

**1. Connect vent to exhaust outlet**

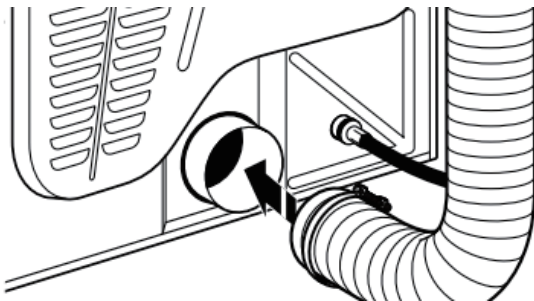

Using a 4" (102 mm) clamp, connect the vent to exhaust outlet in the dryer. If connecting to existing vent, make sure vent is clean. Dryer vent must fit over dryer exhaust outlet and inside exhaust hood. Check that vent is secured to exhaust hood with a 4" (102 mm) clamp.


**2. Move dryer to final location**

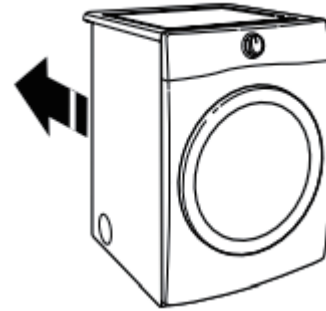

Move dryer to final location. Avoid crushing or kinking vent. After dryer is in place, remove corner posts and cardboard from under dryer.


**Level Dryer**

**1. Level Dryer**

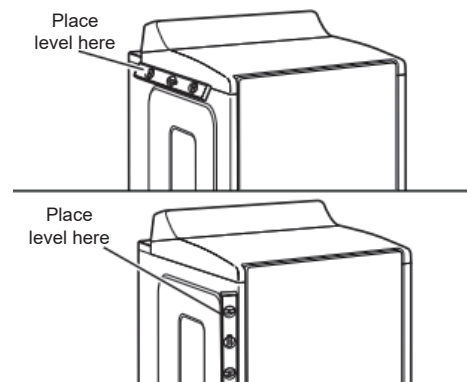


Check levelness of dryer from side to side. Repeat from front to back.

**NOTE:** The dryer must be level for the moisture-sensing system to operate correctly.

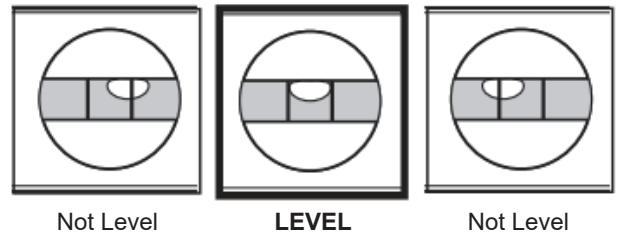


**2. Tighten and adjust leveling legs**

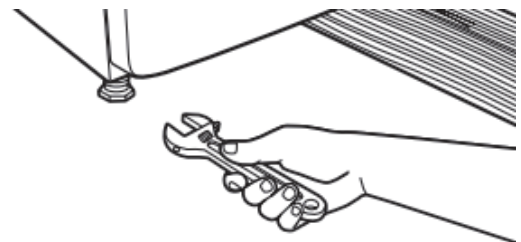

If dryer is not level, prop up using a wood block. Use wrench to adjust legs up or down, and check again for levelness.

Once dryer is level, make sure all four legs are snug against the floor and the dryer does not rock.

### 3. Install and remove base trim (on some models)

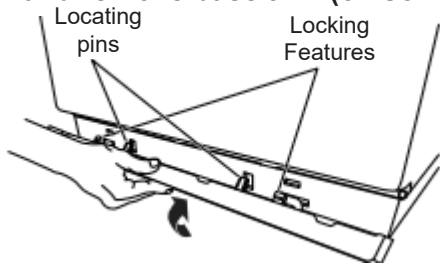


To Install: Place the skirt to bottom of dryer and match the locating pins with the holes. Press the skirt firmly upwards until it snaps into place.

To Remove: On each corner, push down on top of base trim. Rotate away from dryer and remove.

## Complete Installation Checklist

- Check that all parts are now installed. If there is an extra part, go back through steps to see what was skipped.
- Check that you have all of your tools.
- Dispose of/recycle all packaging materials.
- Check dryer's final location. Be sure vent is not crushed or kinked.
- Check that dryer is level. See "Level Dryer."
- Remove film on console and any tape remaining on dryer.
- Wipe dryer drum interior thoroughly with a damp cloth to remove any dust.
- Refer to the user instructions in your Quick Start Guide.

**⚠ WARNING**



**Electrical Shock Hazard**

**Plug into a grounded 3 prong outlet.**

**Do not remove ground prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

- Plug into a grounded 3 prong outlet.
- Check that gas supply is on.
- Check for leaks.
- Check that the flexible gas line is not crushed or kinked.

#### Steam Models Only:

- Be sure the water faucets are on.
- Check for leaks around "Y" connector, faucet, and hoses.
- If you live in a hard water area, use of a water softener is recommended to control the buildup of scale through the water system in the dryer. Over time, the buildup of lime scale may clog different parts of the water system, which will reduce product performance. Excessive scale buildup may lead to the need for certain part replacement or repair.

#### All Models:

- Set the heat cycle for 20 minutes and start dryer. Do not select Air Only temperature setting.

#### If dryer will not start, check the following:

- Controls are set in a running or "ON" position.
- Start button has been pressed firmly.
- Dryer is plugged into an outlet and/or electrical supply is connected.
- Household fuse is intact and tight, or circuit breaker has not tripped.
- Dryer door is closed.
- When the dryer has been running for 5 minutes, open the dryer door and feel for heat. If you feel heat, cancel cycle and close the door.

If you do not feel heat, turn the dryer off and check to see whether gas supply shutoff valve is open.


- If the gas supply shutoff valve is closed, open it and then repeat the 5-minute test as outlined above.
- If the gas supply line shutoff valve is open, contact a qualified technician.
- To change the door swing from a right-side opening to a left-side opening, see online "Dryer Door Reversal Instructions" for details.

If your Airflow screen reads "Check Vent," your dryer vent may be crushed or blocked.

**NOTE:** You may notice an odor when dryer is first heated. This odor is common when heating element is first used. The odor will go away.

# Dryer Cycle Guide


**⚠ WARNING**



**Fire Hazard**

No washer can completely remove oil.  
**Do not dry anything that has ever had any type of oil on it (including cooking oils).**  
**Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.**  
**Failure to follow these instructions can result in death or fire.**

**⚠ WARNING**



**Explosion Hazard**

**Keep flammable materials and vapors, such as gasoline, away from dryer.**  
**Do not dry anything that has ever had anything flammable on it (even after washing).**  
**Failure to follow these instructions can result in death, explosion, or fire.**

**WARNING:** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

## Sensor Cycles

**Use Sensor Cycles for better fabric care and energy savings.** The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level.

If settings are changed, the new settings will be remembered. If there is a power failure, settings will return to the default. Not all features and cycles are available on all models. Not all settings and options are available on each cycle.

**NOTE:** Temperatures shown in **bold** are the default settings for that cycle. Note that you cannot adjust the time with these cycles.

| Items to Dry:  | Cycle:          | Temperature:                              | Available Options:                                    | Description:  |
|--|-----------------|---|---|---|
| Heavyweight items such as jeans, towels or heavy work clothes.   | HEAVY DUTY      | High<br><b>Medium</b><br>Low<br>Extra Low | Wrinkle Shield™<br>Mute Cycle Signal<br>Static Reduce | Uses Medium heat as default and longer cycle time to dry large loads of heavy weight, hard to dry items.  |
| Work clothes, casual wear, mixed cottons, sheets, corduroys.     | NORMAL          | High<br><b>Medium</b><br>Low<br>Extra Low | Wrinkle Shield™<br>Mute Cycle Signal<br>Static Reduce | Uses Medium heat as default to dry large loads of mixed fabrics and items.  |
| Shirts, blouses, permanent press, synthetics, lightweight items. | WRINKLE CONTROL | High<br>Medium<br><b>Low</b><br>Extra Low | Wrinkle Shield™<br>Mute Cycle Signal<br>Static Reduce | Uses a Low heat as default for improved moisture removal and enhanced fabric care.  |
| Undergarments, blouses, lingerie, performance wear.              | DELICATES       | High<br>Medium<br>Low<br><b>Extra Low</b> | Wrinkle Shield™<br>Mute Cycle Signal                  | Uses Extra Low heat as default to gently dry delicate objects.  |
| Work clothes, casual wear, mixed cottons, sheets, corduroys.     | NORMAL MORE DRY | High<br><b>Medium</b><br>Low<br>Extra Low | Wrinkle Shield™<br>Mute Cycle Signal<br>Static Reduce | Uses Medium heat as default to dry large loads of Mixed Fabrics and items, with slightly higher temperatures than Normal Cycle and tuned to achieve "More Dry" results. |

| Items to Dry:  | Cycle:      | Temperature:                              | Available Options:                                    | Description:   |
|--|-------------|---|---|--|
| Jackets, comforters, pillows.                                | BULKY ITEMS | High<br><b>Medium</b><br>Low<br>Extra Low | Wrinkle Shield™<br>Mute Cycle Signal                  | Use for drying large, bulky items; do not overfill dryer drum. Partway through the cycle, the signal will sound to indicate when it is time to rearrange items for optimal drying. |
| Work clothes, casual wear, mixed cottons, sheets, corduroys. | LESS DRY    | High<br><b>Medium</b><br>Low<br>Extra Low | Wrinkle Shield™<br>Mute Cycle Signal<br>Static Reduce | Uses Medium heat as default to dry loads of Mixed Fabrics and items, with slightly lower temperatures than Normal Cycle and tuned to achieve "Less Dry" results.                   |
| Large loads of jeans, towels and heavyweight items.          | TOWELS      | <b>High</b><br>Medium<br>Low<br>Extra Low | Wrinkle Shield™<br>Mute Cycle Signal<br>Static Reduce | This is a long cycle with High heat as default. This cycle is not recommended for all fabrics. Use for large loads of heavyweight fabrics.   |

On steam models, you may select the "Static Reduce" setting. The dryer will automatically tumble, pause, and introduce a small amount of moisture into the load to help reduce static. This option adds approximately 3 minutes to the total cycle time.

### Steam Refresh Cycle (on some models)

**Steam cycles** are designed for use with dry loads to loosen wrinkles, reduce odors, and refresh fabrics.

Not all cycles and settings are available on all models. Settings and options shown in **bold** are default settings for that cycle.

| Items to Refresh:          | Cycle:        | Temperature:          | Available Options:                   | Description:  |
|----------------------------|---------------|-----------------------|--------------------------------------|---|
| Shirts, blouses and slacks | STEAM REFRESH | High<br><b>Medium</b> | Wrinkle Shield™<br>Mute Cycle Signal | Use to smooth out wrinkles and reduce odors from loads left in the dryer too long. Do not add dryer sheets. |

### Timed Cycles

In these cycles, you can specify the drying time. Time options available are 15, 30, 60 and 90 minutes. If settings are changed, the new settings will be remembered (except on Quick Dry). If there is a power failure, settings will return to the default. Not all features and cycles are available on all models. Not all settings and options are available on each cycle.

| Items to Dry:                                    | Cycle:    | Temperature:                              | Available Options:                   | Description:  |
|--|-----------|---|--------------------------------------|---|
| Any Load.  | TIMED DRY | High<br><b>Medium</b><br>Low<br>Extra Low | Wrinkle Shield™<br>Mute Cycle Signal | Use to dry items to a damp level for items that do not require an entire drying cycle. Select a drying temperature based on the type of fabrics in your load. If you are unsure of the temperature to select for a load, select the lower setting rather than the higher setting. |
| Small loads and sportswear.                      | QUICK DRY | High<br><b>Medium</b><br>Low<br>Extra Low | Wrinkle Shield™<br>Mute Cycle Signal | For small loads of 3-4 items.   |
| Foam, rubber, plastic or heat sensitive fabrics. | AIR ONLY  | <b>N/A</b>                                | Wrinkle Shield™<br>Mute Cycle Signal | Uses unheated air to dry heat-sensitive items   |